

Heating, Ventilation and Air Conditioning (HVAC) Control Module

Removal

NOTE: The HVAC module is available only as part of the FCIM.

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).

Installation

1. To install, reverse the removal procedure.
-