

In-Vehicle Temperature and Humidity Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Push button start vehicle shown, all others similar.


Lower the steering column opening trim panel.




2. Remove the 2 bolts, release the clips and remove IPC trim panel.
 - Detach the gap hider from the upper steering column shroud.
Torque: 22 lb.in (2.5 Nm)

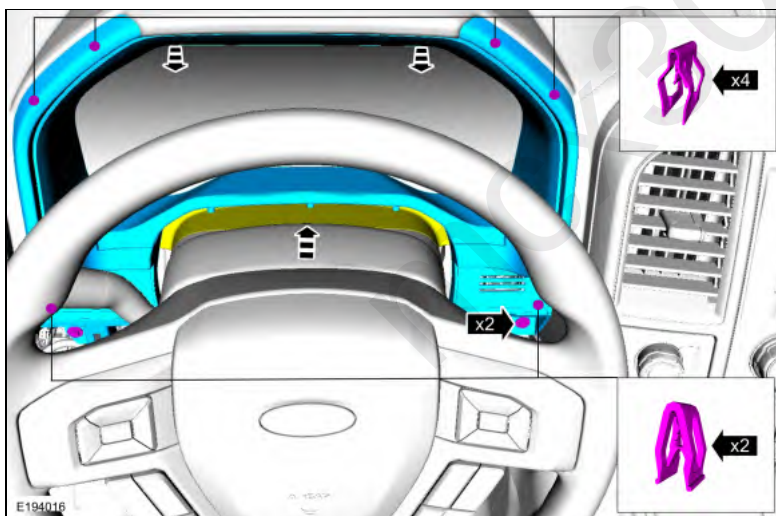

3. Remove the IPC.
Torque: 7 lb.in (.8 Nm)

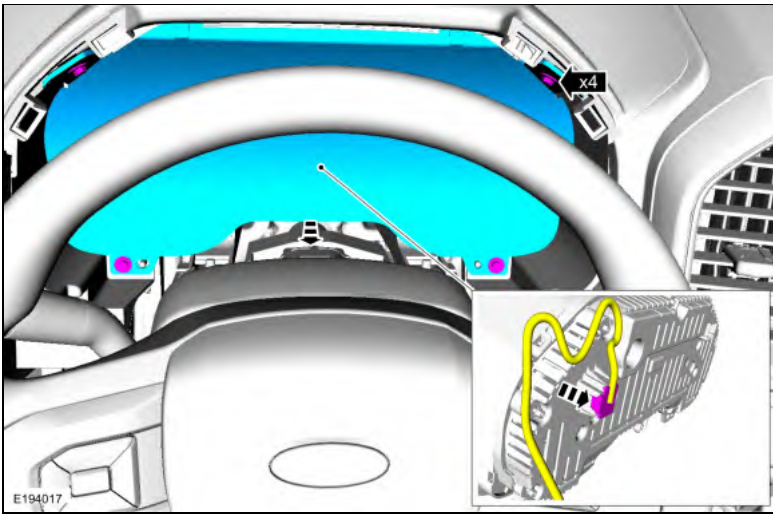

4. Remove the in-vehicle temperature and humidity sensor and disconnect the electrical connector.

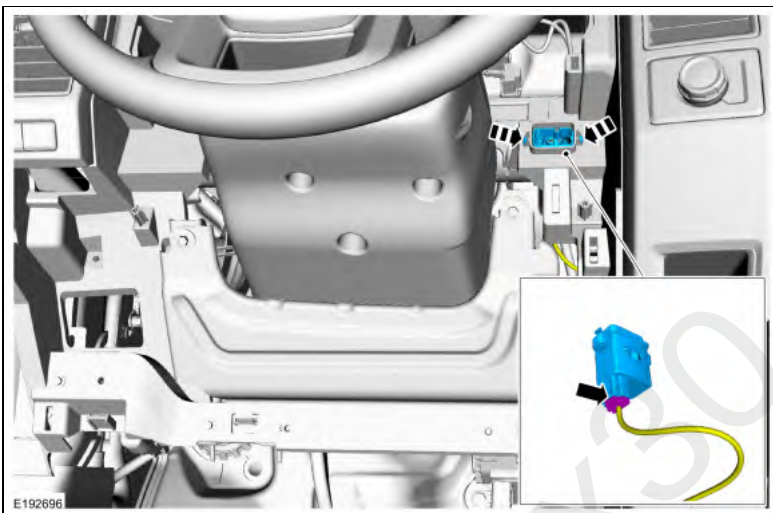

Installation

1. To install, reverse the removal procedure.