


Passenger Side Footwell Air Discharge Temperature Sensor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the climate control housing.
Refer to: Climate Control Housing (412-00 Climate Control System - General Information, Removal and Installation).
2. Disconnect the electrical connector and remove the passenger side footwell air discharge temperature sensor.

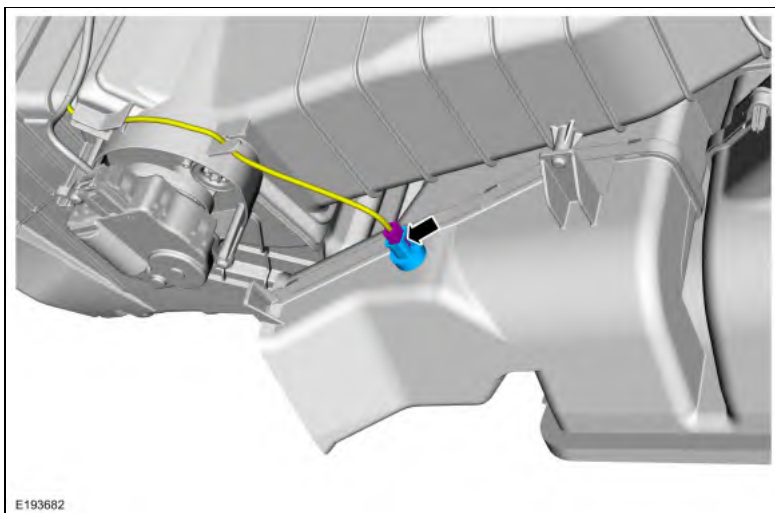

Installation

1. To install, reverse the removal procedure.