

Passenger Side Register Air Discharge Temperature Sensor


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


NOTE: Removal steps in this procedure may contain installation details.

- 1. If equipped, release the clips and remove the instrument panel speaker grille.
Use the General Equipment: Interior Trim Remover


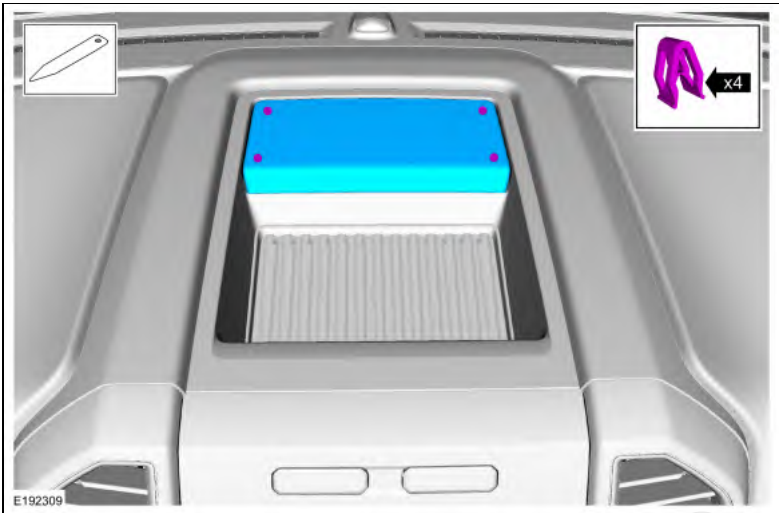


- 2. NOTE: Vehicle with speaker shown, without speaker similar.

Remove the bolts, release the clips and remove the instrument panel center upper trim panel. Disconnect the electrical connector.
Use the General Equipment: Interior Trim Remover
Torque: 18 lb.in (2 Nm)

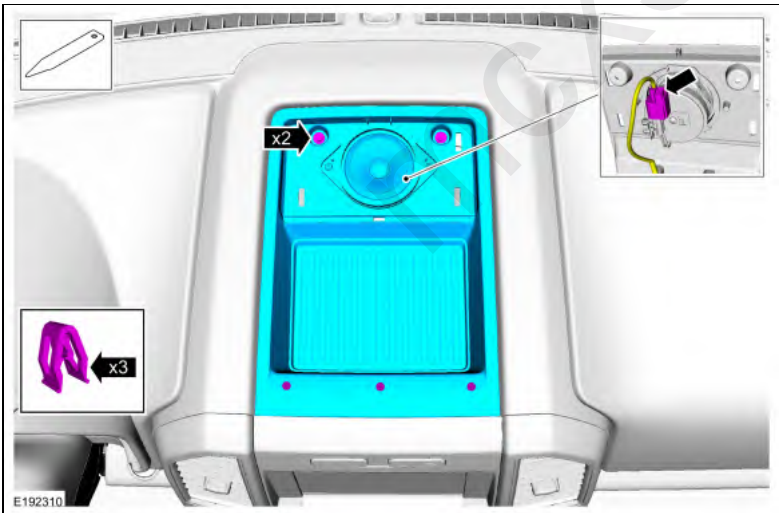

 - 3. Disconnect the electrical connector and remove the passenger side register air discharge temperature sensor.

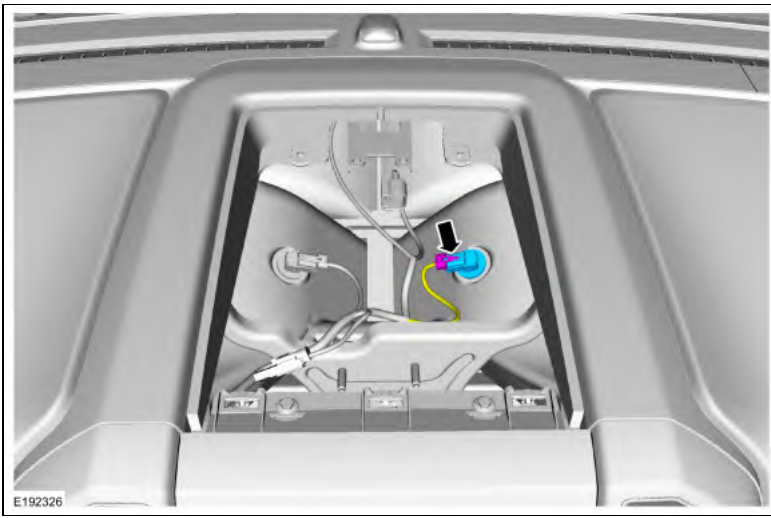

Installation

- 1. To install, reverse the removal procedure.