


Passenger Side Temperature Door Actuator

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the instrument panel.
Refer to: Instrument Panel (501-12 Instrument Panel and Console, Removal and Installation).
2. Disconnect the electrical connector, remove the retainers and the passenger side temperature door actuator.

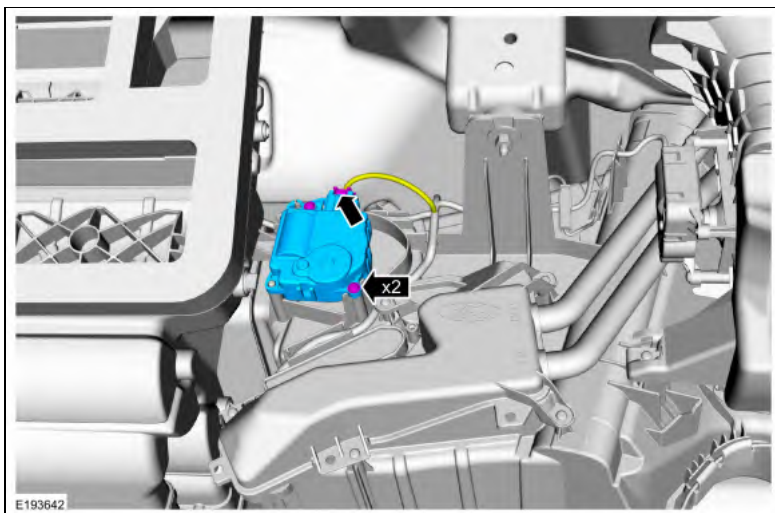

Installation

1. To install, reverse the removal procedure.