

Sunload Sensor


Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the sunload sensor and disconnect the electrical connector.
Use the General Equipment: Interior Trim Remover

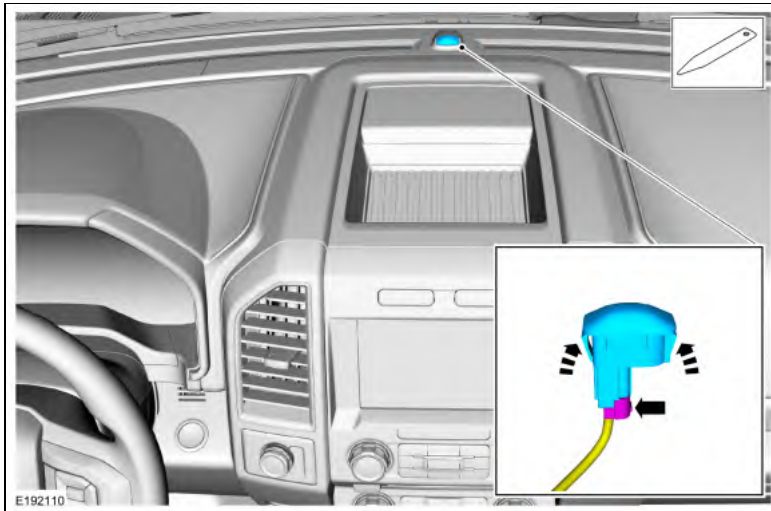

Installation

1. To install, reverse the removal procedure.