


Temperature Door Actuator

Removal


NOTE: Note the position of the components before removal.

1.
 1. Disconnect the electrical connector.
 2. Remove the retainers, the temperature door actuator and the cam.

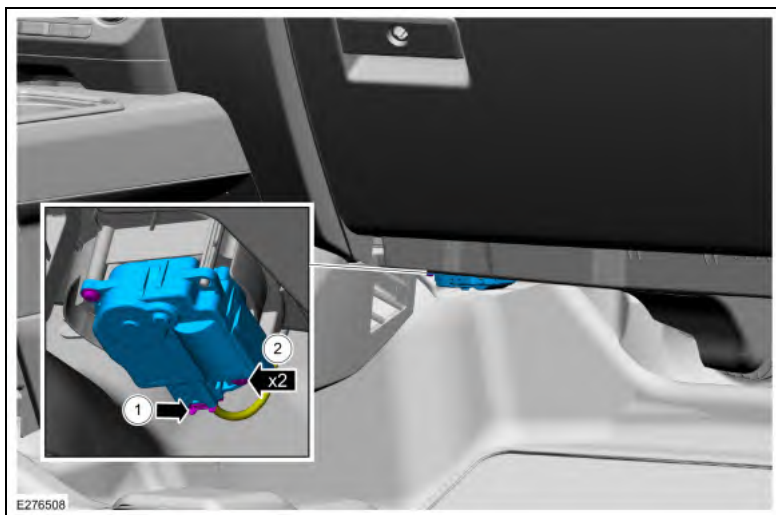

2. **NOTE:** This step is only necessary when installing a new component.

Remove the cam from the temperature door actuator.

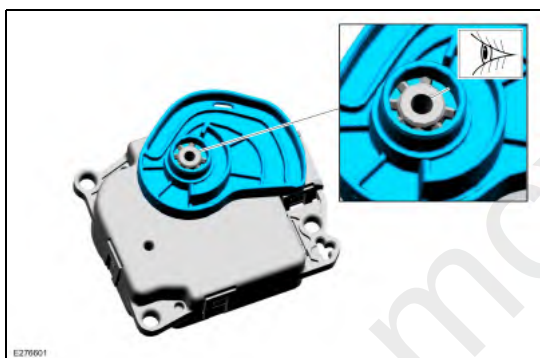


Installation

NOTE: Make sure that the components are installed to the position noted before removal.

1. **NOTE:** This step is only necessary when installing a new component.

Install and align the cam on the new temperature door actuator.

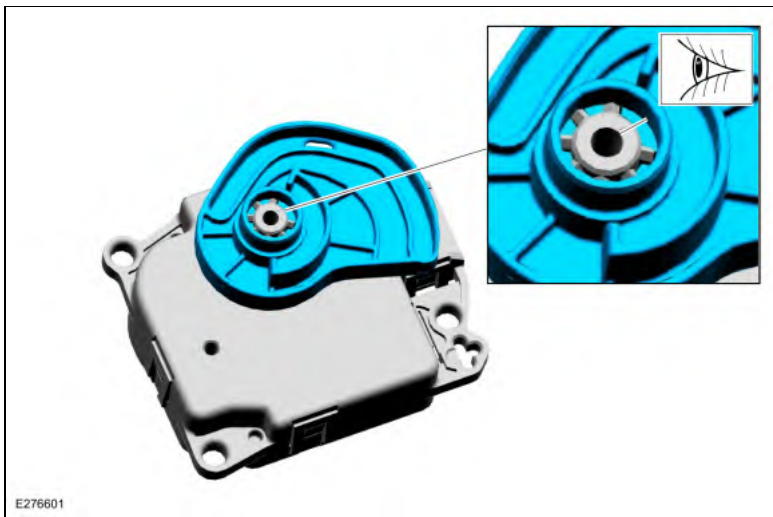

2.

1. Align the temperature door actuator and cam to the temperature door.
2. Install the temperature door actuator and cam on the climate control housing with the retainers.
3. Connect the electrical connector to the temperature door actuator.

