


Horn


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Disconnect the electrical connector.

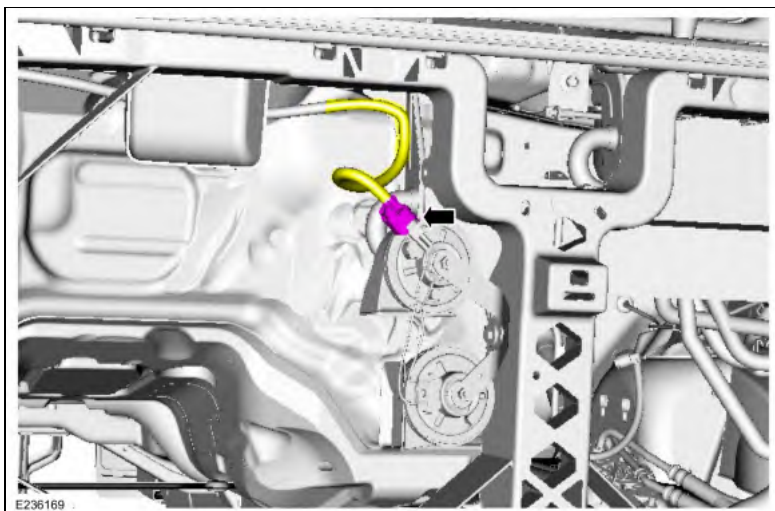

3. Remove the bolt and the horn.
Torque: 106 lb.in (12 Nm)

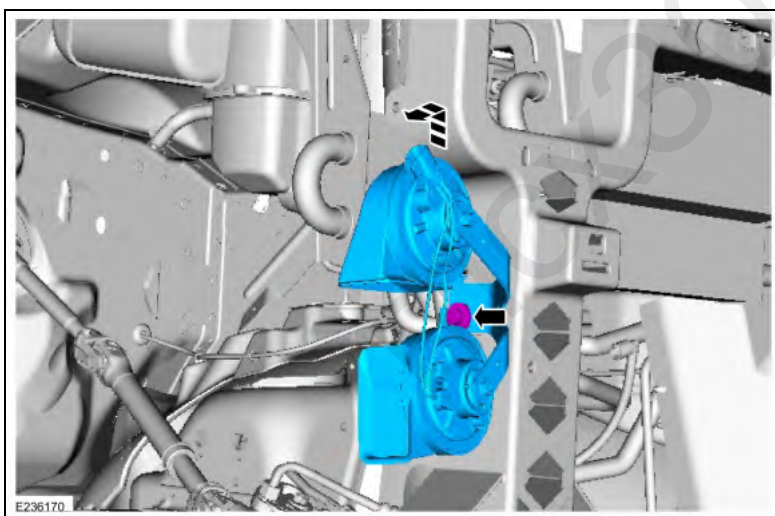

Installation

1. To install, reverse the removal procedure.

