



Front Parking Aid Camera

Removal

1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the screws and the front camera bracket.

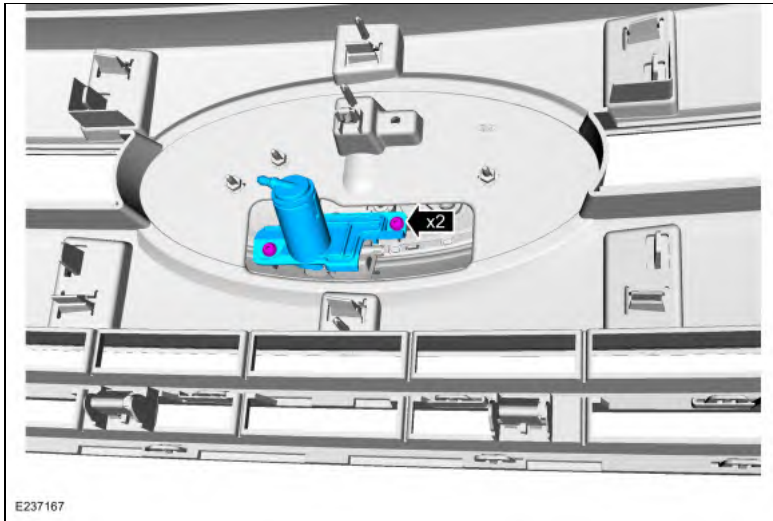

3. Remove the front parking aid camera.

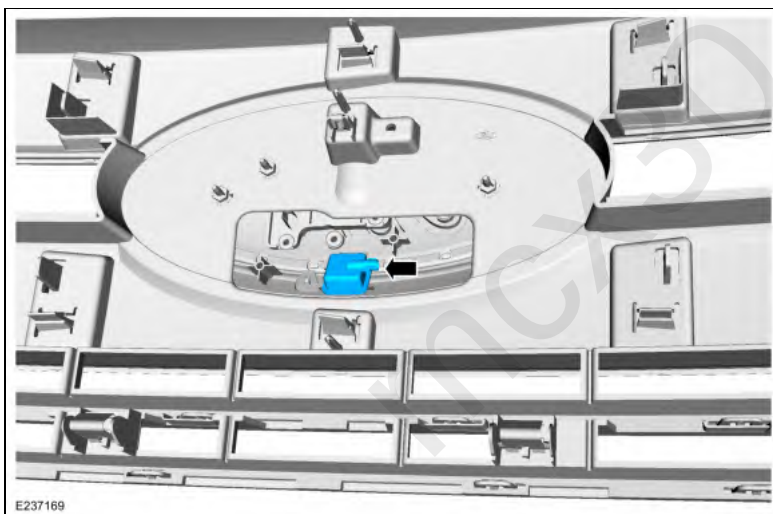

Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles equipped with front and rear only parking aid camera

2. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-BCM configure the BCM.

Vehicles equipped with 360° cameras only

3. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
4. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

Vehicles equipped with 360° camera and Trailer Reverse Guidance

5. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
6. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

mcx30.com