


Rear Parking Aid Camera

Removal


Rear view cameras located in tailgate release handle

NOTE: Coaxial camera network camera shown, non-coaxial camera is similar.


1. Remove the tailgate release handle.
Refer to: Tailgate Release Handle (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. Disconnect the camera connector.

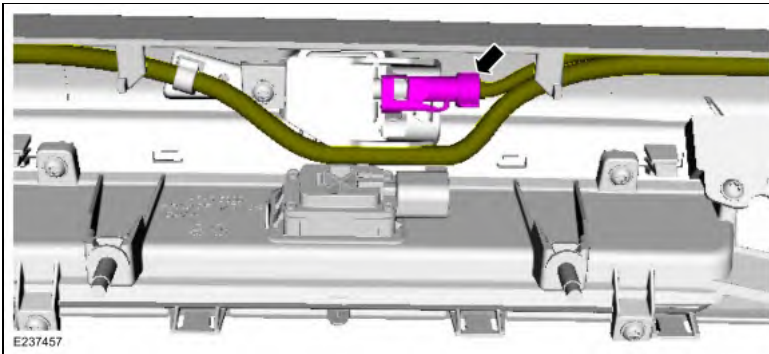

3. Remove the screw and the camera bracket.

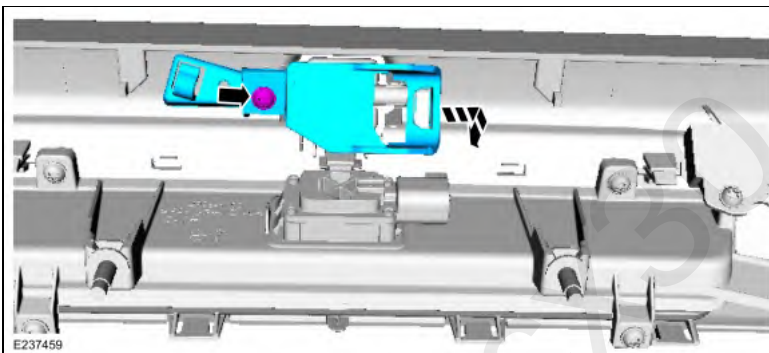


4. Remove the rear view camera.

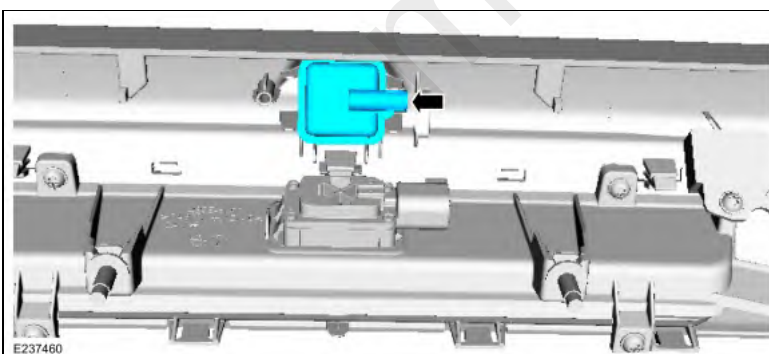


Center high mounted stop lamp (CHMSL) mounted camera

5. Remove the center high mounted stop lamp (CHMSL).
Refer to: High Mounted Stoplamp (417-01 Exterior Lighting, Removal and Installation).
6. Disconnect the CHMSL mounted camera electrical connector.

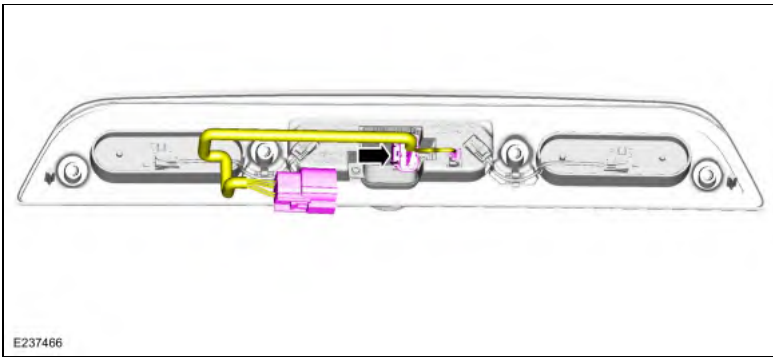

7. Remove the screws, the camera bracket and the CHMSL mounted camera.

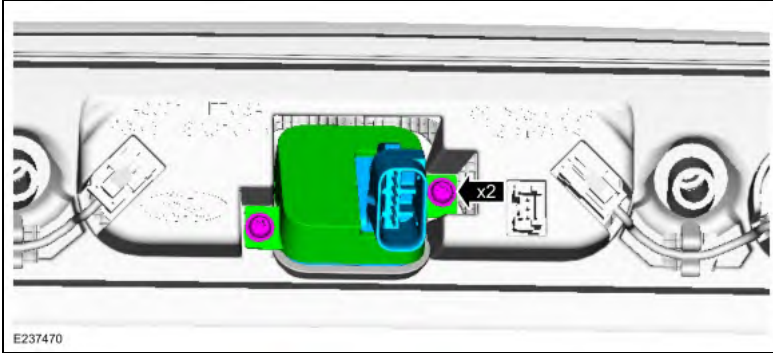

Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles equipped with a high mounted stoplamp mounted camera

2. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-BCM configure the BCM.

Vehicles equipped with rear only parking aid camera

3. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-BCM configure the BCM.

Vehicles equipped with 360° cameras only

4. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
5. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

Vehicles equipped with 360° camera and Trailer Reverse Guidance

6. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
7. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).