



Side Parking Aid Camera

Removal


1. Remove the exterior mirror.
Refer to: Exterior Mirror (501-09 Rear View Mirrors, Removal and Installation).
2. Remove the exterior mirror weather shield.

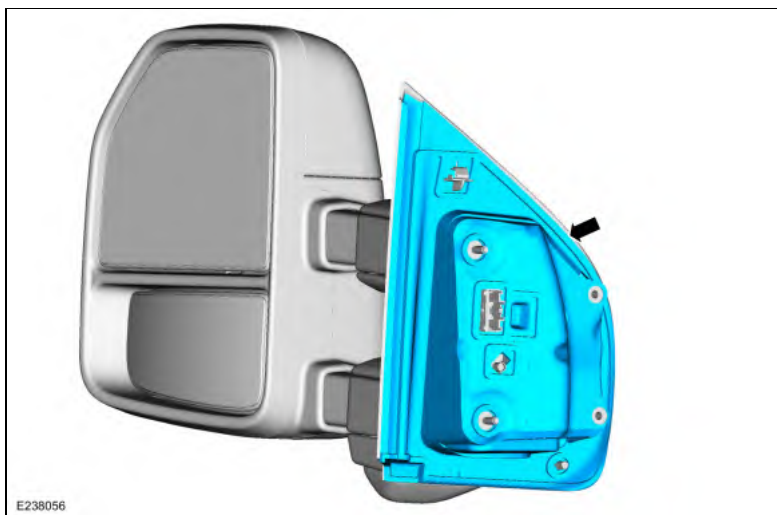


3.
 1. Using a suitable tool, release the locking tabs.
 2. Position the inside edge of the cover.
 3. Remove the side parking aid camera cover.

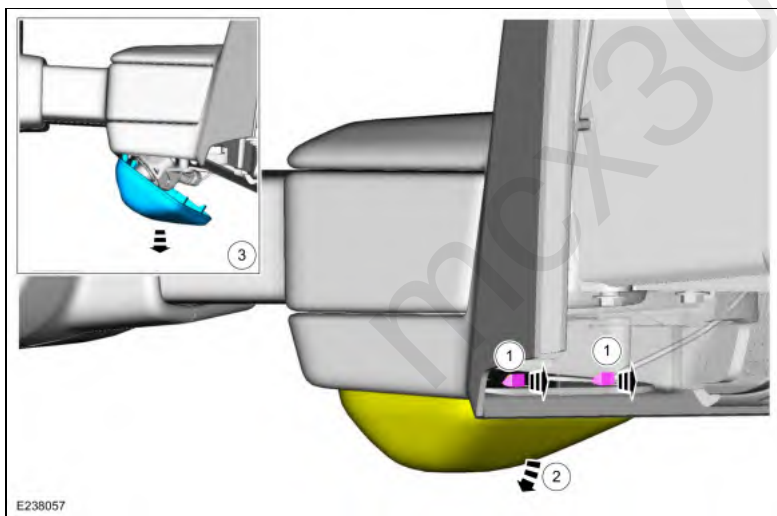


4. Remove the side parking aid camera assembly.
 1. Remove the screws.
 2. Disconnect the connector.

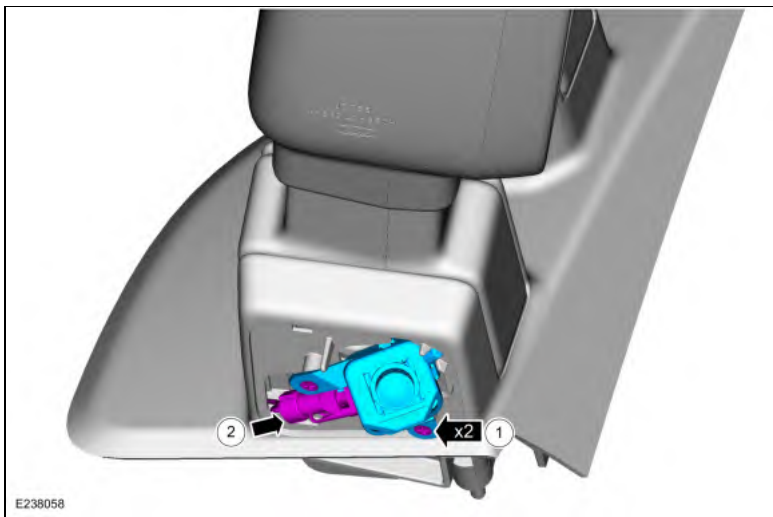

5. Release the locking tabs and remove the upper camera bracket.

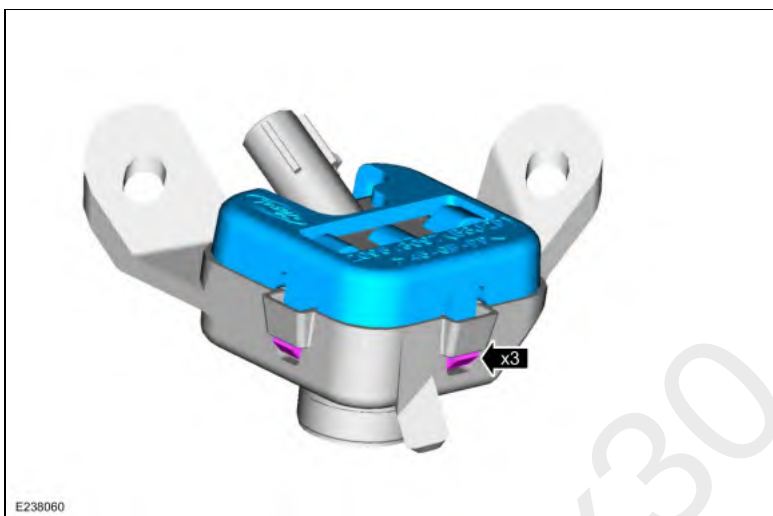

6. Remove the side parking aid camera.

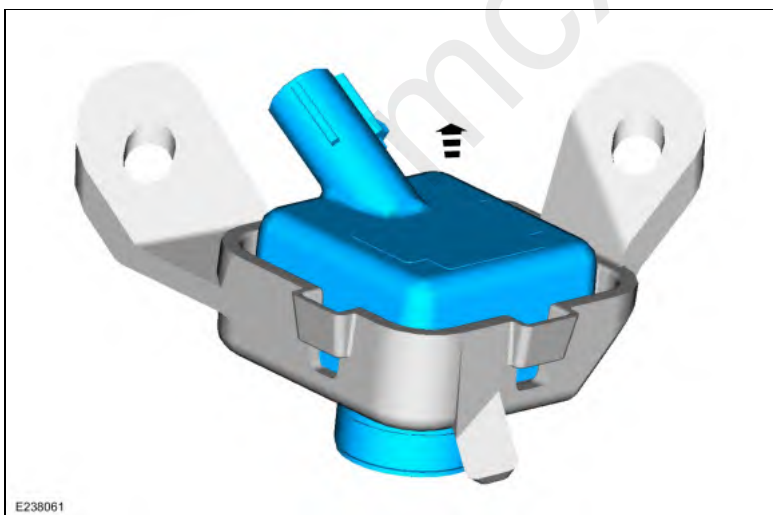

Installation

All vehicles

1. To install, reverse the removal procedure.

Vehicles equipped with 360° cameras only.

2. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
3. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).

Vehicles equipped with 360° camera and Trailer Reverse Guidance

4. Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization-IPMB configure the IPMB.
 5. Align the 360° cameras.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
-

mcx30.com