


Battery

Removal


NOTE: Removal steps in this procedure may contain installation details.

Battery - Primary

1. Disconnect the battery/batteries.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. If necessary, disconnect the battery current sensor electrical connector. Detach the wire harness retainer from the battery tray. Remove the nuts, position the battery cable aside and remove the battery hold-down bracket.
Torque: 36 lb.in (4.1 Nm)

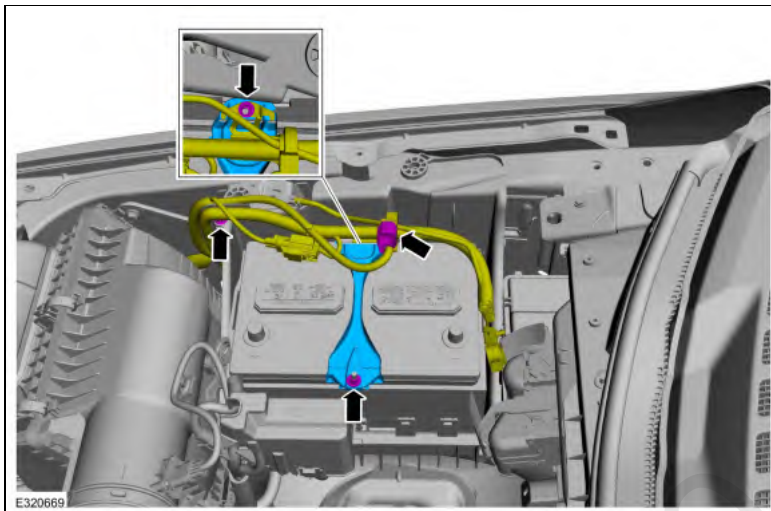

3. Remove the battery.

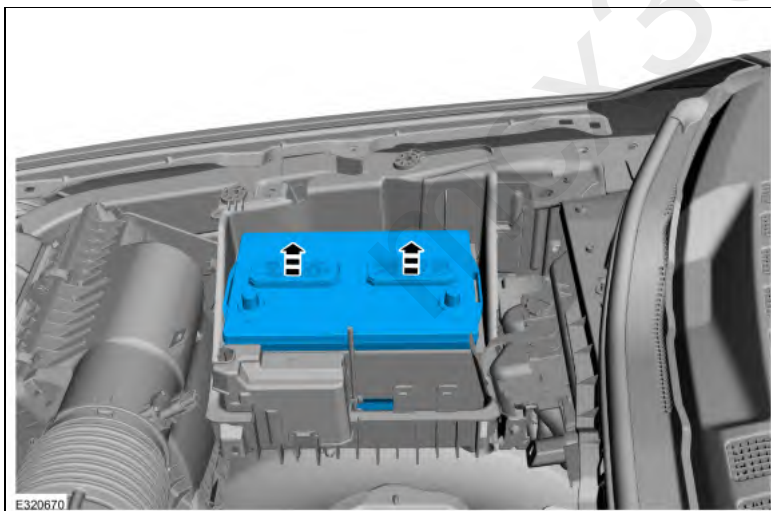

4. If replacing the battery, remove the battery insulator.




Battery - Secondary


NOTE: Removal steps in this procedure may contain installation details.

NOTE: 6.7L diesel vehicle shown, other vehicles similar.



5. Disconnect the batteries.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
6. Remove the nuts, position the battery cable and remove the battery hold-down bracket.
Torque: 36 lb.in (4.1 Nm)

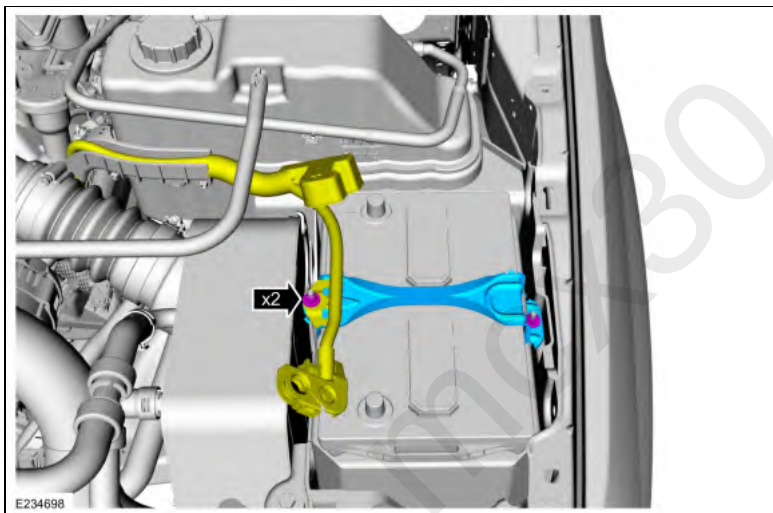

7. Remove the battery.

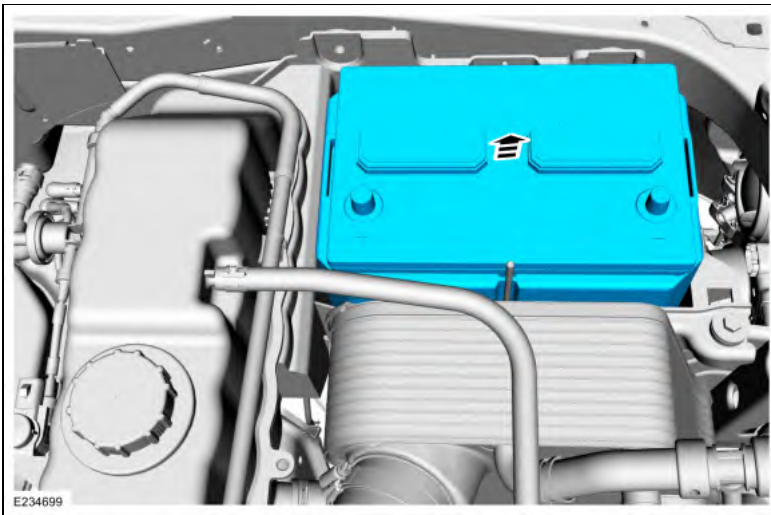

 8. If replacing the battery, remove the battery insulator.

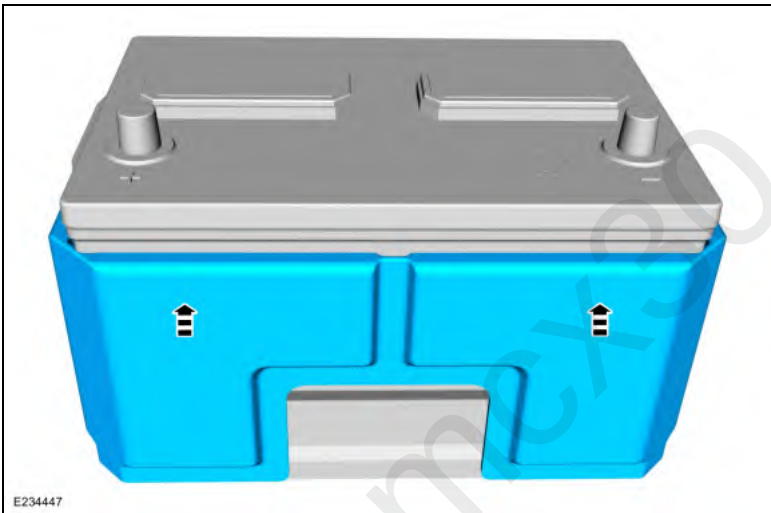

Installation

- 1. To install, reverse the removal procedure.