

Generator - 6.2L V8


Removal

NOTE: Vehicle without secondary battery shown, vehicle with secondary battery similar.


1. Disconnect the battery/batteries.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. Remove the air cleaner outlet pipe.
Refer to: Air Cleaner Outlet Pipe (303-12A Intake Air Distribution and Filtering - 6.2L V8, Removal and Installation).
3. Position the accessory drive belt aside from the generator.
Refer to: Accessory Drive Belt (303-05A Accessory Drive - 6.2L V8, Removal and Installation).
4. **NOTICE: When installing the B+ terminal nut to the generator, finger-start the nut before tightening or component damage may occur.**

Disconnect the generator electrical connector. Position the B+ wire protective cover, remove the nut and position the B+ wire.


Torque: 150 lb.in (17 Nm)

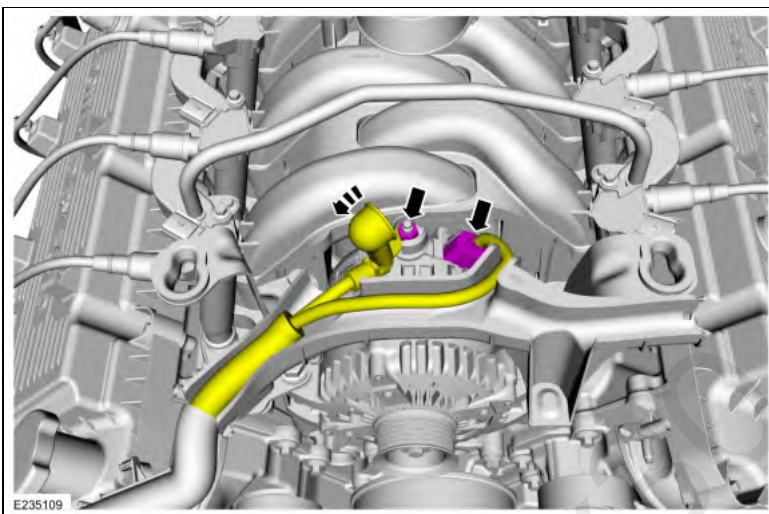

5. Remove the battery cable pushpin retainer. Detach the pushpin retainer from the air cleaner outlet pipe mounting bracket and position the battery cable.

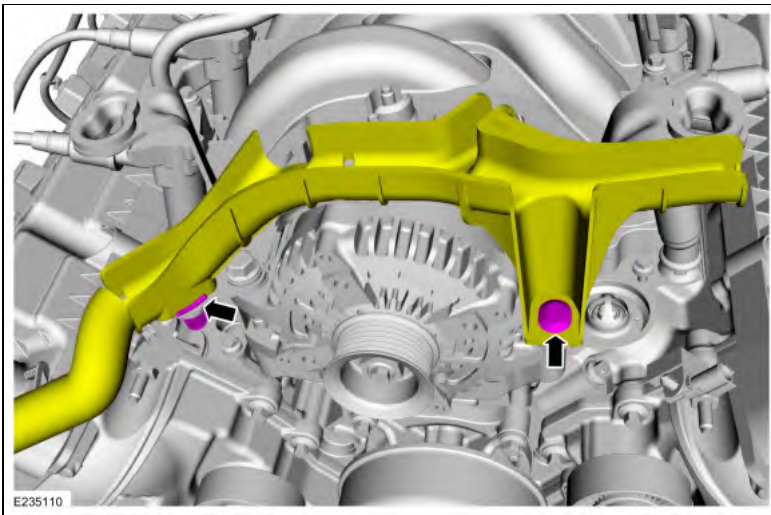

6. Remove the bolts, air cleaner outlet pipe mounting bracket and the generator.
Torque: 35 lb.ft (47 Nm)

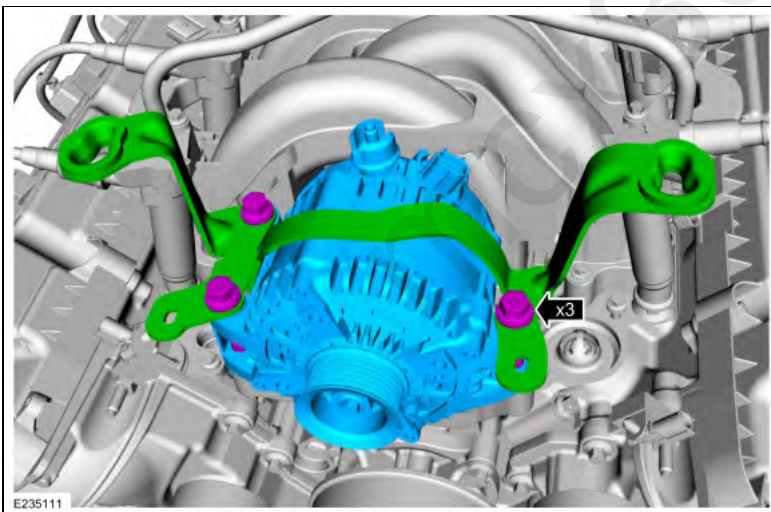

Installation

1. To install, reverse the removal procedure.

