

Alternating Current (AC) Power Outlet Socket

Removal


All vehicles

WARNING: Disconnect the 12 volt battery before servicing the direct current to alternating current (DC-AC) inverter or alternating current (AC) powerpoint to prevent the risk of high voltage shock. Failure to follow this instruction may result in serious personal injury.


1. Disconnect the battery/batteries.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

Alternating Current (AC) Power Outlet Socket - Front


2. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
3. Vehicles with full floor console, remove the screws and the instrument panel center lower trim panel.

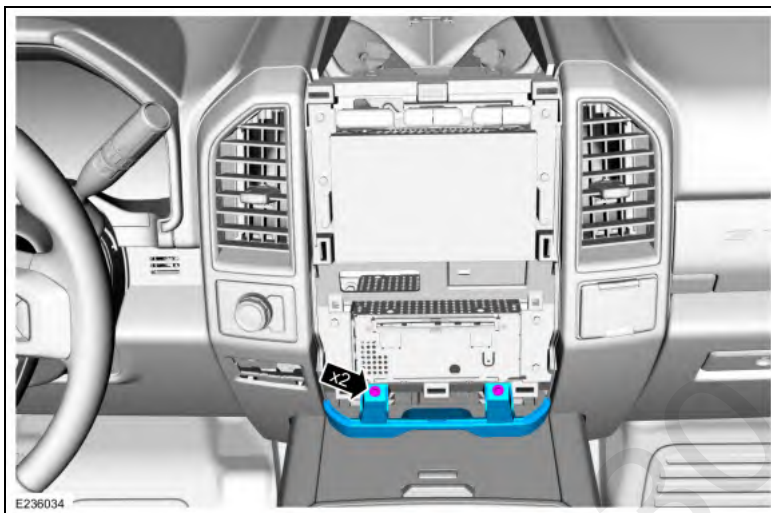

4. Release the clips and position the RH instrument panel center trim panel. Disconnect the electrical connectors and remove the RH instrument panel center trim panel.

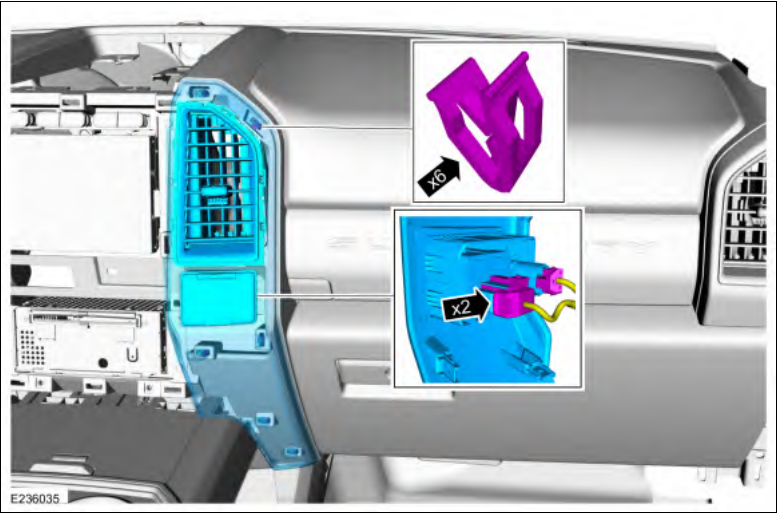


5. Press the retaining clips inward and remove the AC power outlet socket.

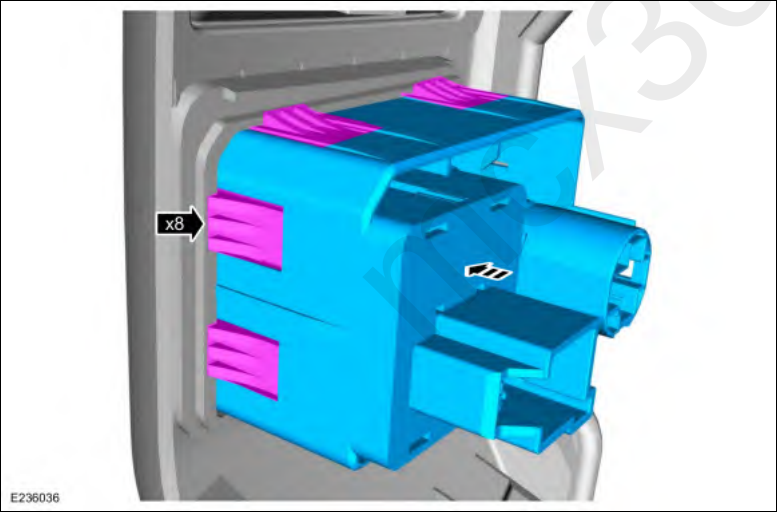


Alternating Current (AC) Power Outlet Socket - Rear


6. Release the clips and remove the floor console rear cup holder.

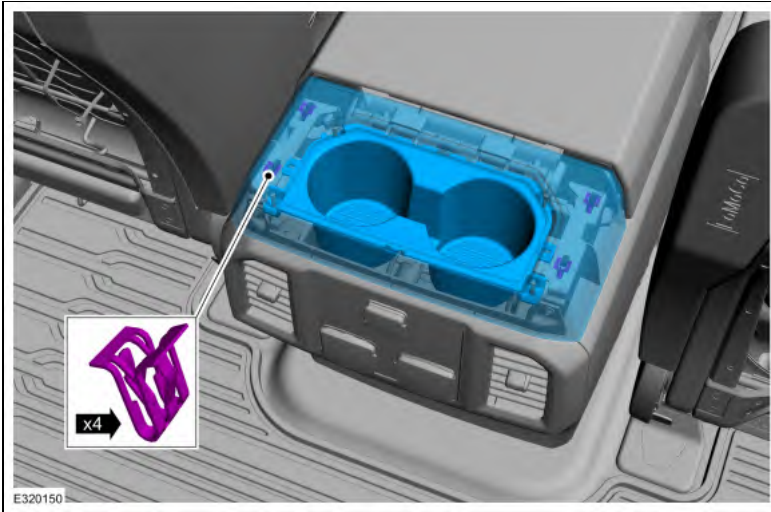

7. Disconnect the AC power outlet socket electrical connector.

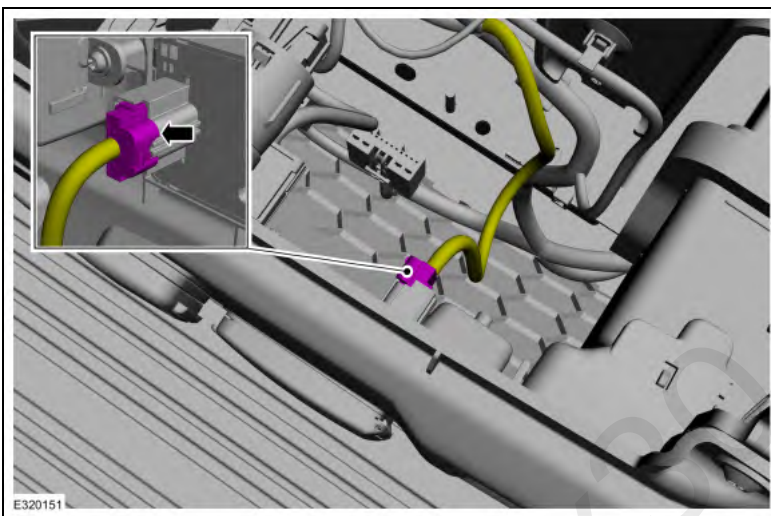

8. Press the retaining clips inward and remove the AC power outlet socket.

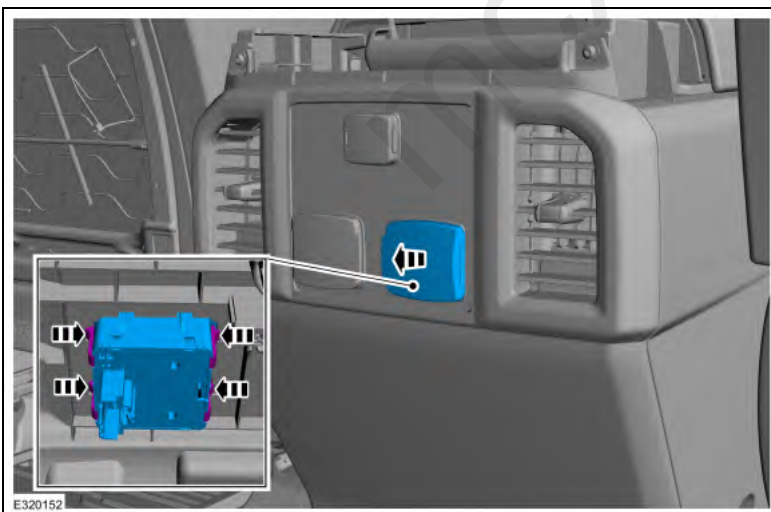

Installation

1. To install, reverse the removal procedure.

