


## Front Control/Display Interface Module (FCDIM)


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the APIM.  
Refer to: SYNC Module [APIM] (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Disconnect and remove the LVDS cable.

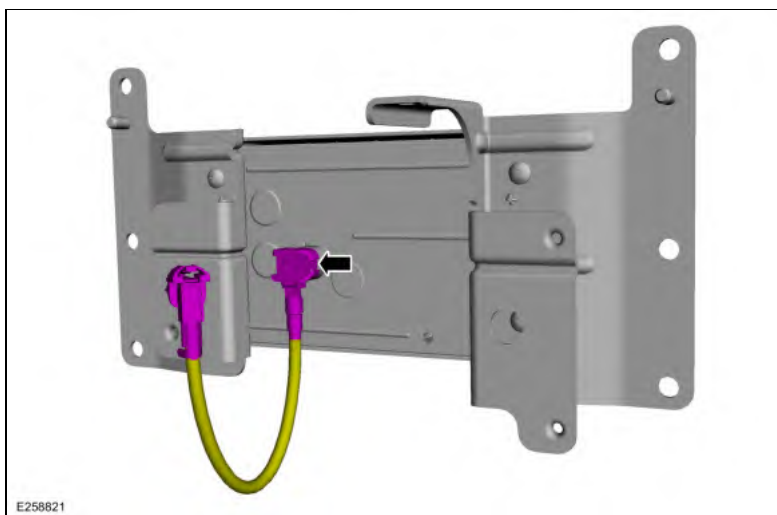

3. Remove the screws and FCDIM from the brackets.  
*Torque: 22 lb.in (2.5 Nm)*

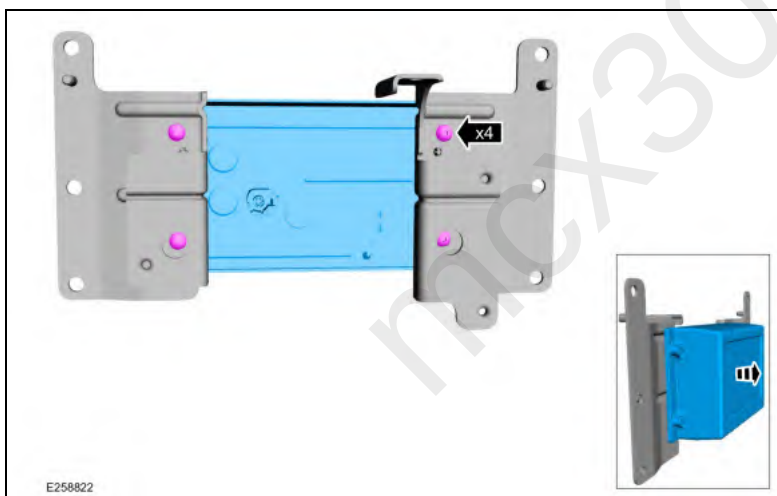

### Installation

1. To install, reverse the removal procedure.

