

Front Controls Interface Module (FCIM)

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the FCIM following the on-screen instructions.


2. Release the clips and remove the instrument panel speaker grille.
Use the General Equipment: Interior Trim Remover

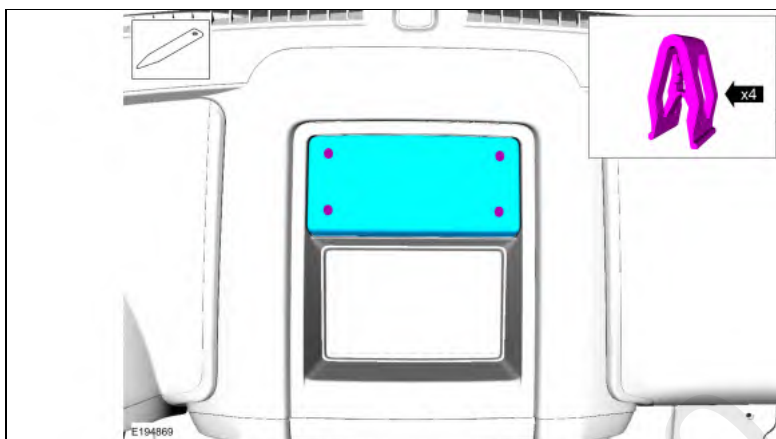

3. Remove the bolts, release the clips and remove upper instrument panel storage tray.
Torque: 22 lb.in (2.5 Nm)

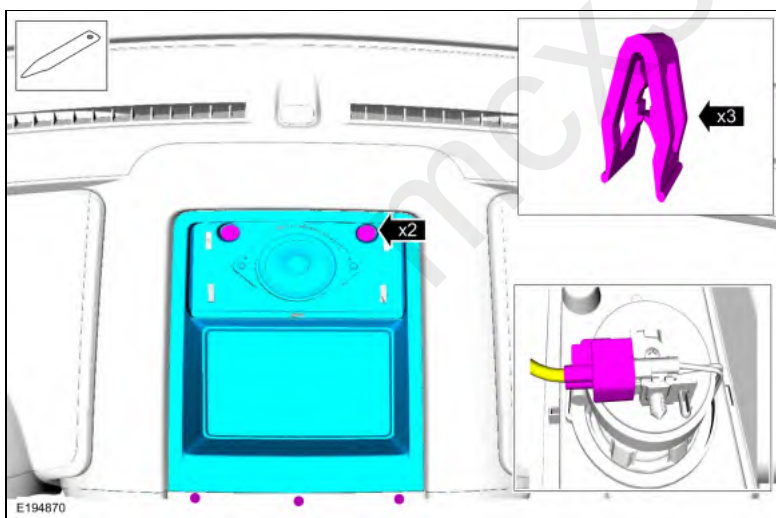

4. Remove the bolts and the FCIM.
 - Disconnect the electrical connectors.Torque: 22 lb.in (2.5 Nm)

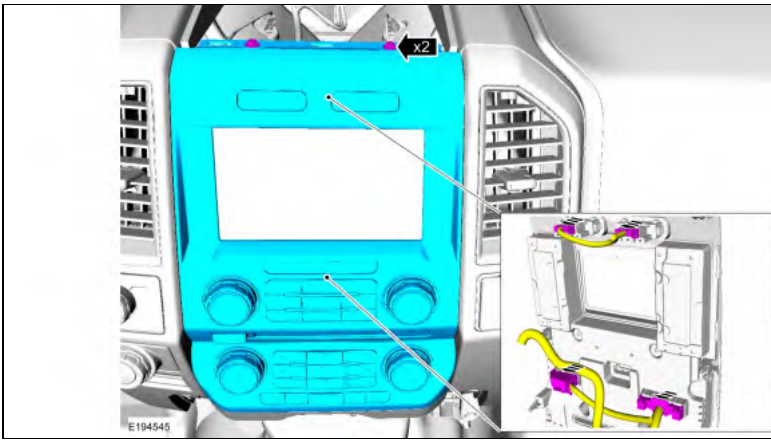

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary if replacing the component.*

Using a diagnostic scan tool, complete the PMI process for the FCIM following the on-screen instructions.

mcx30.com