


Front Display Interface Module (FDIM)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2.
Remove the bolts and the FDIM.
 - Disconnect the electrical connectors.
Torque: 22 lb.in (2.5 Nm)

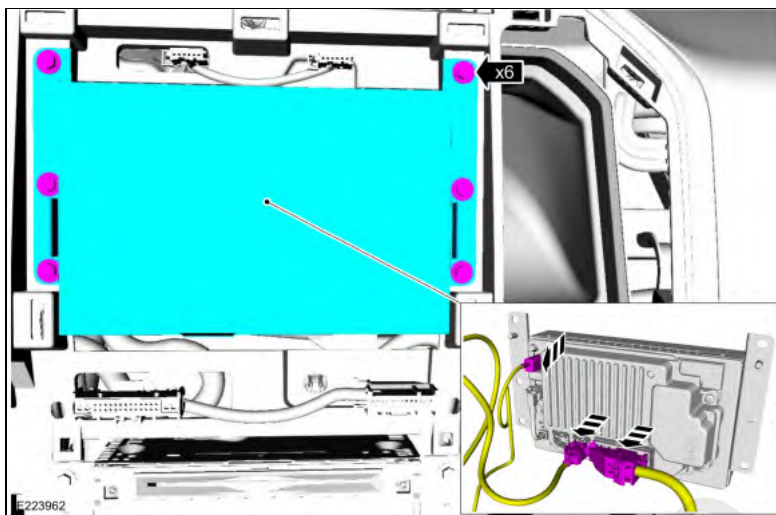

3. **NOTE:** This step is only necessary if replacing the FDIM.

Remove the screws, disconnect the electrical connector and separate the APIM from the FDIM.
Torque: 9 lb.in (1 Nm)

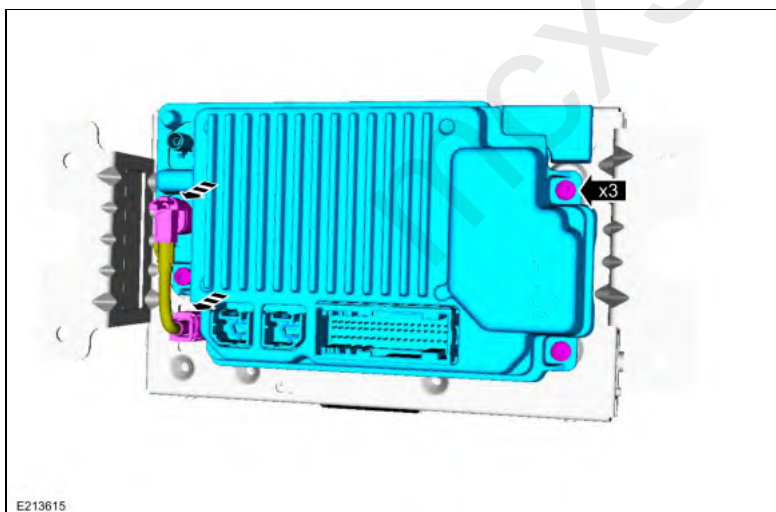

Installation

1. To install, reverse the removal procedure.

