



Subwoofer Speaker

Removal

1. Fold down the rear seat.

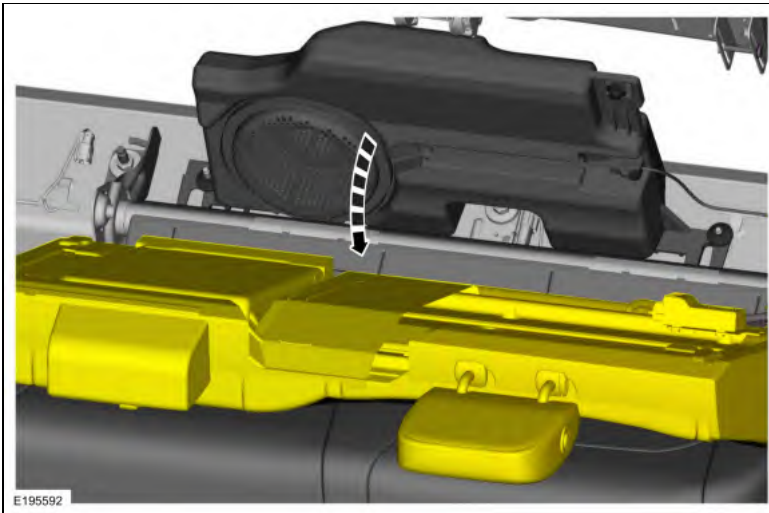

2.
 1. Disconnect the electrical connector.
 2. Remove the bolt.
Torque: 62 lb.in (7 Nm)
 3. Remove the nuts and the subwoofer.
Torque: 62 lb.in (7 Nm)

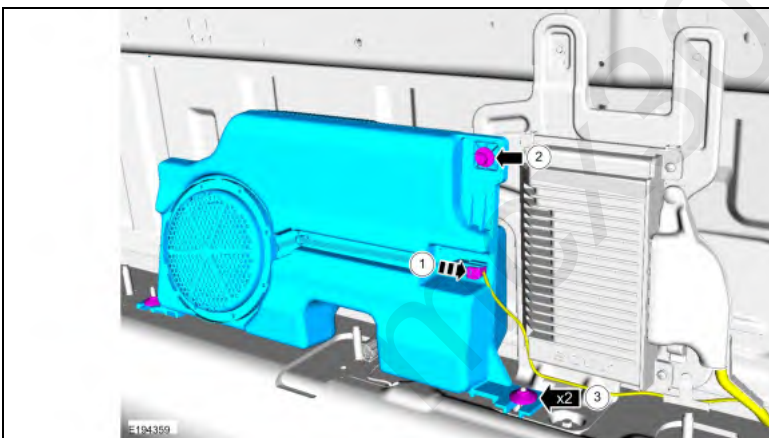

Installation

1. To install, reverse the removal procedure.