


SYNC Module [APIM]

Removal


NOTE: Removal steps in this procedure may contain installation details.

Vehicles with touch screen

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Remove the bolts and the FDIM.
 - Disconnect the electrical connectors.
 - Torque: 22 lb.in (2.5 Nm)

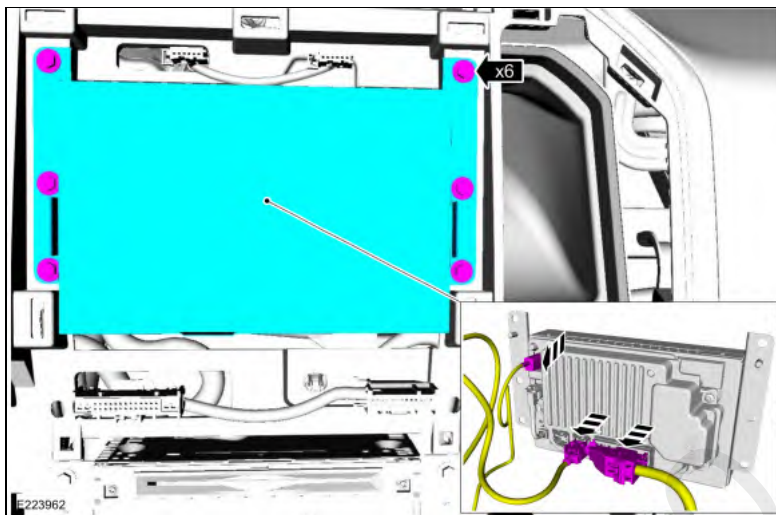


3. Remove the screws, disconnect the electrical connector and separate the APIM from the FDIM.

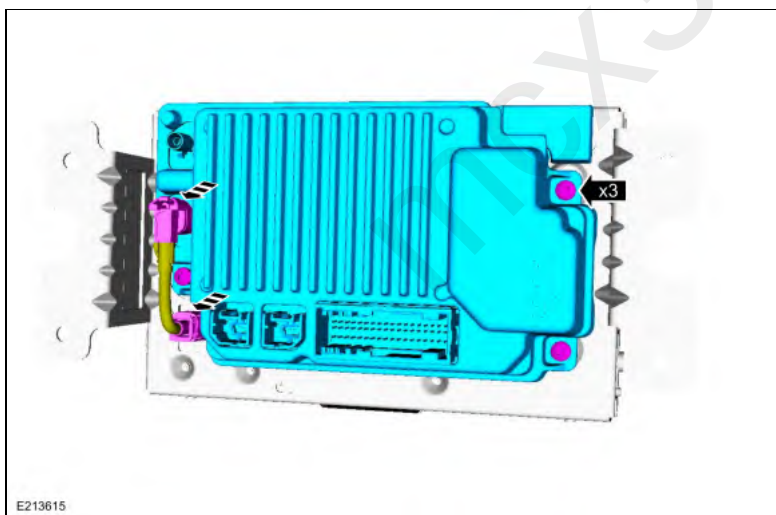


Vehicles without touch screen


4. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
5. Remove the bolts and the FCDIM/ APIM as an assembly.
 - Disconnect the electrical connectors.
 - Torque: 22 lb.in (2.5 Nm)

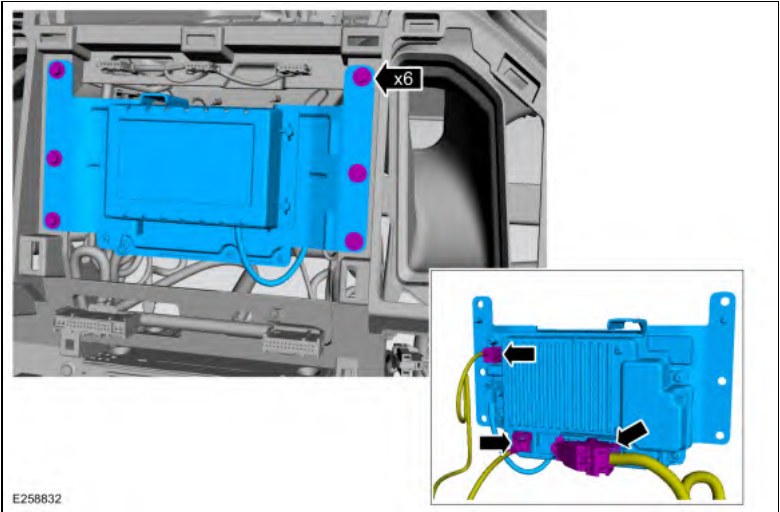

6. Disconnect the LVDS cable connector.

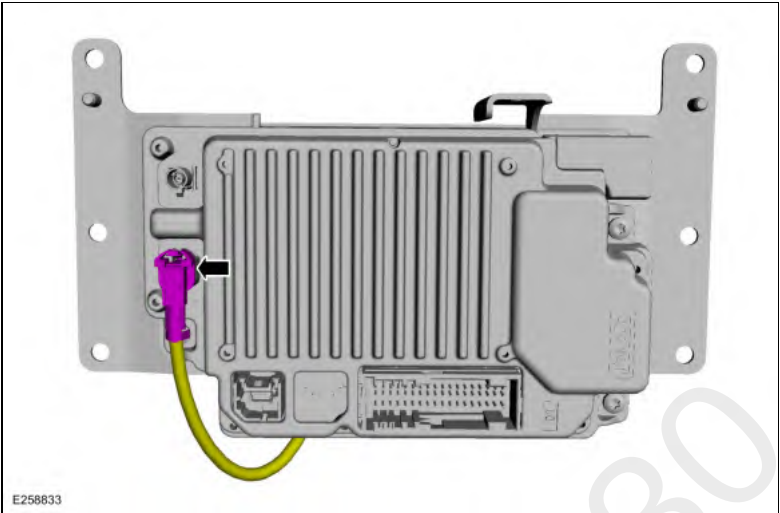

7. Remove the screws and the APIM.

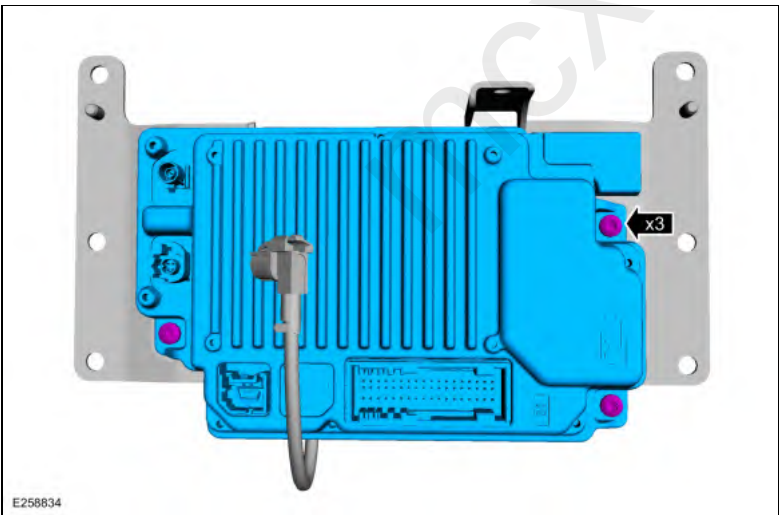

1. To install, reverse the removal procedure.
 2. If a new APIM is being installed, program the APIM to the correct software level.
Refer to: SYNC Module [APIM] Programming (415-00 Information and Entertainment System - General Information, General Procedures).
-

mcx30.com