

Telematics Control Unit (TCU) Module


Removal

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the TCU following the on-screen instructions.

2. Remove the loadspace trim panel.
Refer to: Loadspace Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: Loadspace Trim Panel - Crew Cab/Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the bolts and the TCU.
 - Disconnect the electrical and antenna cables.

Torque: 40 lb.in (4.5 Nm)

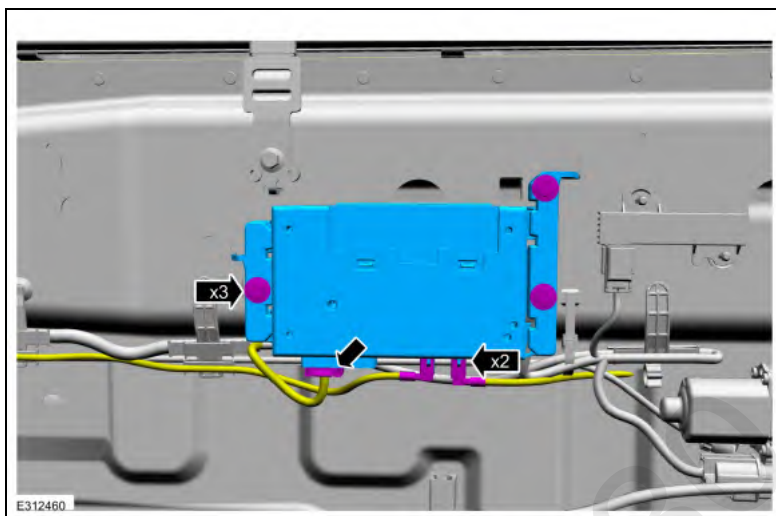

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary if replacing the TCU.

Using a diagnostic scan tool, complete the PMI process for the TCU following the on-screen instructions.