


Telematics Control Unit (TCU) Module Antenna Coaxial Cable

Removal

1. Remove the loadspace trim panel.
Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: Loadspace Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: Loadspace Trim Panel - Crew Cab/Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Lower the headliner.
Refer to: Headliner - Lowering - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: Headliner - Lowering - Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: Headliner - Lowering - Crew Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Disconnect the electrical connectors, separate the coaxial cable guides and remove the TCU antenna coaxial cable.

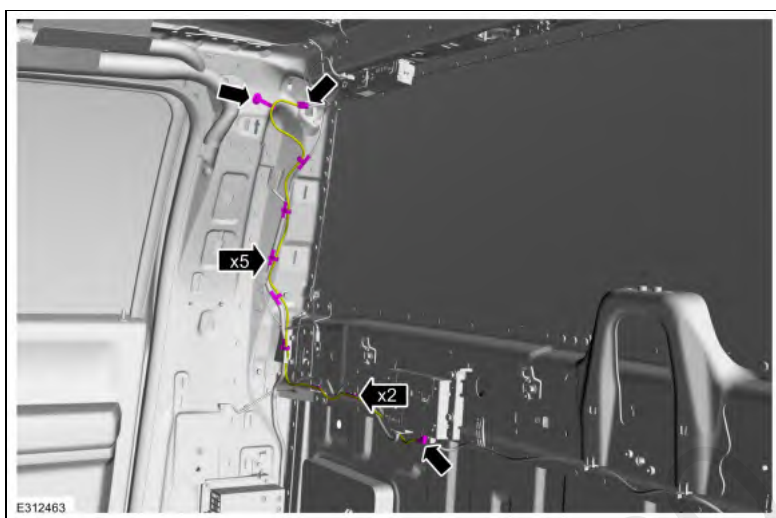

Installation

1. To install, reverse the removal procedure.