

Universal Serial Bus (USB) Hub


Special Tool(s) / General Equipment

Interior Trim Remover

Removal


Vehicles with floor console

1. Open the floor console storage bin door.

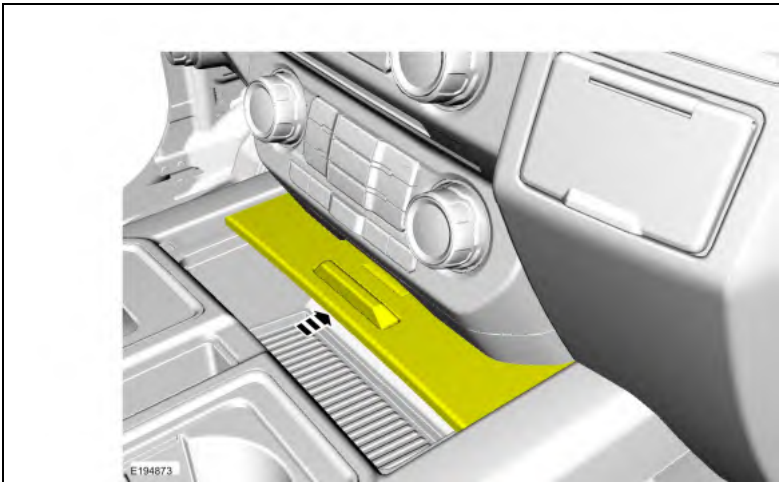

2. Remove the USB hub.
- Disconnect the electrical connectors.


Use the General Equipment: Interior Trim Remover

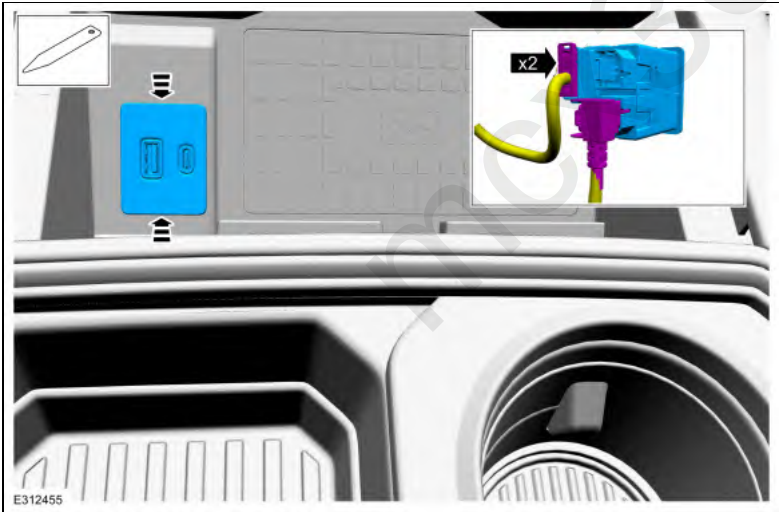

Vehicles without floor console

3. Remove the USB hub.
- Disconnect the electrical connectors.

Use the General Equipment: Interior Trim Remover

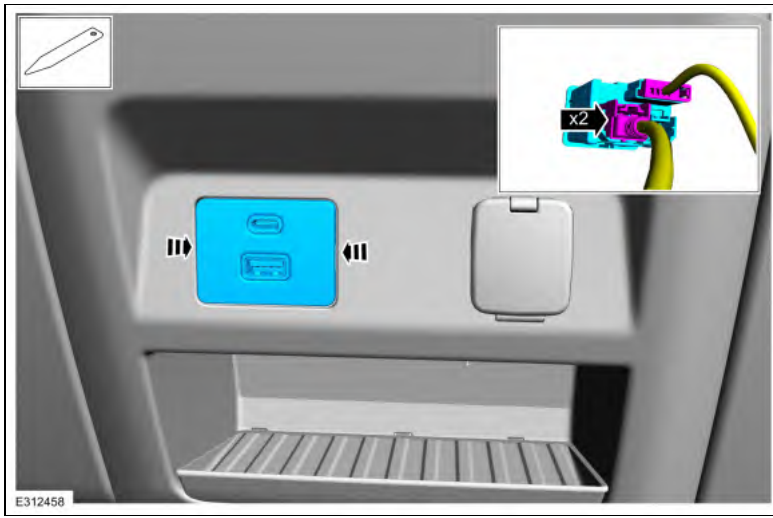

Installation

1. To install, reverse the removal procedure.

mcx30.com