


Front Fog Lamp

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH (left-hand) fog lamp is shown, RH (right-hand) is similar.


1. Remove the front wheel and tire.
Refer to: Wheel and Tire - Vehicles With: Single Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
2. Remove the screws and the front fender filler panel.

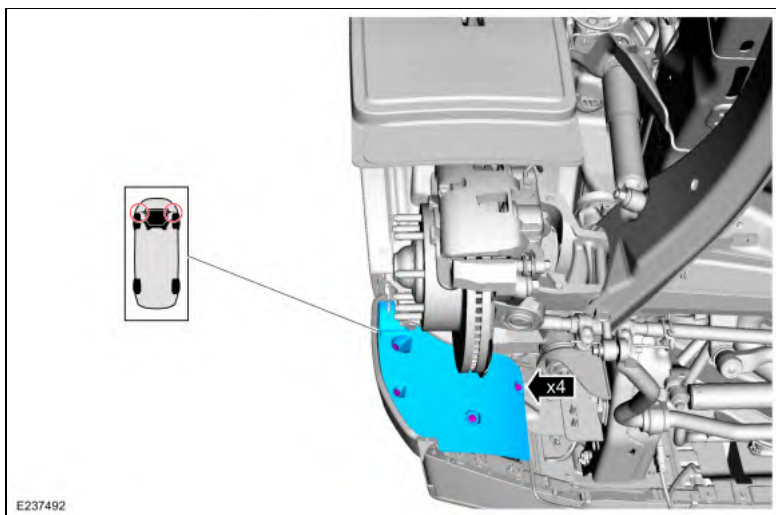


3. Remove the bolts and the bumper extension.
Torque: 35 lb.ft (47.6 Nm)

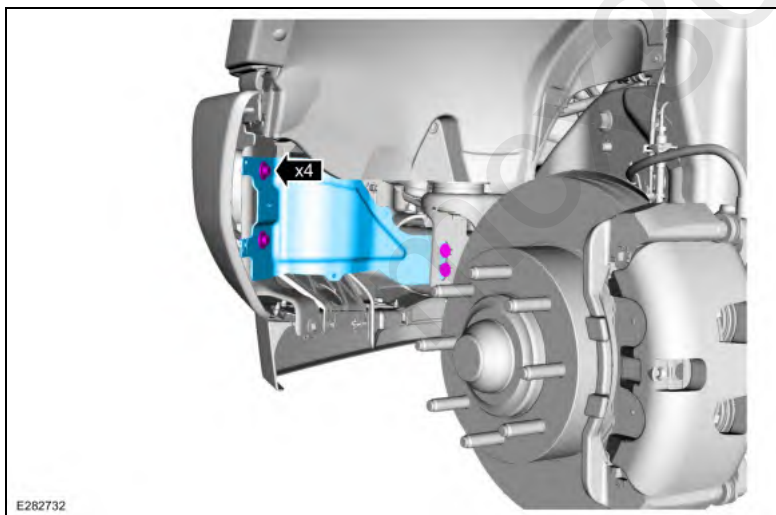

4. Disconnect the fog lamp electrical connector and detach the front fog lamp wire harness retainers.

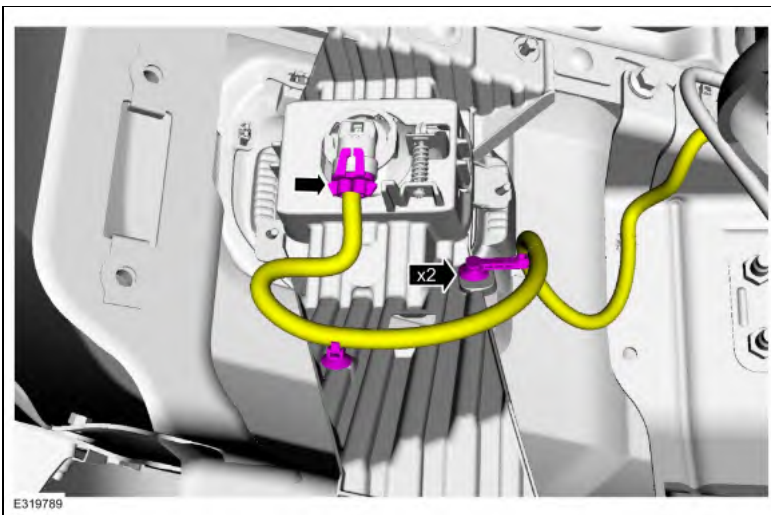

5. Remove the bolts and the fog lamp assembly.

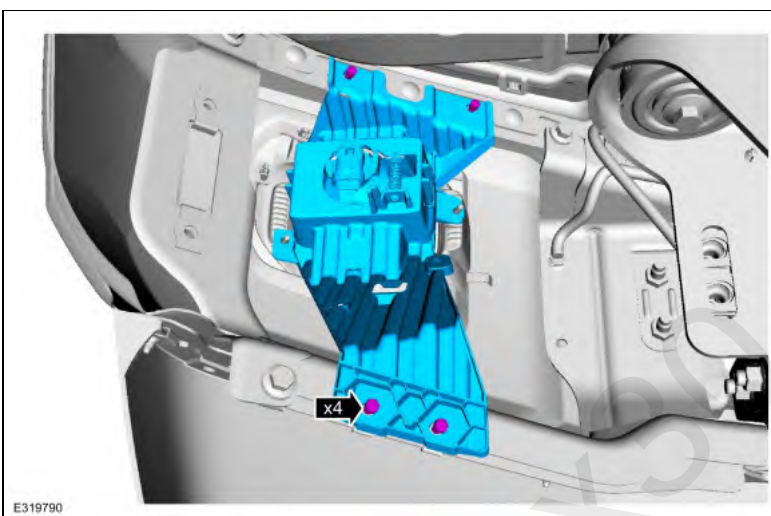

Installation

1. To install, reverse the removal procedure.
2. Adjust the front fog lamp.
Refer to: Front Fog Lamp Adjustment (417-01 Exterior Lighting, General Procedures).