


## Front Turn Signal Lamp Bulb

### Removal

1. Remove the headlamp assembly.  
Refer to: Headlamp Assembly (417-01 Exterior Lighting, Removal and Installation).
2. Remove the turn signal lamp bulb.
  1. Turn the bulb holder counterclockwise and remove the bulb holder assembly.
  2. Separate the turn signal lamp bulb from the bulb holder.

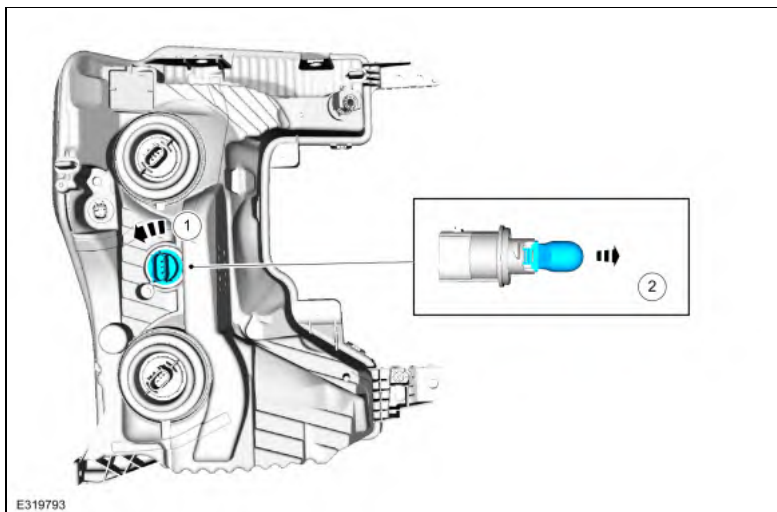

### Installation

1. To install, reverse the removal procedure.