


Hazard Flasher Switch

Removal

1. Remove the FCIM.
Refer to: Front Controls Interface Module (FCIM) (415-00 Information and Entertainment System - General Information, Removal and Installation).
2. Release the tabs and remove the switch.

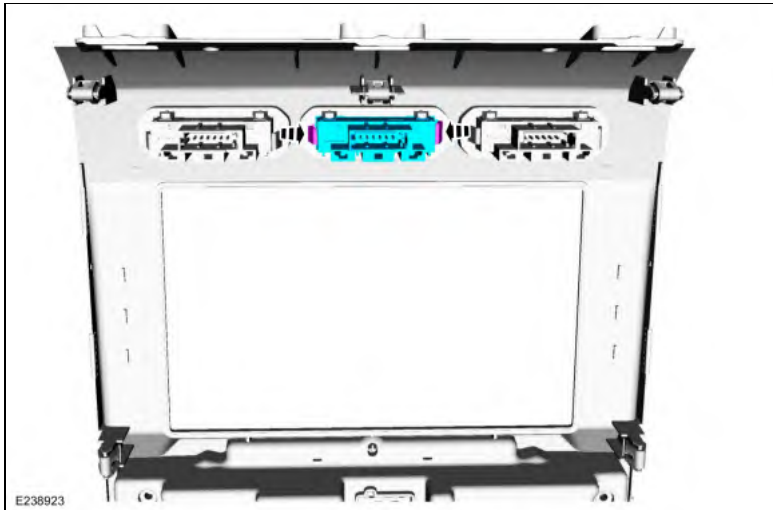

Installation

1. To install, reverse the removal procedure.