


Headlamp Assembly

Removal


NOTE: Removal steps in this procedure may contain installation details.

All headlamp assemblies


1. Remove the radiator grille.
Refer to: Radiator Grille (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the pin-type retainers and the air deflector.

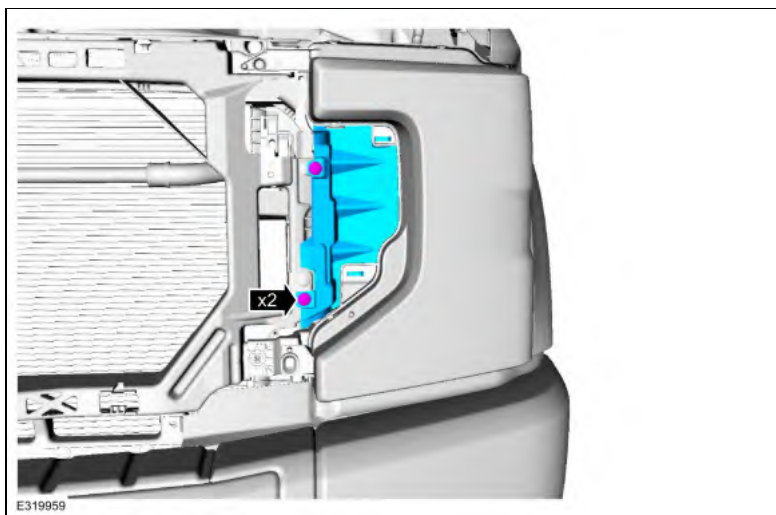

3. Position the bumper seal down and remove the headlamp assembly lower screw.
Torque: 36 lb.in (4.1 Nm)

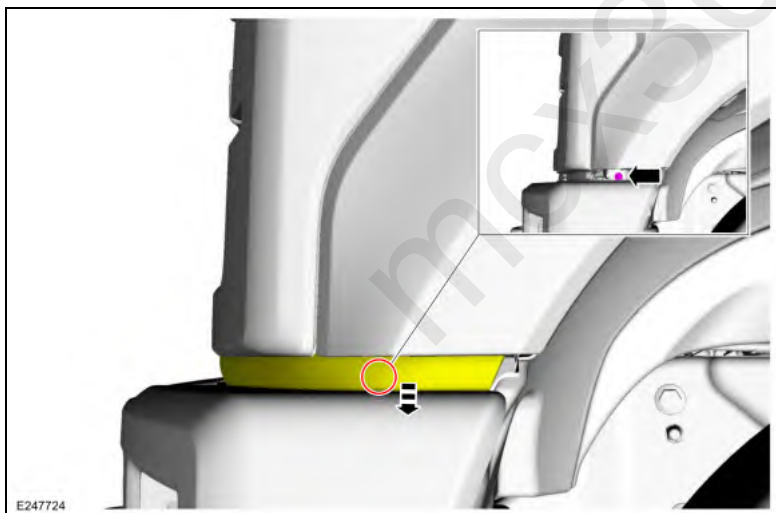


4. Remove the front headlamp assembly upper bolt.
Torque: 36 lb.in (4.1 Nm)

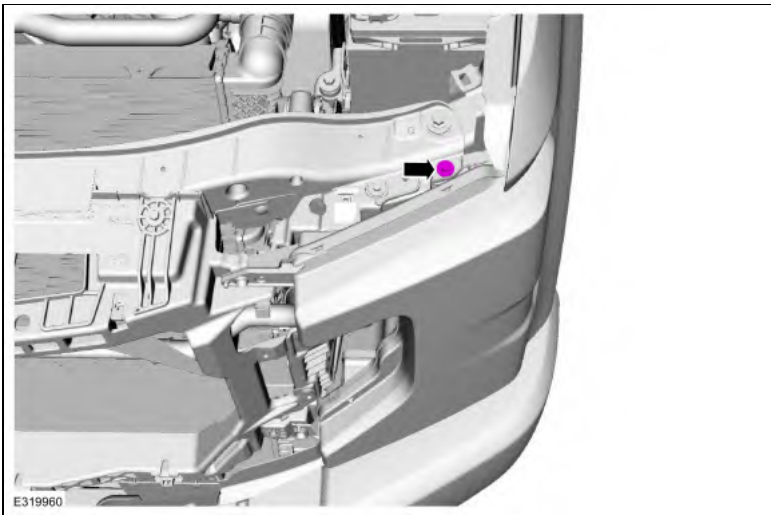


Vehicles equipped with light emitting diode (LED) headlamp assemblies

- 5. On both sides.
Loosen the bumper extension bolts.
Torque: 35 lb.ft (48 Nm)

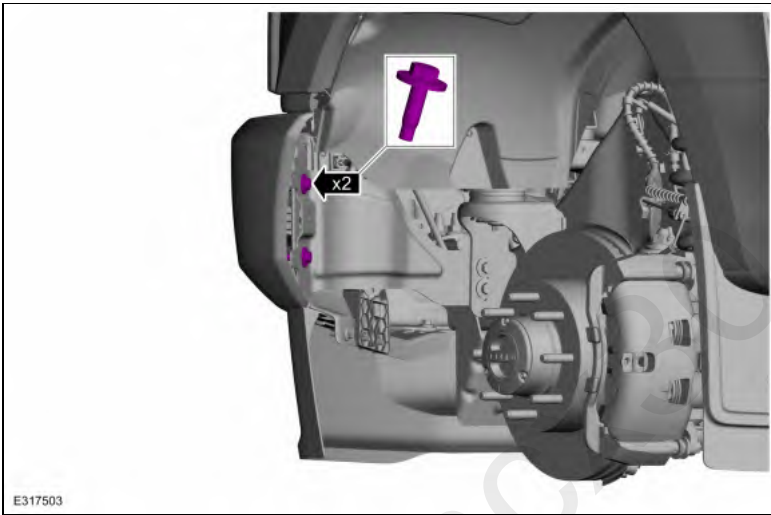


- 6. Release the clips, the tabs and remove the front tow hook covers.

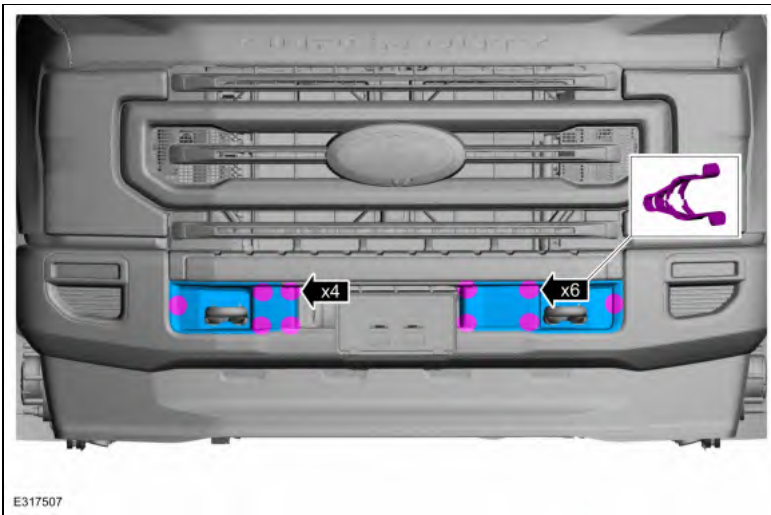


7. **NOTE:** Loosen the front bumper assembly bolts enough to allow the front bumper assembly to lower.

Loosen the bolts and the front bumper assembly.


Torque: 76 lb.ft (103 Nm)

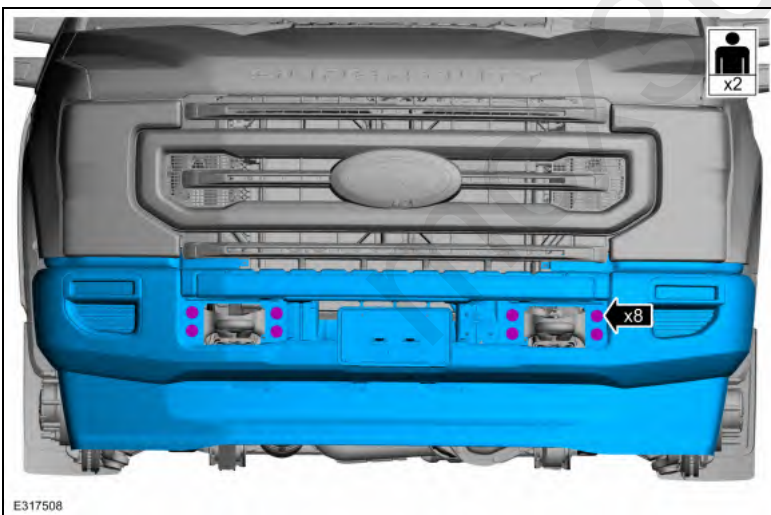

8. Release the tab and while slightly pushing down on the headlamp assembly, position the headlamp assembly forward.

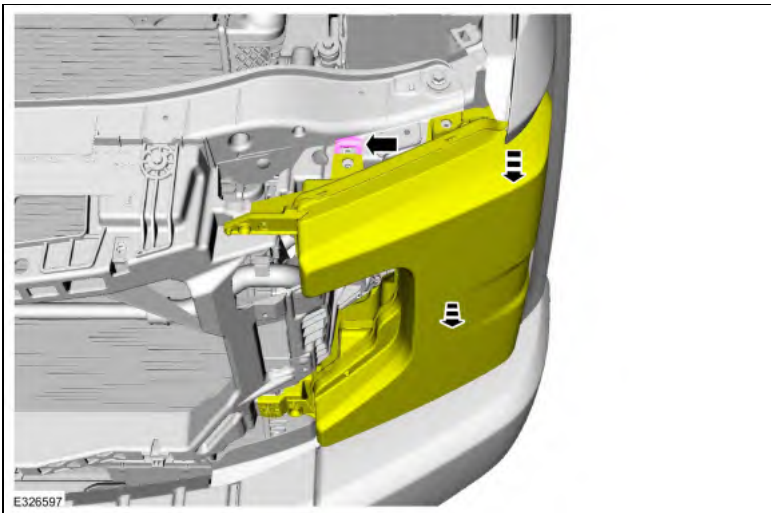


9. Disconnect the electrical connector and remove the headlamp assembly.

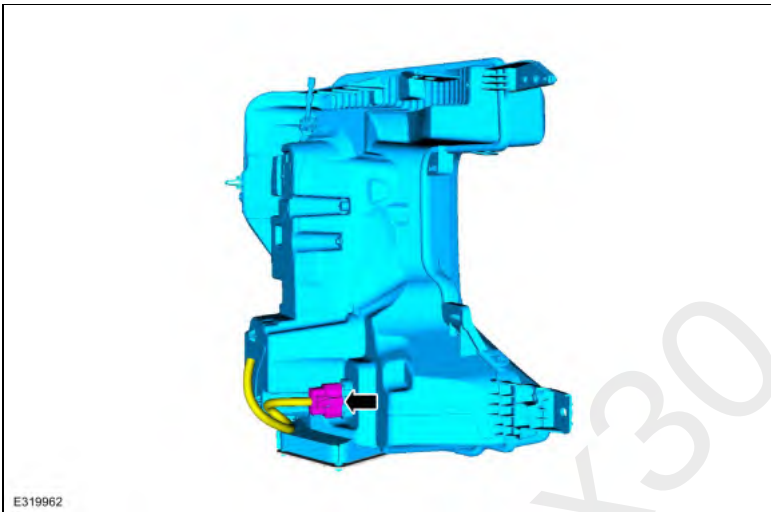


Vehicles equipped with halogen headlamp assemblies

10. Release the tab and position the headlamp assembly forward.

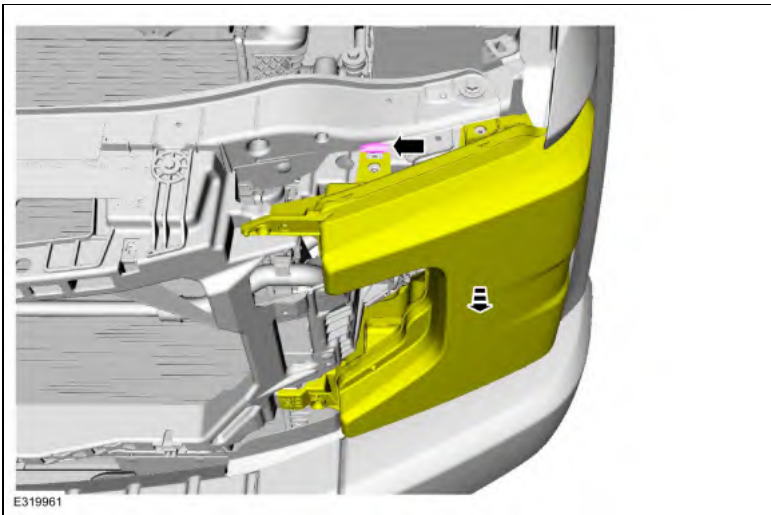

11. Disconnect the electrical connectors and remove the headlamp assembly.

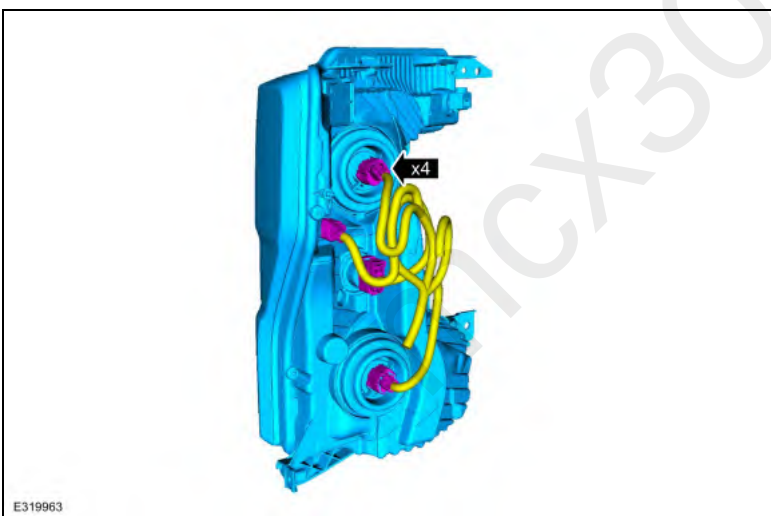

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Adjust the headlamp assemblies.

Refer to: Headlamp Adjustment (417-01 Exterior Lighting, General Procedures).

3. **NOTE:** *This step is only necessary on vehicles equipped with a CCM (cruise control module) with LED (light emitting diode) headlamp assemblies.*

Align the CCM.

Refer to: Cruise Control Radar Alignment (419-03B Cruise Control - Vehicles With: Adaptive Cruise Control, General Procedures).

