

Headlamp Bulb


Removal

All halogen bulbs


1. Remove the headlamp assembly.
Refer to: Headlamp Assembly (417-01 Exterior Lighting, Removal and Installation).

Upper halogen bulb

2. Remove the upper headlamp bulb seal.

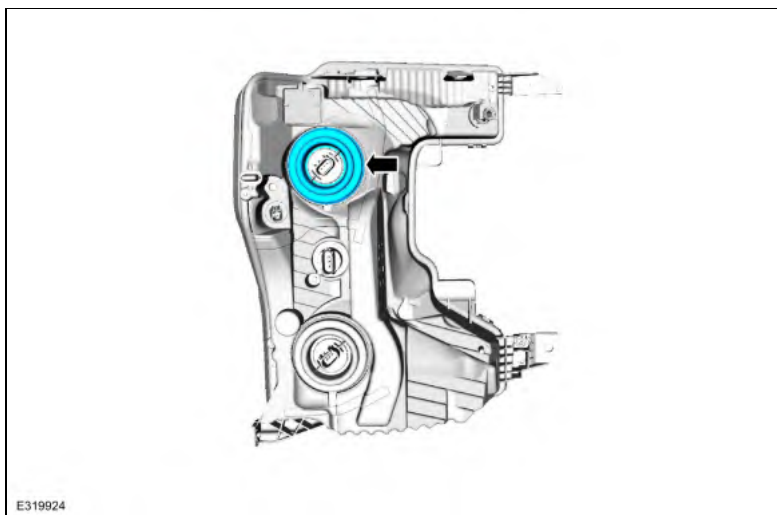


3. Turn the upper headlamp bulb counterclockwise and remove the upper headlamp bulb.

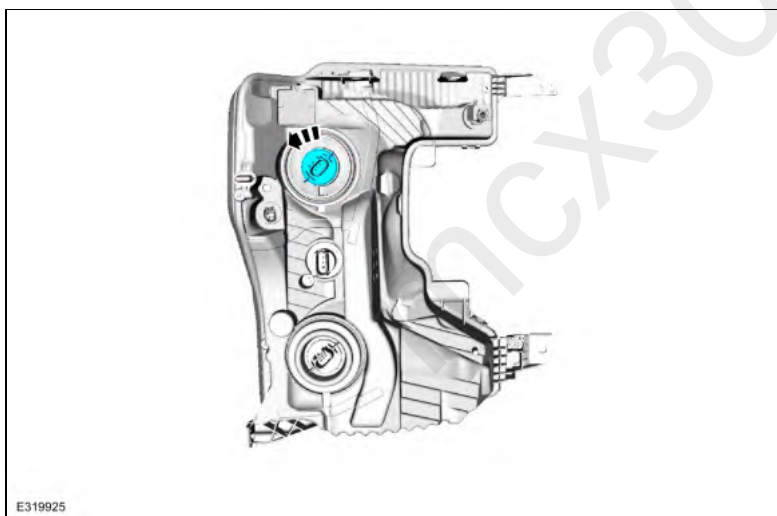


Lower halogen bulb

4. Remove the lower headlamp bulb seal.

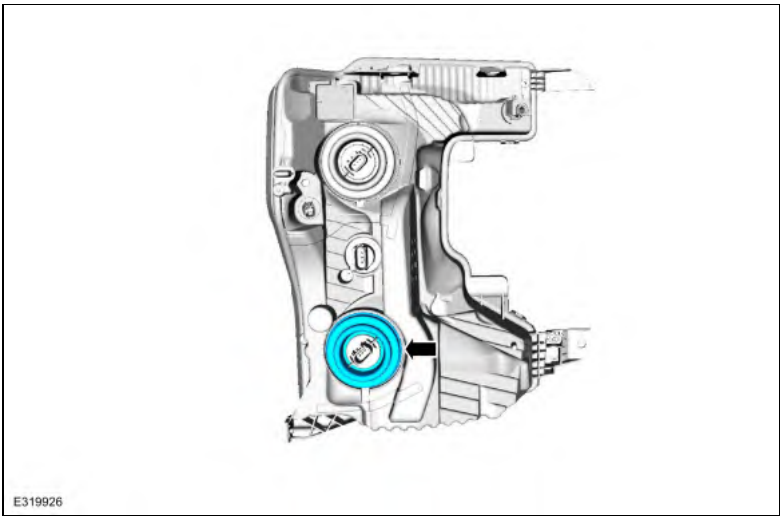

5. Turn the lower headlamp bulb counterclockwise and remove the lower headlamp bulb.

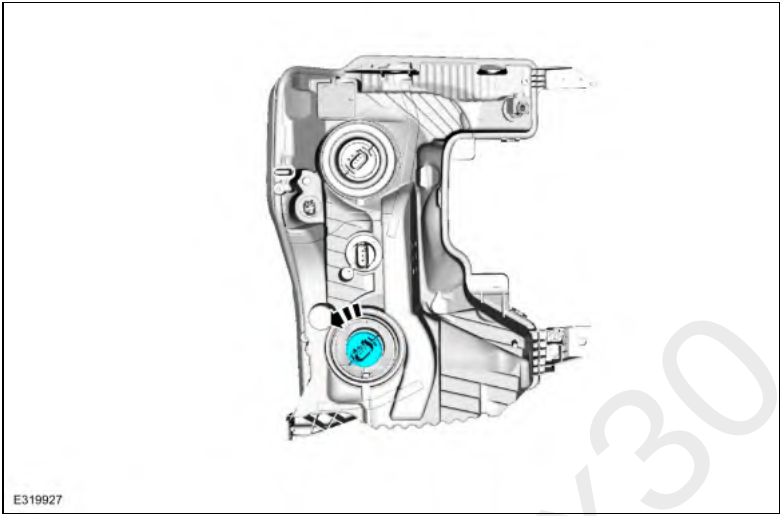

Installation

- 1. To install, reverse the removal procedure.