


High Mounted Stoplamp

Removal


NOTE: Removal steps in this procedure may contain installation details.

Vehicles with high mounted stoplamp with camera

1. Remove the screws and position the high mounted stoplamp.
Torque: 12 lb.in (1.3 Nm)

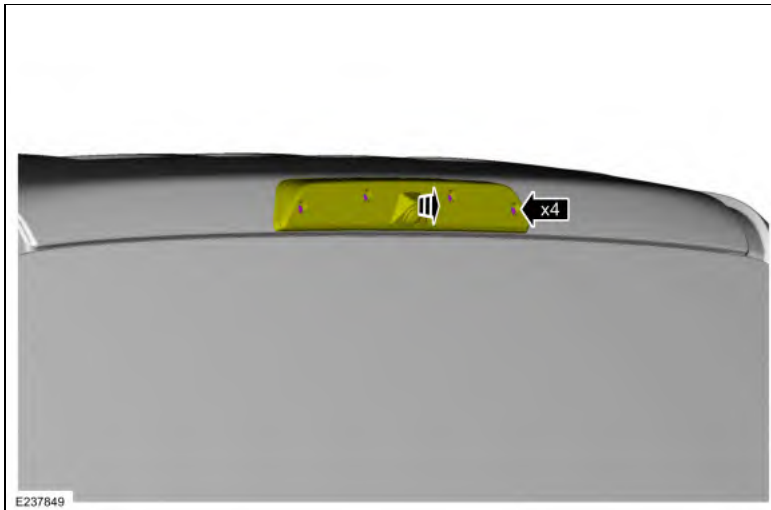


2. Disconnect the high mounted stoplamp electrical connectors and remove the high mounted stoplamp.

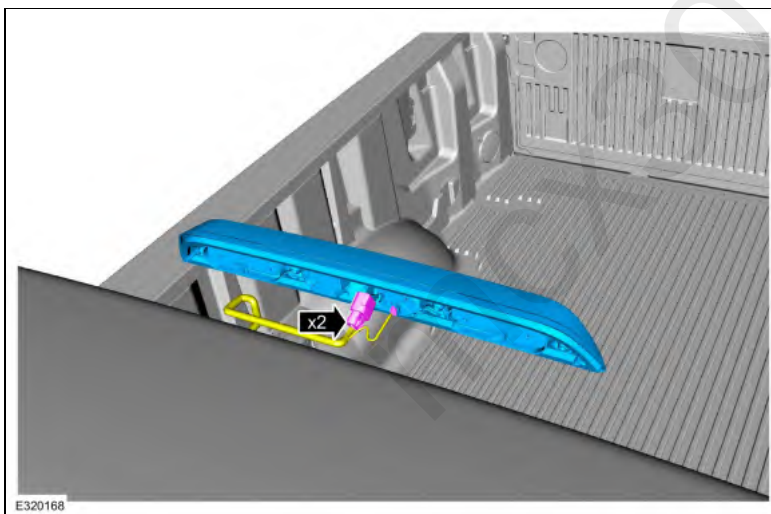

Vehicles with high mounted stoplamp without camera

3. **NOTE:** Access the electrical connector through the opening located behind the high mounted stoplamp.


Disconnect the high mounted stoplamp electrical connector and remove the high mounted stoplamp.

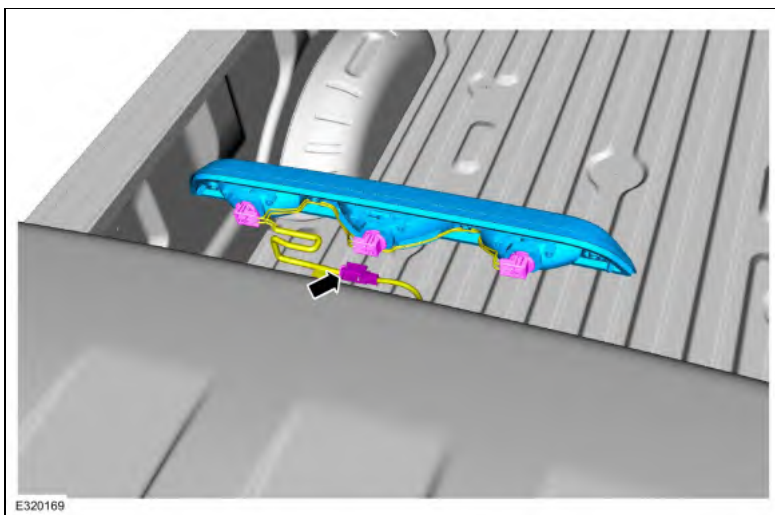A horizontal bar chart consisting of six equally long bars stacked vertically. From top to bottom, the colors are cyan, green, brown, yellow, magenta, and light blue. Each bar has a thin black outline.


High mounted stoplamp bulb replacement

4. **NOTE:** *The high mounted stoplamp is shown removed for clarity.*

Remove, as required, the bulb holder by turning counter clock-wise.

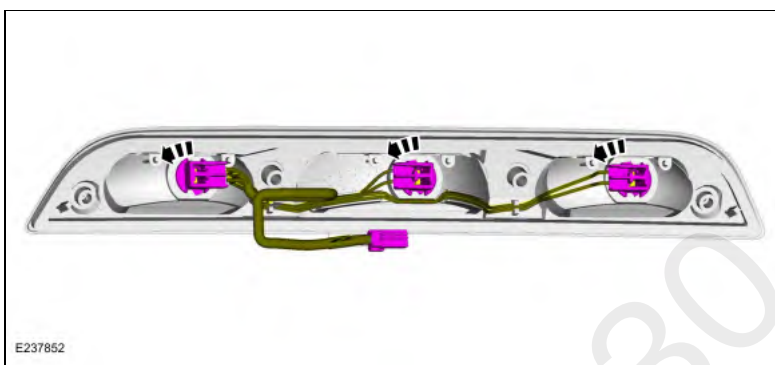

- Remove as required, the high mounted stoplamp bulb.

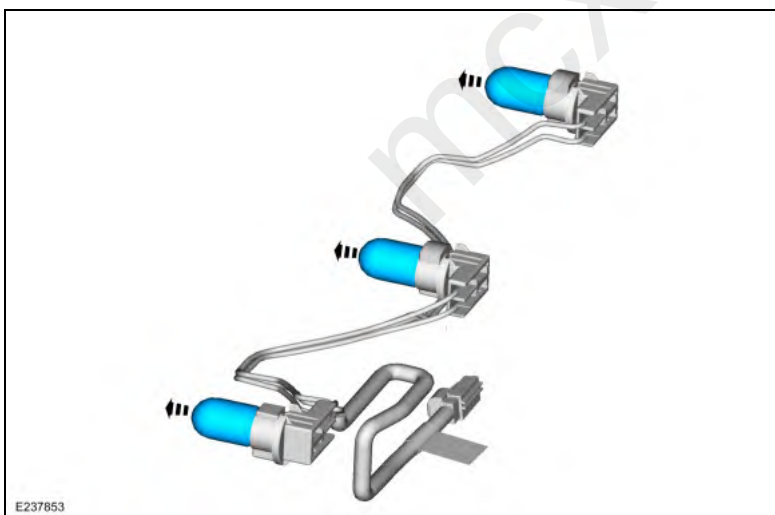

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *The step is only for vehicles equipped with a high mounted stoplamp with camera.*

Using a diagnostic scan tool, following the on screen instructions for the LIN New Module Initialization - BCM configure the BCM.

