



Light Emitting Diode (LED) Control Module

Removal

1. Remove the headlamp assembly.
Refer to: Headlamp Assembly (417-01 Exterior Lighting, Removal and Installation).
2. Remove the bolts and position the LED control module down.

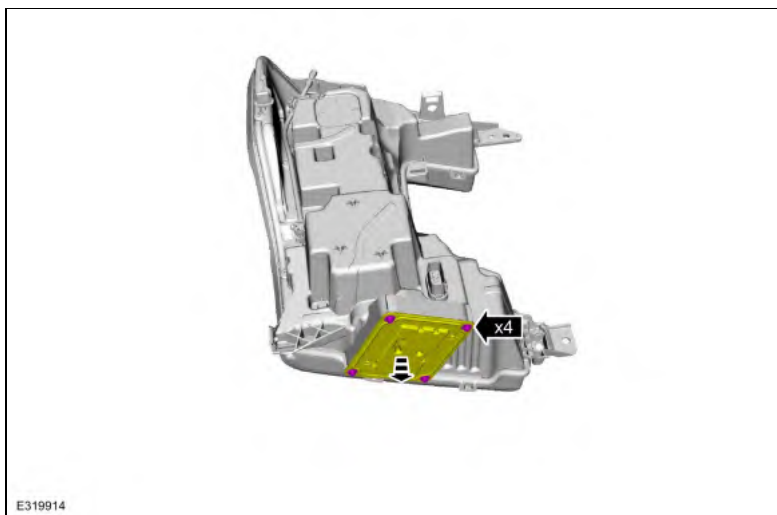

3. Disconnect the electrical connectors and remove the LED control module down.

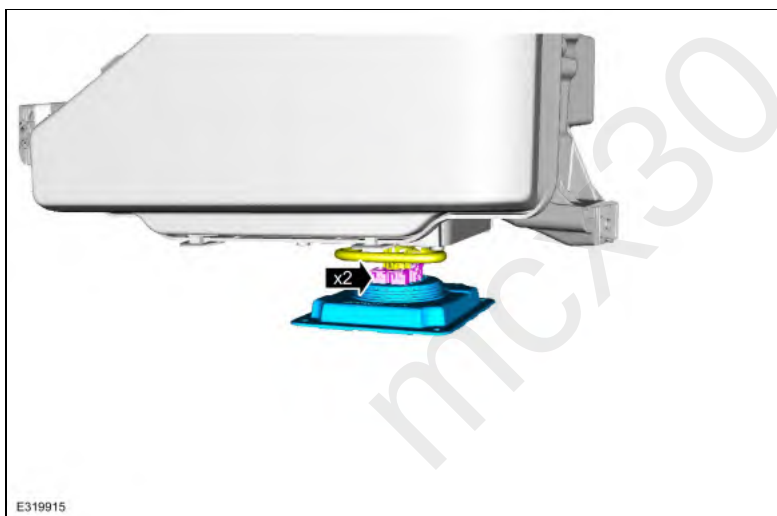

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, execute the "BCM > LIN New Module Initialization" routine. Follow the diagnostic scan tool directions.

