


Rear Lamp Assembly

Removal


Rear lamp assembly without side obstacle detection - pick-up box mounted

NOTE: LH (left-hand) rear lamp assembly is shown, RH (right-hand) rear lamp assembly is similar.

1. Remove the bolts from the rear lamp assembly and gently pull the rear lamp assembly from the tailgate pillar by releasing the retaining tabs.

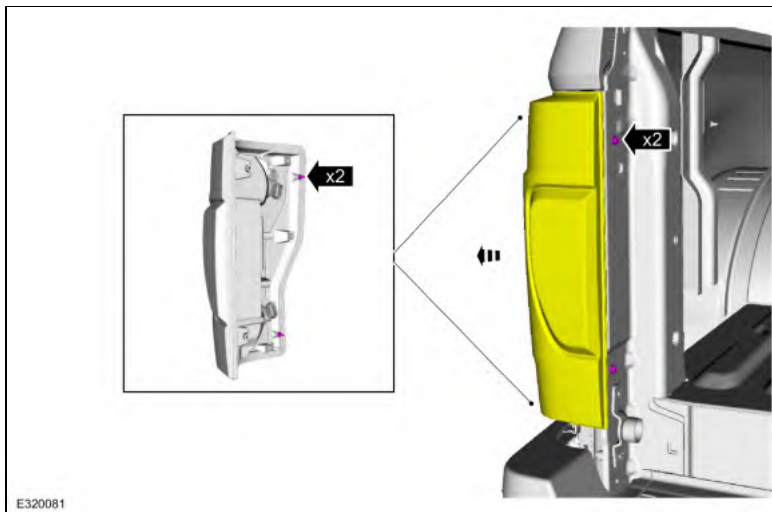


2. Disconnect the electrical connectors and remove the rear lamp assembly.

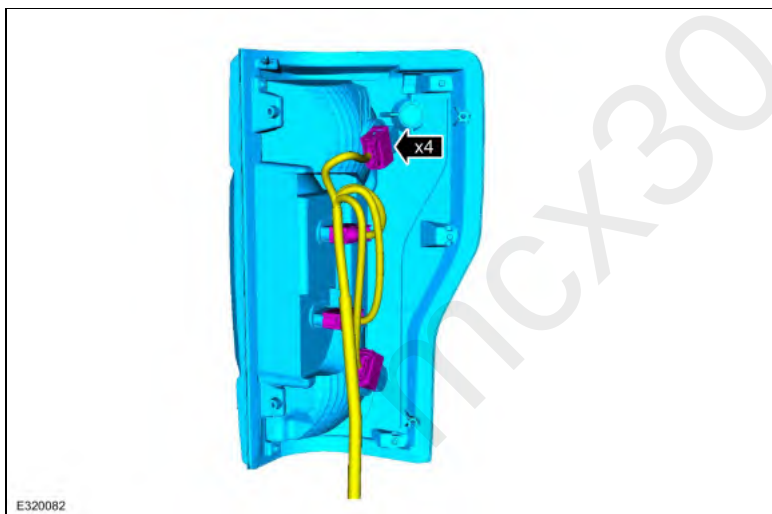


Rear lamp assembly with side obstacle detection - pick-up box mounted

NOTE: LH (left-hand) rear lamp assembly is shown, RH (right-hand) rear lamp assembly is similar.

3. Remove the bolts from the rear lamp assembly and gently pull the rear lamp assembly from the tailgate pillar by releasing the retaining tabs.

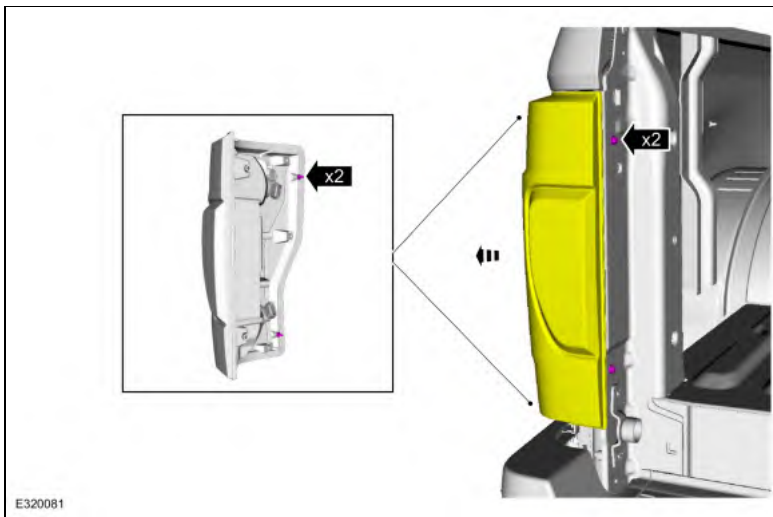


4. Disconnect the electrical connectors and remove the rear lamp assembly.

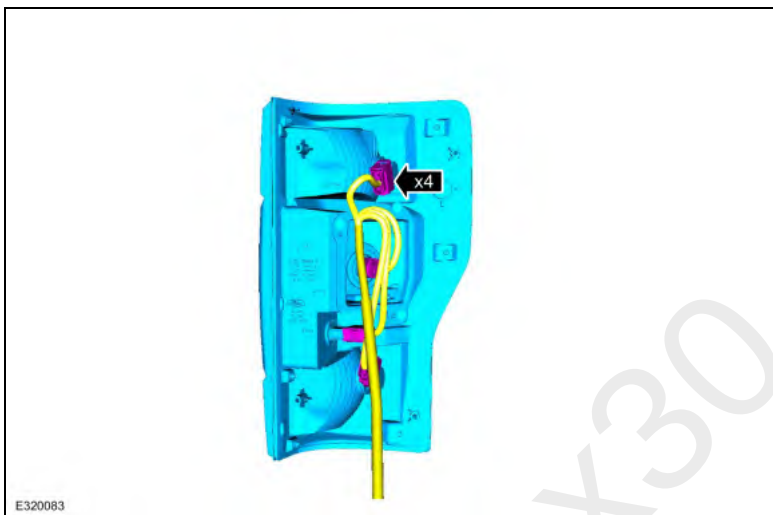


Rear lamp assembly LED (light emitting diode) - pick-up box mounted

NOTE: LH (left-hand) rear lamp assembly is shown, RH (right-hand) rear lamp assembly is similar.

5. Remove the bolts from the rear lamp assembly and gently pull the rear lamp assembly from the tailgate pillar by releasing the retaining tabs.

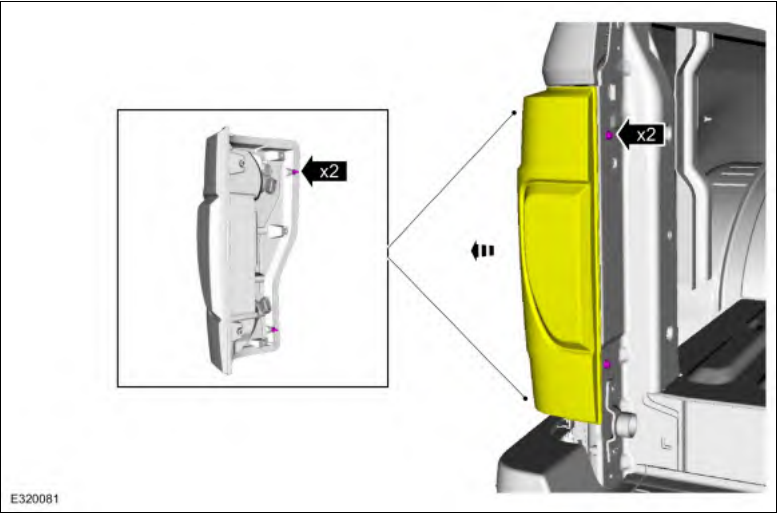


6. Disconnect the electrical connector and remove the rear lamp assembly.

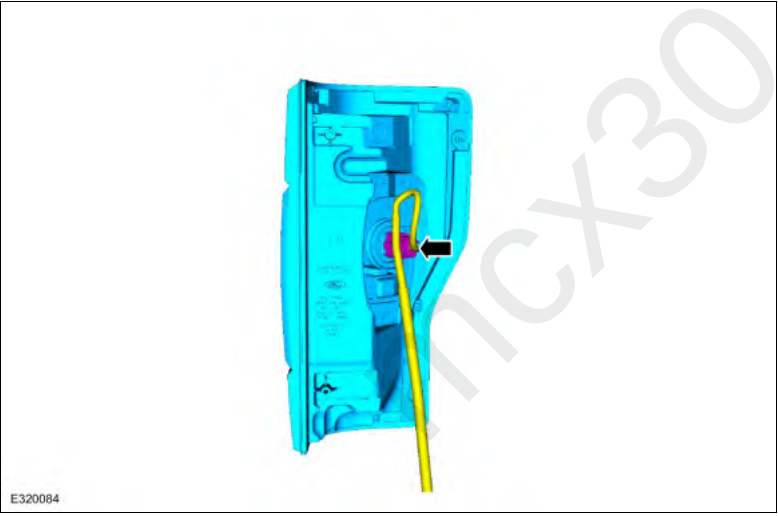


Rear lamp assembly without side obstacle detection - frame mounted

NOTE: LH (left-hand) rear lamp assembly is shown, RH (right-hand) rear lamp assembly is similar.

7. Disconnect the rear lamp assembly electrical connector.

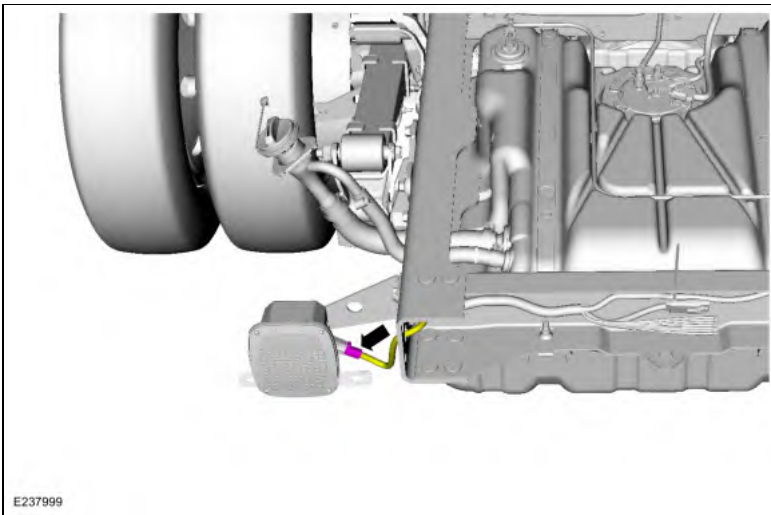

8. Remove the nuts and the rear lamp assembly.

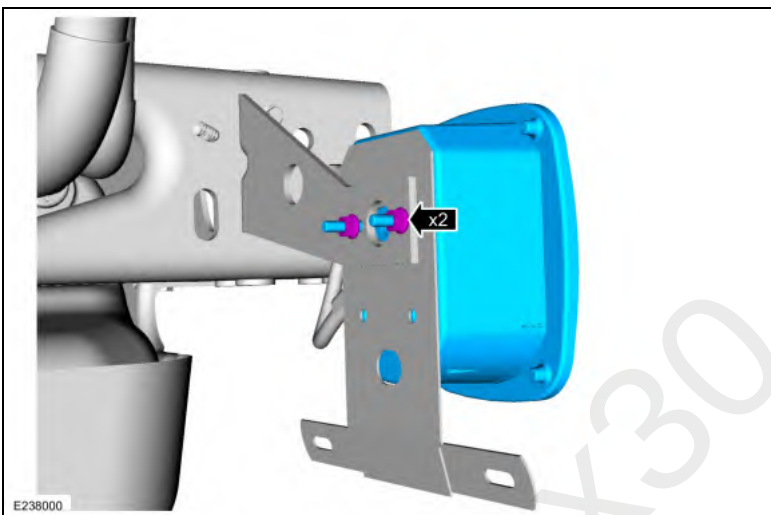


Center mounted rear lamp assembly

9. Remove the screws and position the center rear lamp assembly out.



10. Disconnect the electrical connector and remove the center rear lamp assembly.

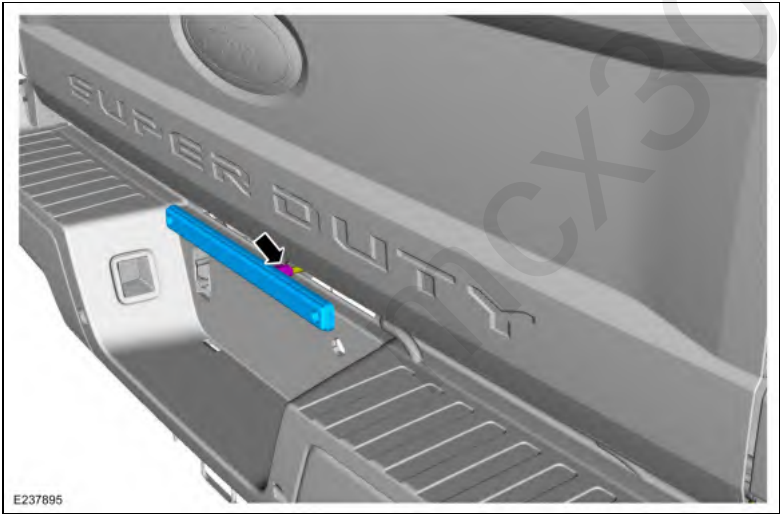

Installation

1. To install, reverse the removal procedure.

