

Rear Lamp Bulb

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH (left-hand) fog lamp is shown, RH (right-hand) is similar.

All vehicles

1. Remove the rear lamp assembly.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting, Removal and Installation).


Stoplamp bulbs - vehicles with pick-up box

2. Remove the stoplamp bulb.
 1. Turn the stoplamp bulb holder counterclockwise and remove the bulb holder.
 2. Remove the stoplamp bulb from the bulb holder.

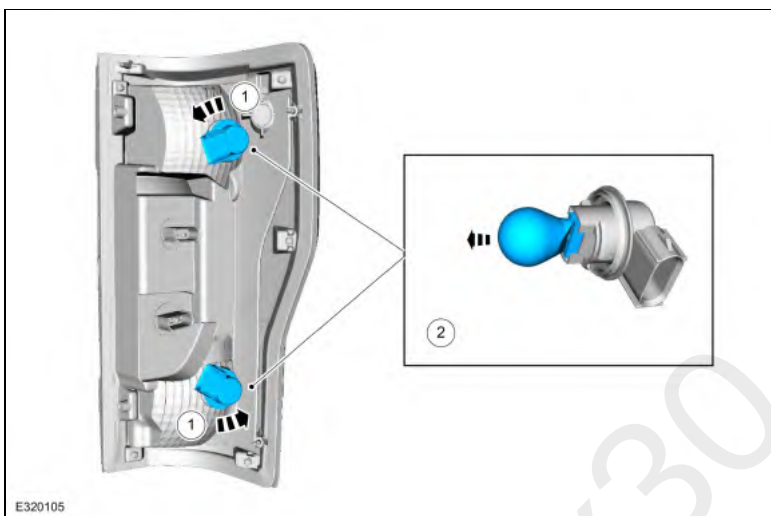


Stoplamp bulbs - vehicles with frame mounted rear lamps

3. Remove the screws and the rear lamp assembly lens.

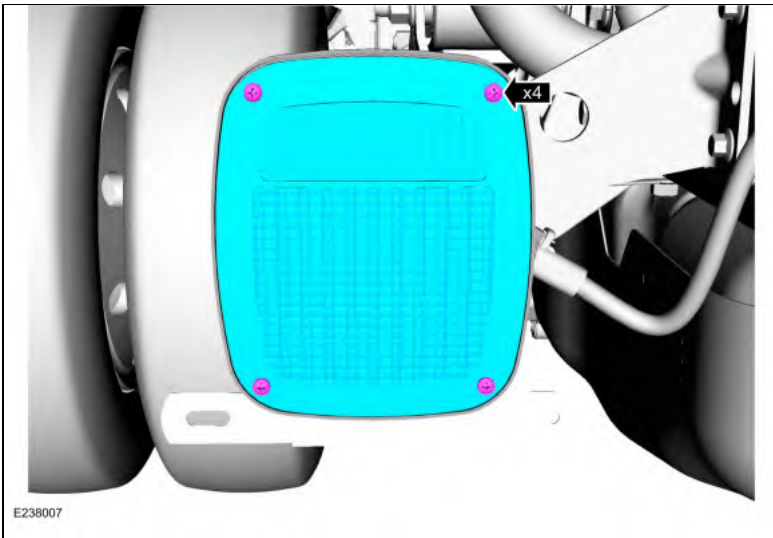


4. Remove the stoplamp bulbs.

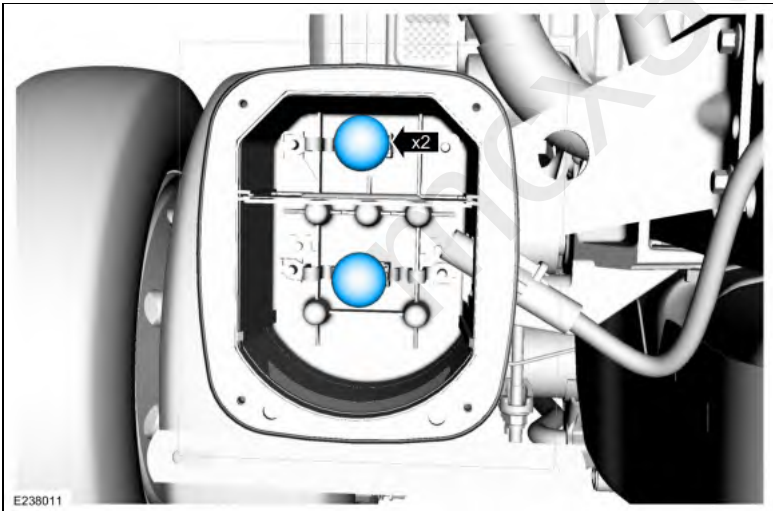

Turn signal lamp bulb - vehicles without side obstacle detection

5. Remove the turn signal lamp bulb.
 1. Turn the turn signal lamp bulb holder counterclockwise and remove the bulb holder.
 2. Remove the turn signal lamp bulb from the bulb holder.

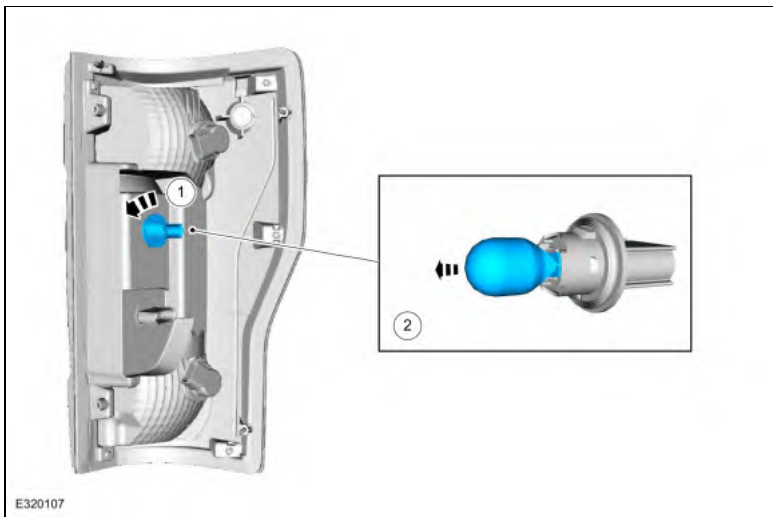


Turn signal lamp bulb - vehicles with side obstacle detection

6. Remove the screws and position aside the obstacle detection module assembly plate.



7. **NOTE:** The side of the rear lamp assembly is removed for clarity.

Turn the turn signal lamp bulb holder counterclockwise and remove the bulb holder from the rear lamp assembly.

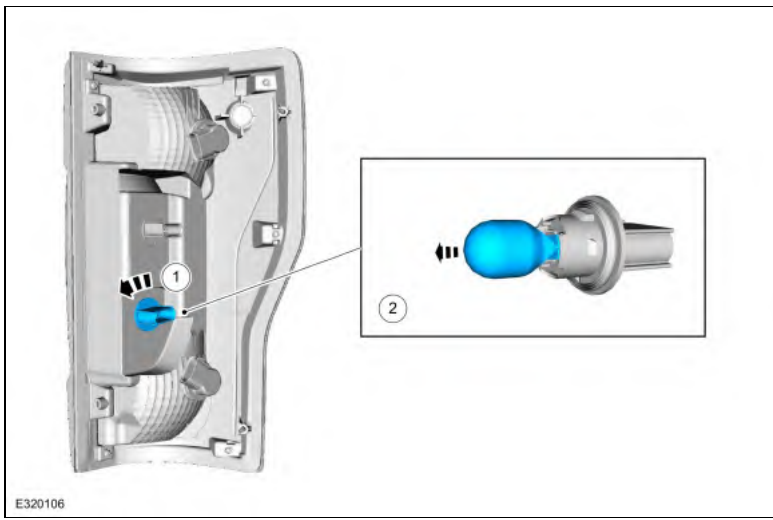

Installation

1. To install, reverse the removal procedure.

mcx30.com