


Spot Lamp Control Module

Removal

1. Remove the spot lamp control module.
 1. Release the push pin and position the spot lamp control module aside.
 2. Disconnect the spot lamp control module electrical connectors.

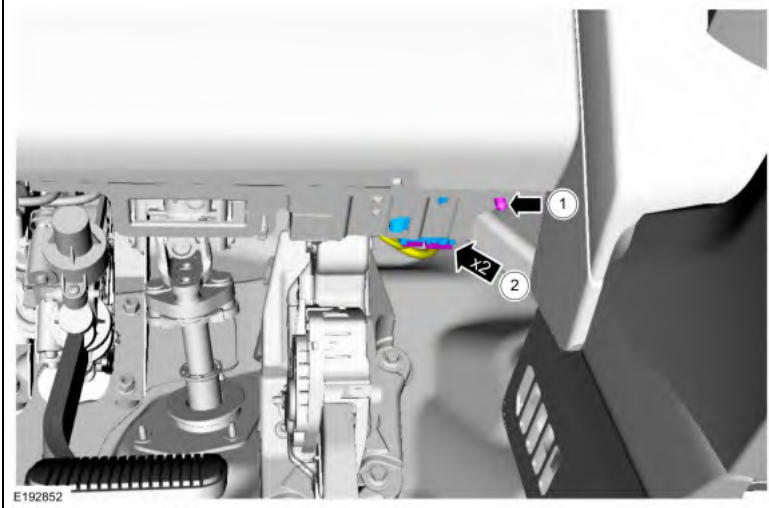

Installation

1. To install, reverse the removal procedure.