



Spot Lamp Switch

Removal

1. Remove the LH instrument panel vent.
 1. Position the LH instrument panel vent forward.
 2. Disconnect the LH instrument panel vent electrical connector.

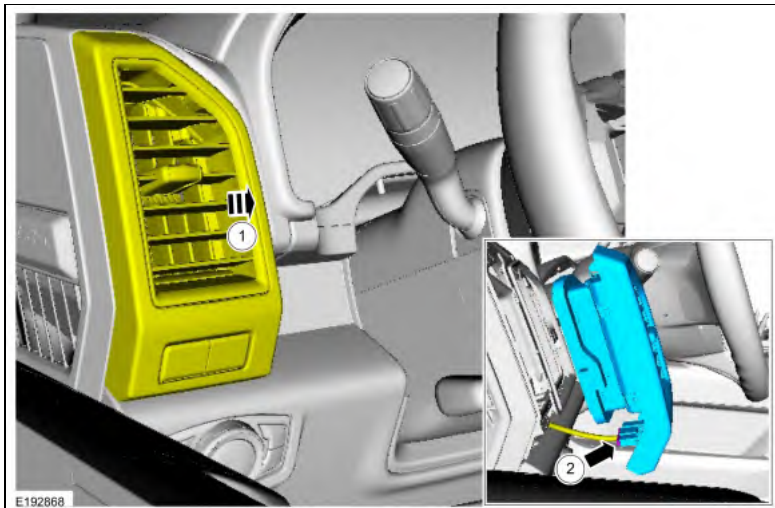

2. Release the locking tabs and remove the spot lamp switch.

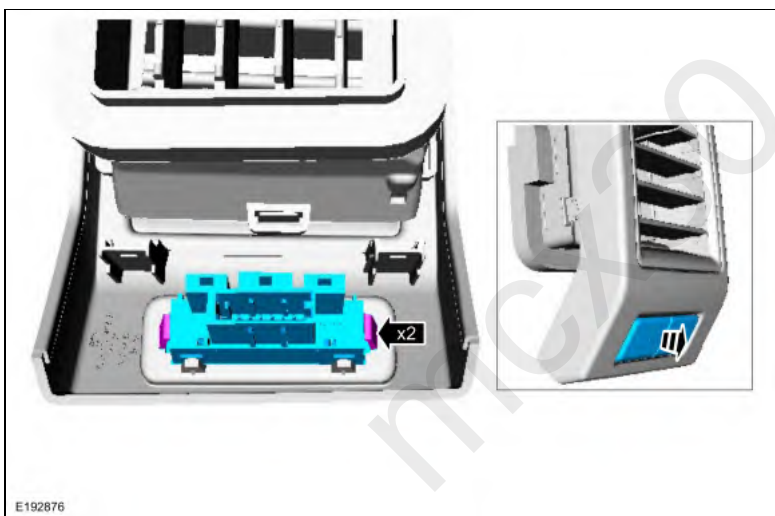

Installation

1. To install, reverse the removal procedure.