
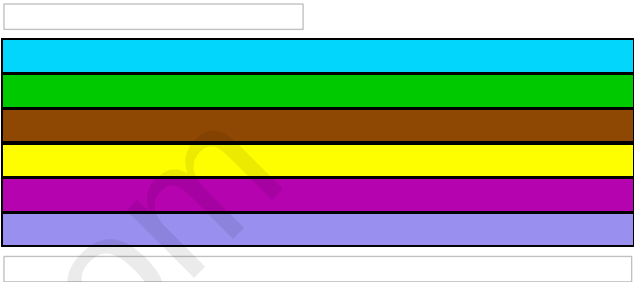


Stoplamp Switch


Removal

NOTICE: Do not press or pull on brake pedal when installing or removing the stoplamp switch otherwise misadjustment or damage to the stoplamp switch can occur.

1. Disconnect the stoplamp switch electrical connetor.

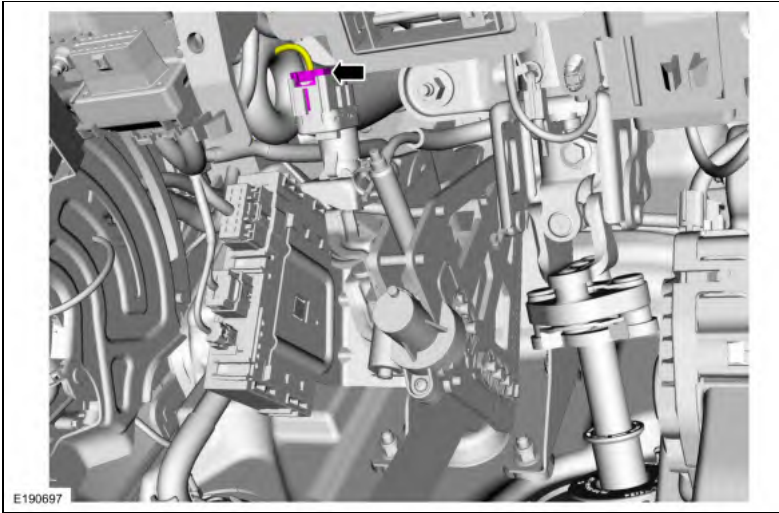

2. Rotate the switch 1/4 turn clockwise and remove the stoplamp switch.

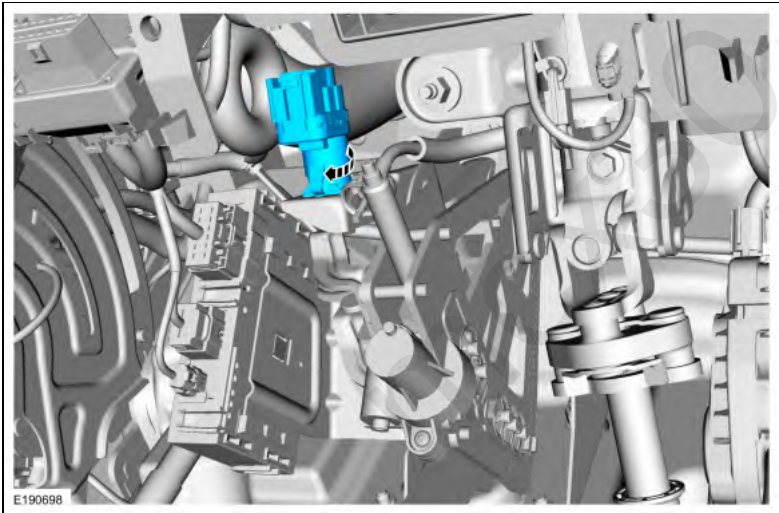

Installation

1. To install, reverse the removal procedure.