


Front Driveshaft


Removal

NOTE: Removal steps may contain installation instructions.


1. With the vehicle in NEUTRAL, position the vehicle on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove and discard the front driveshaft U-joint to pinion flange retaining strap bolts and retaining straps.
Torque: 26 lb.ft (35 Nm)

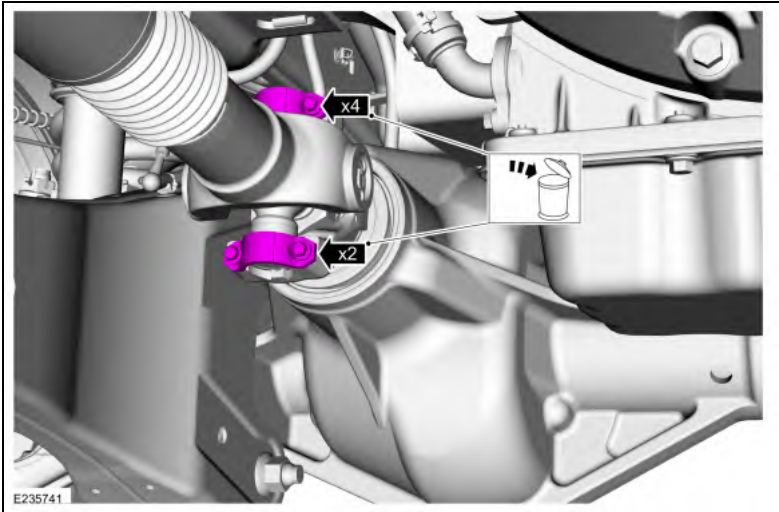


3. Index-mark the front driveshaft U-joint to the pinion flange.

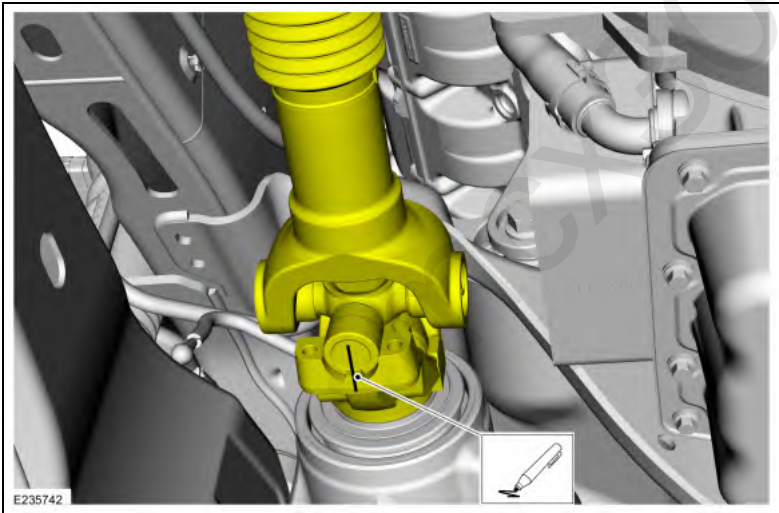

4. Remove the transfer case shield and bolts.
Torque: 46 lb.ft (63 Nm)

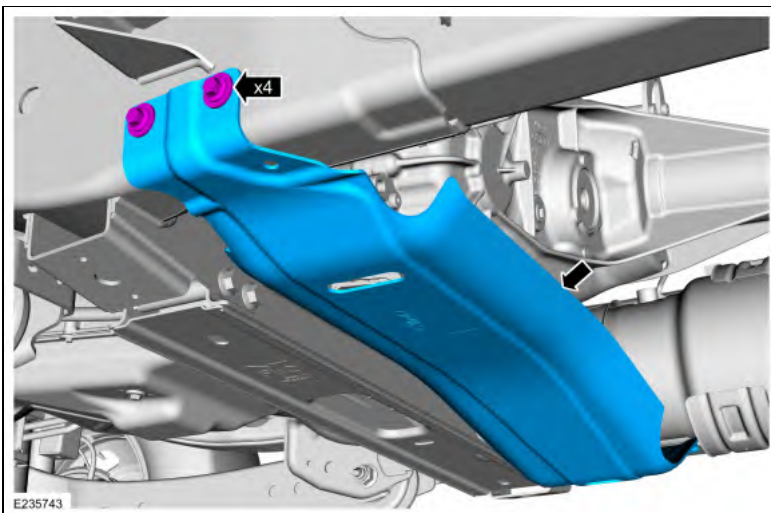

5. Remove the front driveshaft.
 1. Index-mark the front driveshaft CV joint-to-transfer case flange.
 2. Remove and discard the front driveshaft CV joint-to-transfer case flange bolts.
Torque: 92 lb.ft (125 Nm)
 3. Remove the front driveshaft.

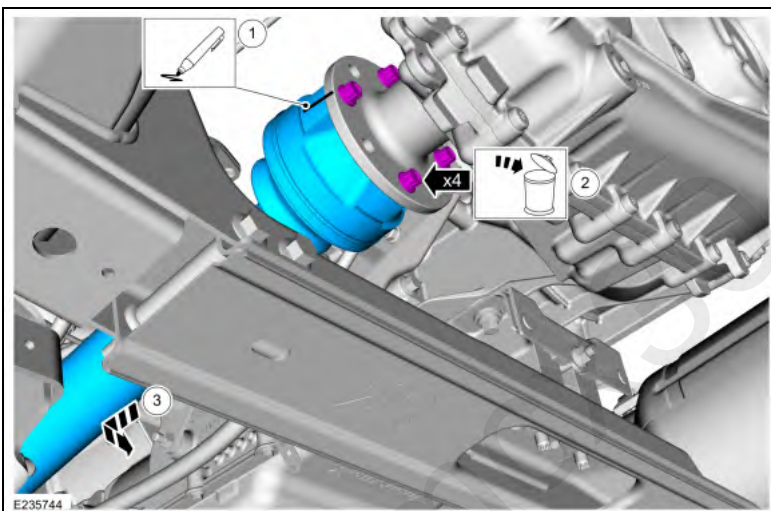

Installation

1. To install, reverse the removal procedure.