


Intrusion Sensor


Removal

1. Remove the overhead console.
Refer to: Overhead Console (501-12 Instrument Panel and Console, Removal and Installation).
2. Detach the intrusion sensor wires from the retainers.

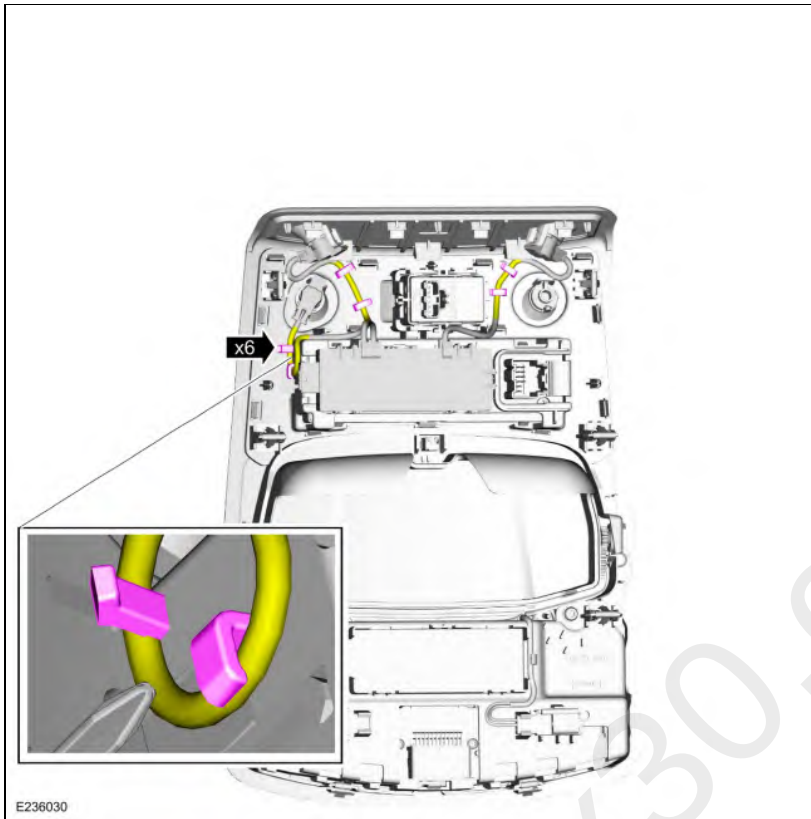

3. Release the tabs and remove the intrusion sensor assembly.



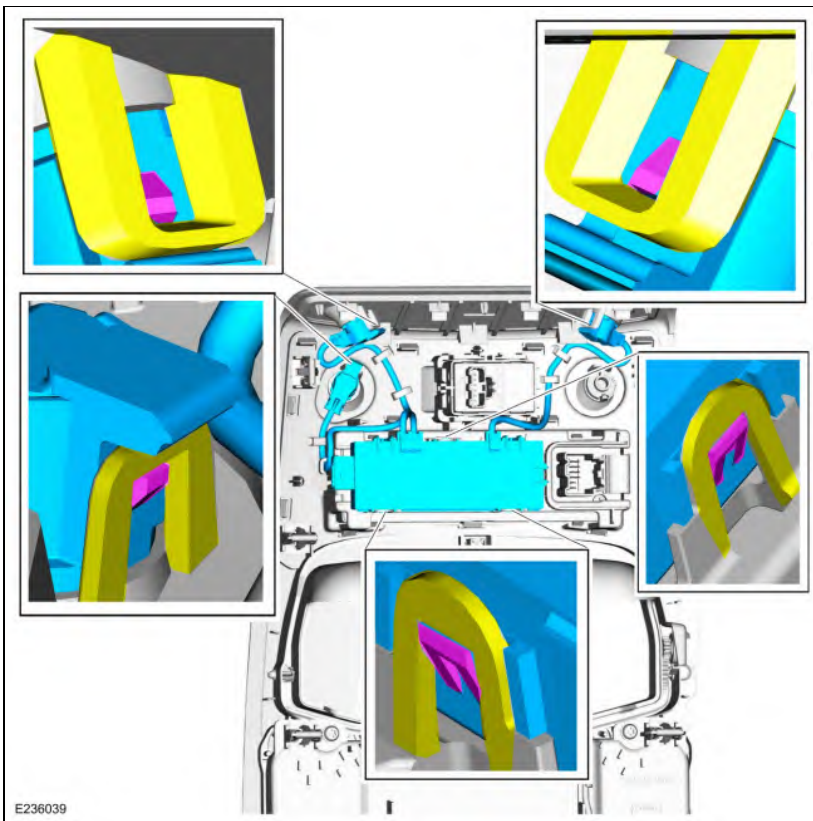

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** This step is only necessary when installing a new component.

Using a diagnostic scan tool, carry out the LIN New Module Initialization (Toolbox>Electrical>Service Functions> LIN New Module Initialization).

3. **NOTE:** This step is only necessary when installing a new component.

Carry out the BCM self-test. Clear the Diagnostic Trouble Codes (DTCs) and then retrieve the Diagnostic Trouble Codes (DTCs) from the BCM to confirm all Diagnostic Trouble Codes (DTCs) have been cleared.