


Special Tool(s) / General Equipment

DISASSEMBLY

Center bearings with a slip yoke


- ### Center bearings with a U-joint flange

3. Separate the driveshaft center bearing flange and slip yoke.
 1. Index mark the center bearing flange and driveshaft slip yoke.
 2. Remove and discard the U-joint strap bolts and straps
 3. Separate the slip yoke from the center bearing flange.


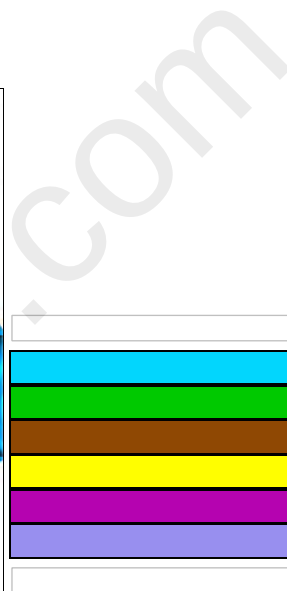


4. Remove the center bearing U-joint flange nut.
Torque: 425 lb.ft (576 Nm)

A horizontal bar chart consisting of six equally long bars stacked vertically. The bars are colored cyan, green, brown, yellow, purple, and light blue from top to bottom. Each bar has a thin black outline.

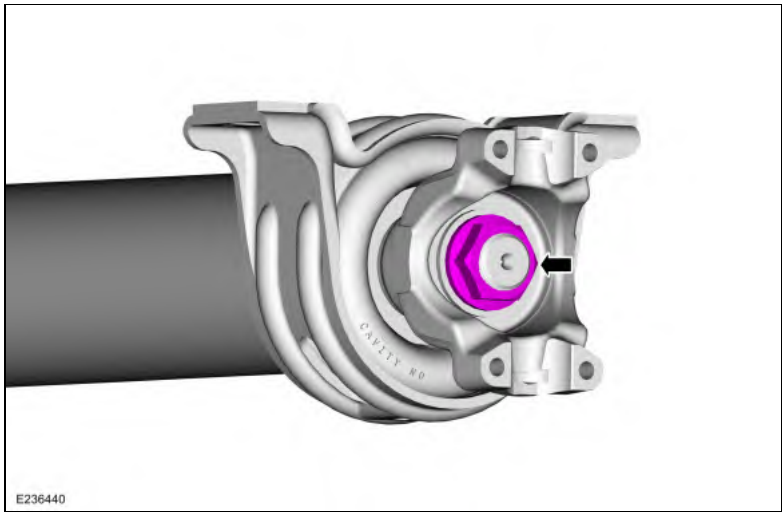


 5. Remove the center bearing U-joint flange and washer.

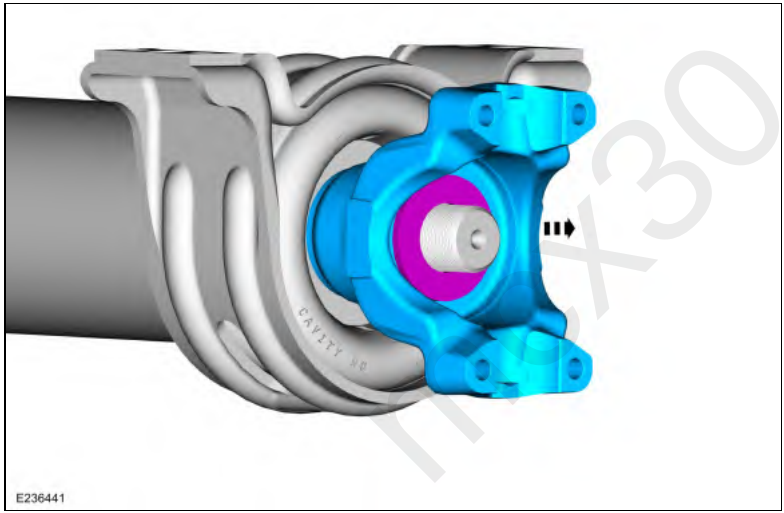


All vehicles

- 6. Remove the center bearing.
Use the General Equipment: Hydraulic Press

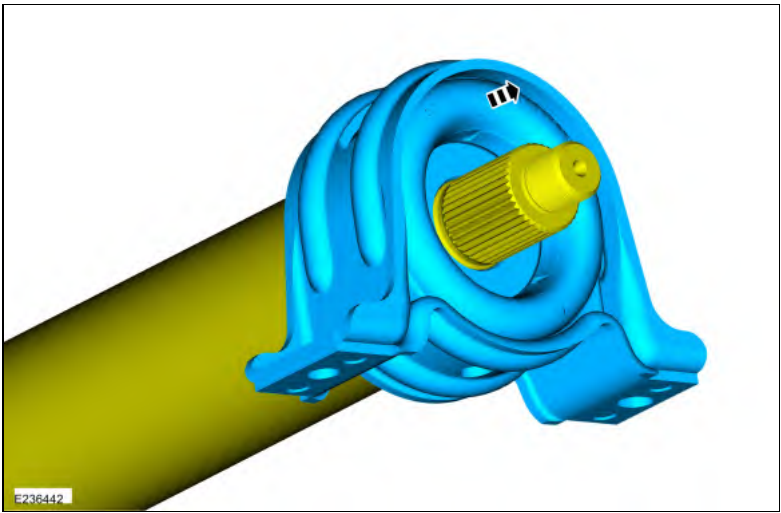

7. Clean the center bearing mating surface.

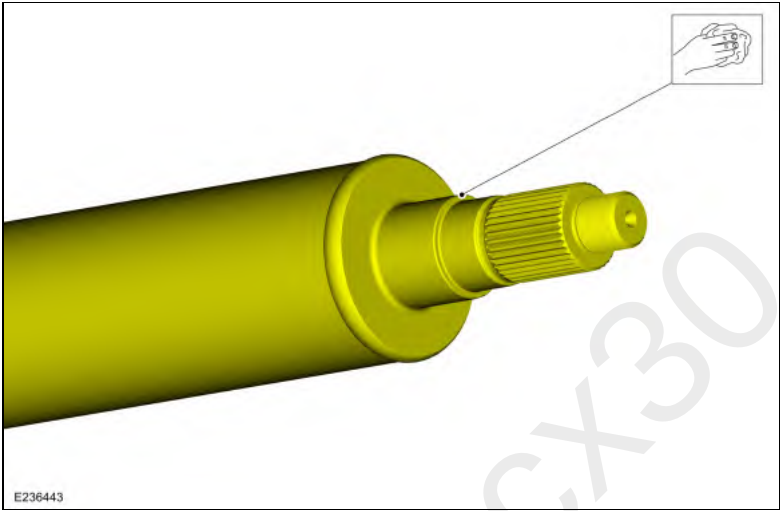

ASSEMBLY

- 1. To assemble, reverse the disassembly procedure.