

Driveshaft Slip Yoke

Special Tool(s) / General Equipment


	205-D067 (D87P-1098-A) Pliers, Boot Clamp
--	--

Materials

Name	Specification
Motorcraft® Premium Long-Life Grease XG-1-E1	ESA-M1C75-B



DISASSEMBLY

1. Remove the driveshaft assembly.
Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).
2. Separate the slip yoke.
 1. Index mark the slip yoke.
 2. Cut and discard the clamps.
 3. Separate the slip yoke from the stub shaft and discard the boot.


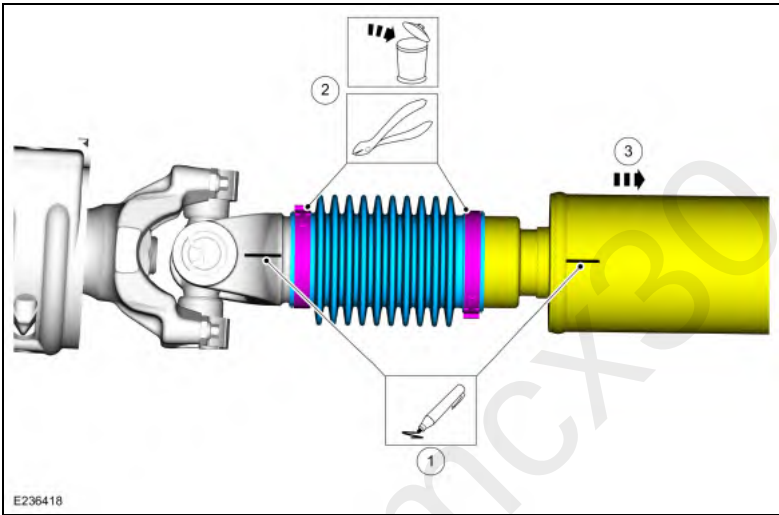


ASSEMBLY

 
1. Clean and lubricate the slip yoke splines.
Material: Motorcraft® Premium Long-Life Grease / XG-1-E1 (ESA-M1C75-B)

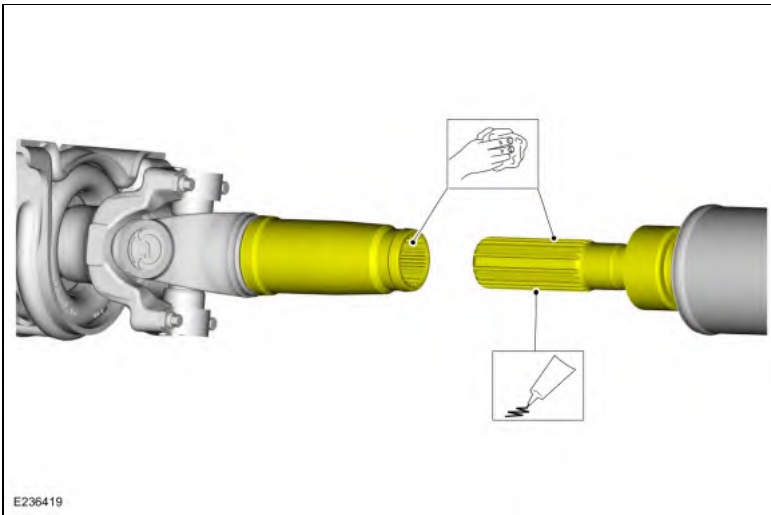

2. Align the index marks and assemble the slip yoke.

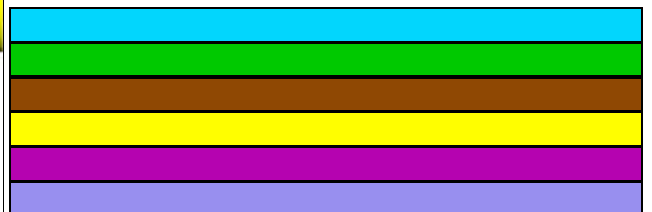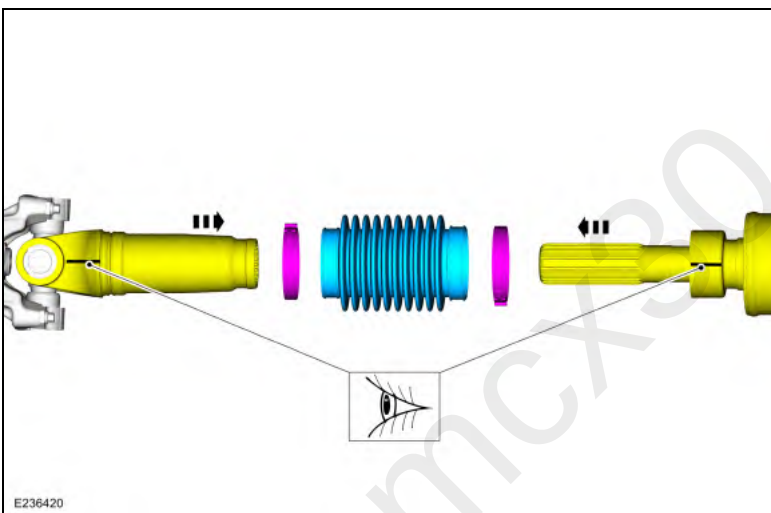

3. Tighten the clamps
Use Special Service Tool: 205-D067 (D87P-1098-A) Pliers, Boot Clamp.

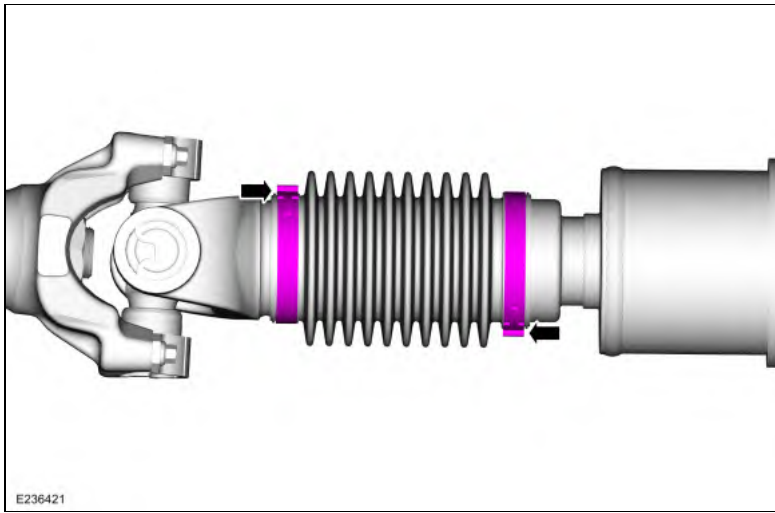

4. Install the driveshaft assembly.
Refer to: Rear Driveshaft (205-01 Driveshaft, Removal and Installation).

mcx30.com