


Side Obstacle Detection Control Module

Removal


1. **NOTE:** If installing a new side obstacle detection (SOD) control module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new SOD control module after installation.

Using a diagnostic scan tool, begin the PMI process for the side obstacle detection (SOD) control module following the on-screen instructions.

2. Remove the rear lamp assembly.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting, Removal and Installation).
3. Remove the screws and the side obstacle detection (SOD) control module assembly.

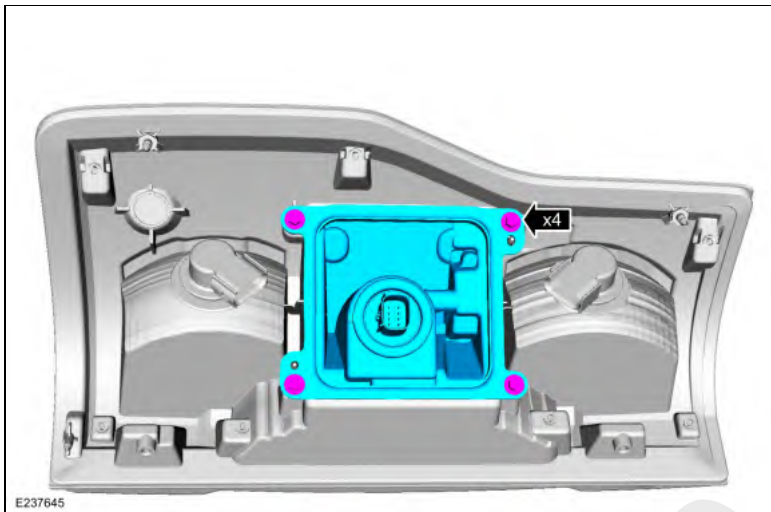

4. Remove the screws, disconnect the electrical connector and remove the side obstacle detection (SOD) control module.

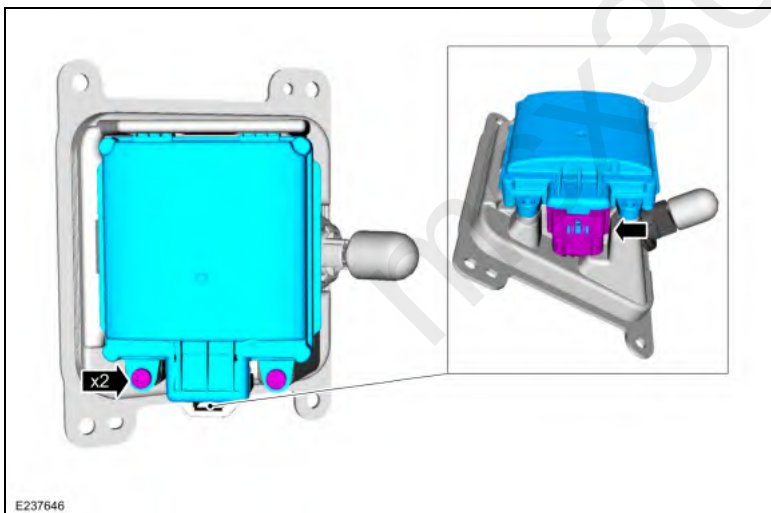

Installation

1. To install, reverse the removal procedure
2. **NOTE:** This step is only necessary when installing a new component.

Using a diagnostic scan tool, complete the PMI process for the side obstacle detection (SOD) control module following the on-screen instructions.

