


Body Control Module (BCM) - Component Location

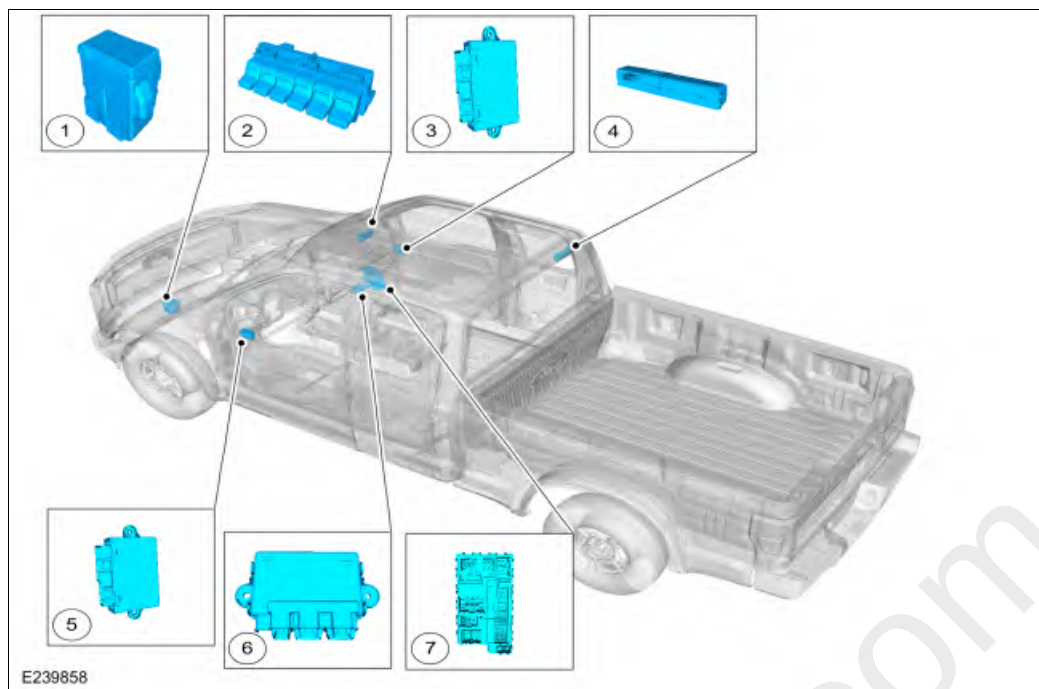

Item	Description
1	Upfitter relay box
2	Auxiliary (upfitter) Switch Assembly (Optional)
3	PDM
4	RTM
5	DDM
6	GFM2 (UIM (User interface module) Optional)
7	BCM