


Auxiliary Relay Box

Removal

NOTE: Located on LH side of engine compartment.

1.
 1. Disconnect the electrical connector.
 2. Release tabs and lift upwards to remove.

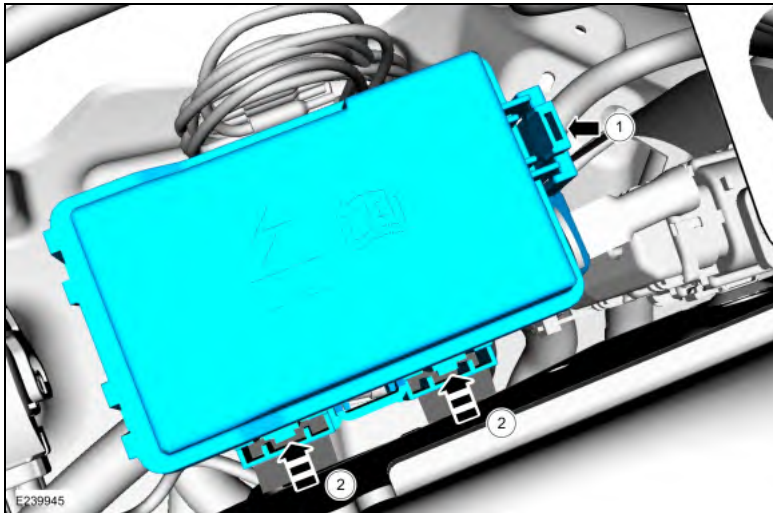

Installation

1. To install, reverse the removal procedure.