



Auxiliary Switches

Removal

1. Remove the overhead console.
Refer to: Overhead Console (501-12 Instrument Panel and Console, Removal and Installation).
2. Release the tabs, disconnect the lights and remove the trim panel.

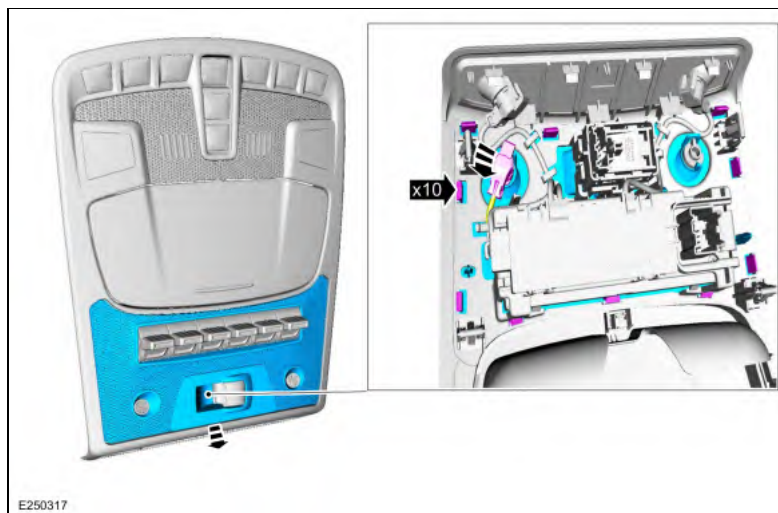

3.
 1. **NOTE:** On both sides.
Press the retaining tabs.
 2. Push downward to remove the switches.

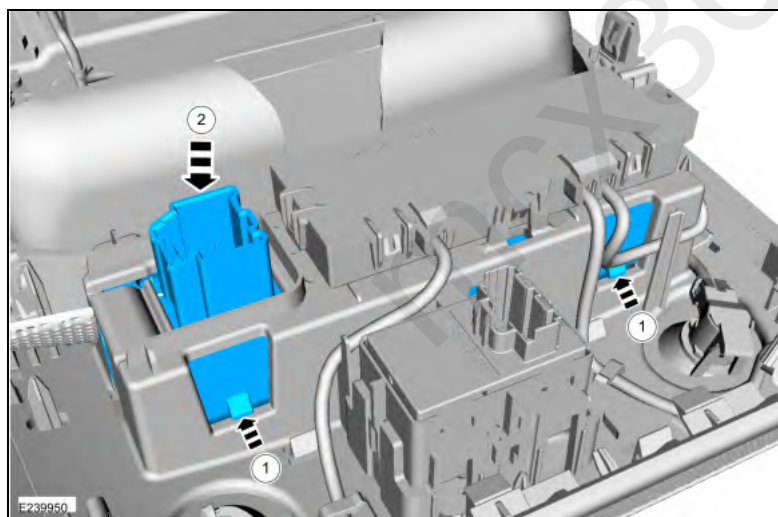

Installation

1. To install, reverse the removal procedure.

