


Generic Function Module 2 (GFM2)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Located on RH lower instrument panel.

Release the retainers and remove the insulation panel.

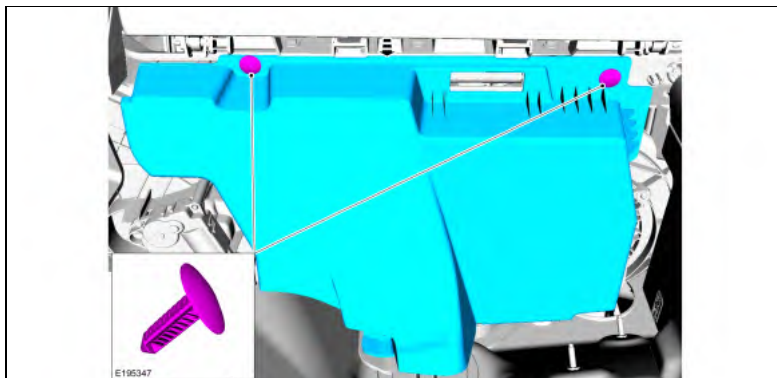

2. Remove the bolts and the GFM2 module.
 - Disconnect the electrical connector.

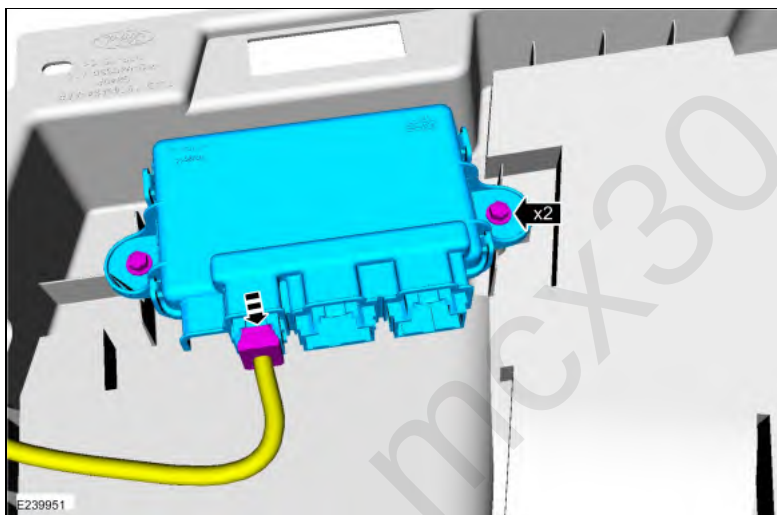

Installation

1. To install, reverse the removal procedure.