


Passenger Door Module (PDM)

Removal

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the diagnostic scan tool prior to removing the module. This information must be downloaded into the new module after installation.

Using a diagnostic scan tool, begin the PMI process for the PDM following the on-screen instructions.

2. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
3.
 1. Disconnect the electrical connectors.
 2. Remove the PDM by lifting upwards.

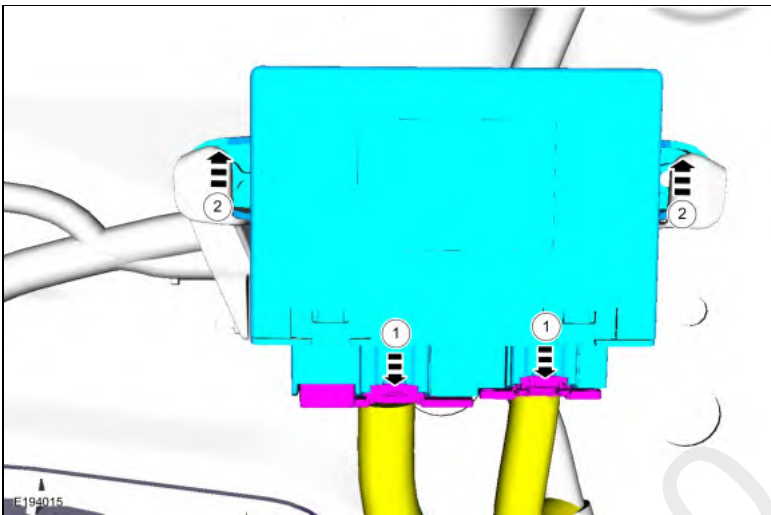

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI process for the DDM PDM following the on-screen instructions.
3. If installing a new module, carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).