


Cowl Panel Grille

Removal


1. Remove the wiper pivot arm.
Refer to: Windshield Wiper Pivot Arm (501-16 Wipers and Washers, Removal and Installation).

RH side and LH side

2. Lift the cowl trim panel upward to release the retainers.

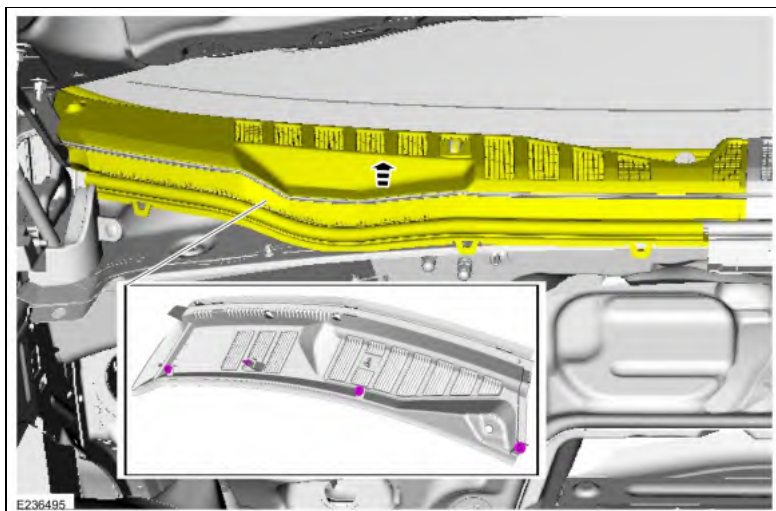


3. Disconnect the windshield washer tube and remove the cowl panel grille.

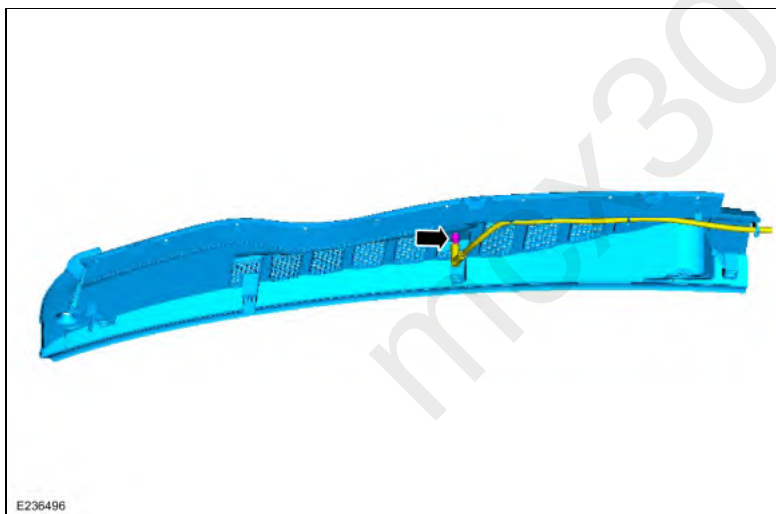


LH side

4. Lift the cowl trim panel upward to release the retainers.

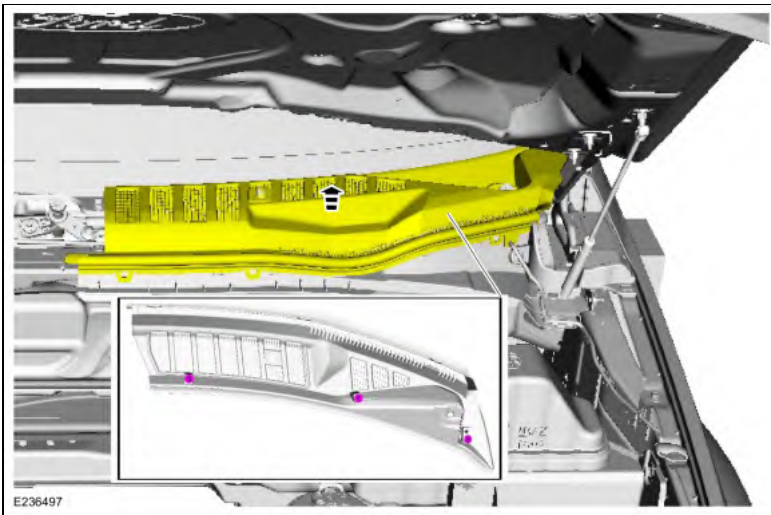

5. Disconnect the windshield washer tube and remove the cowl panel grille.

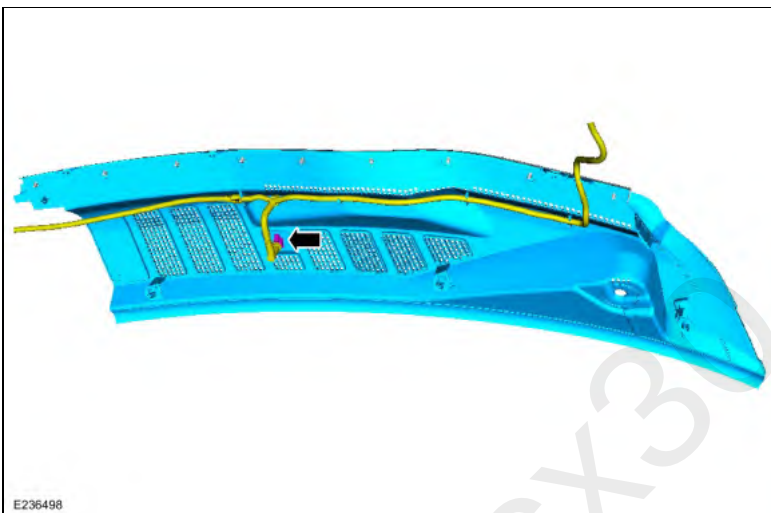

Installation

1. To install, reverse the removal procedure.