

Front Door - Crew Cab/Regular Cab

Special Tool(s) / General Equipment


Door Lift

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Open the door.

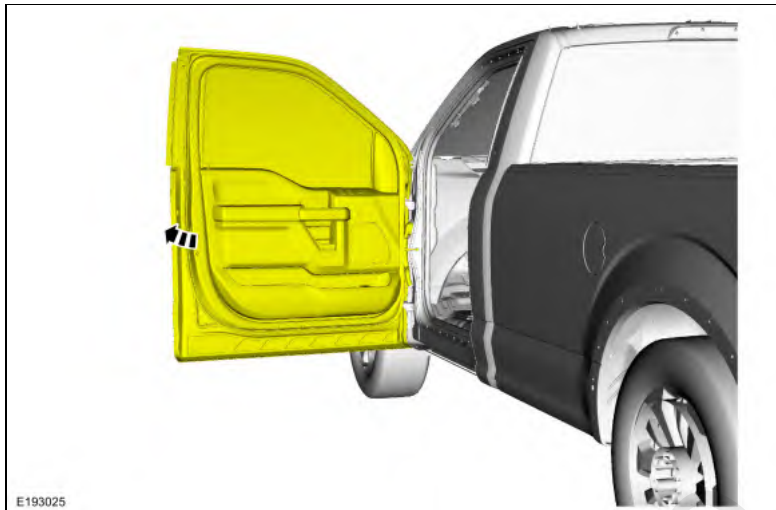


2. Remove the check arm bolt.
Torque: 17 lb.ft (22.5 Nm)

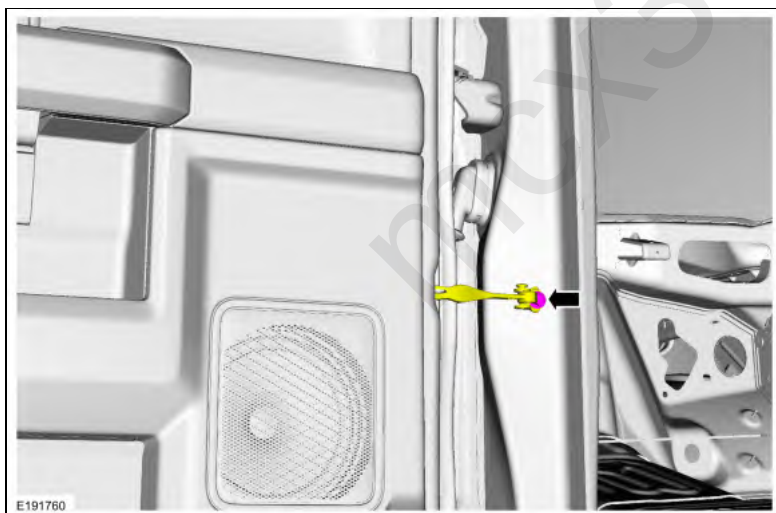


3. Disconnect the front door electrical connector.

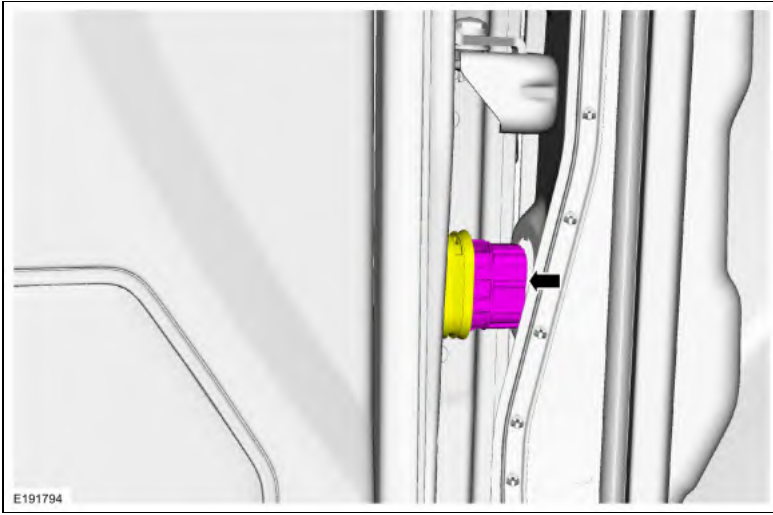

4. Remove the door hinge pivot bolts.
Use the General Equipment: Door Lift
Torque: 22 lb.ft (30 Nm)

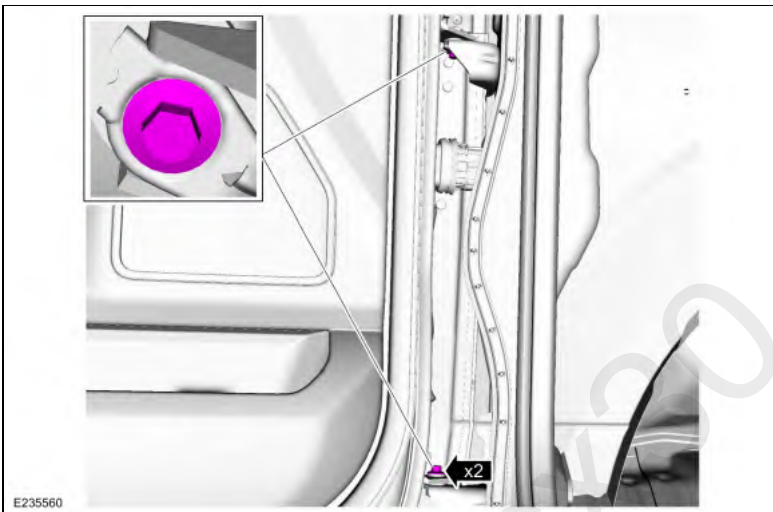

5. **NOTE:** *Regular cab shown, Crew Cab similar.*
Remove the door.

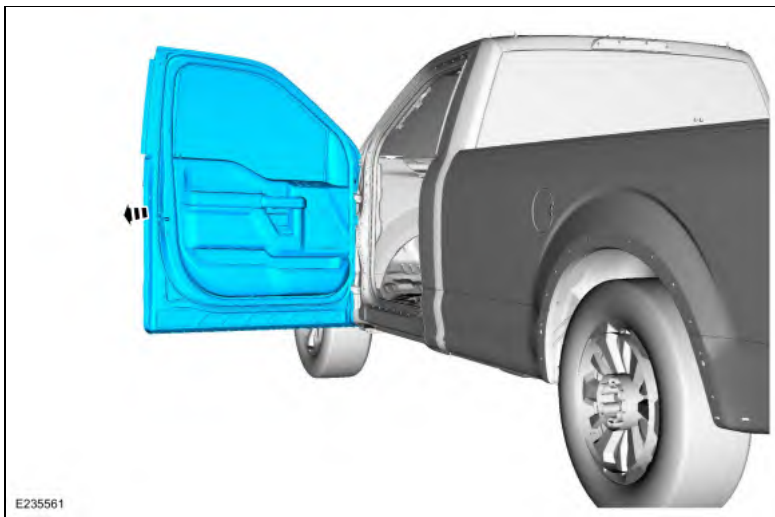

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Check the door-to-body alignment. Align the door as necessary.

Refer to: Front Door Alignment - Crew Cab/Regular Cab (501-03 Body Closures, General Procedures).