

## Front Door - SuperCab

### Special Tool(s) / General Equipment


Door Lift

### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** LH shown, RH similar.


1. Open the door.

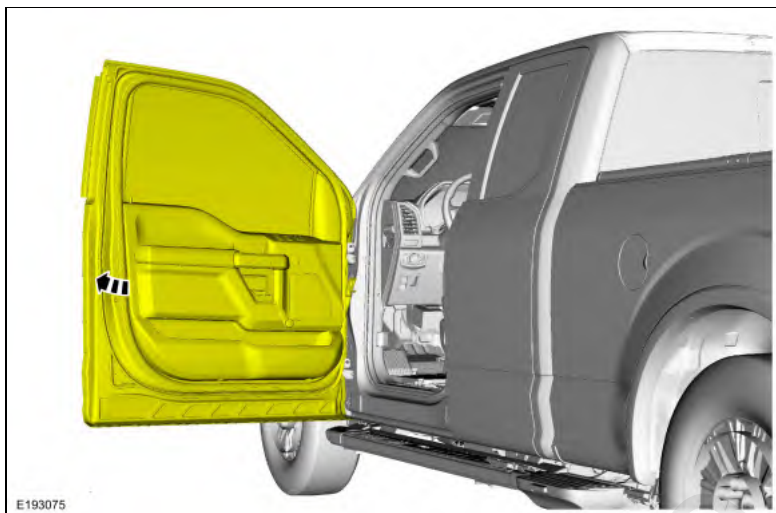

2. Remove the check arm bolt.  
*Torque: 17 lb.ft (22.5 Nm)*

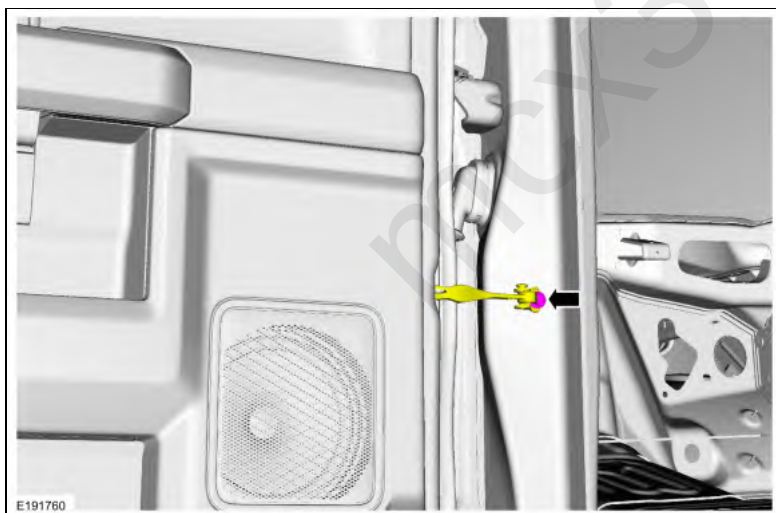


3. Disconnect the front door electrical connector.

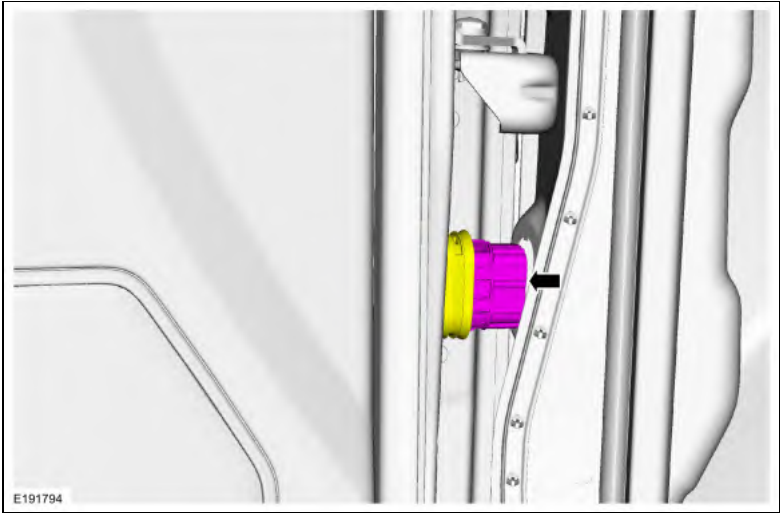


|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

4. Remove the door hinge pivot bolts.  
Use the General Equipment: Door Lift  
*Torque: 22 lb.ft (30 Nm)*

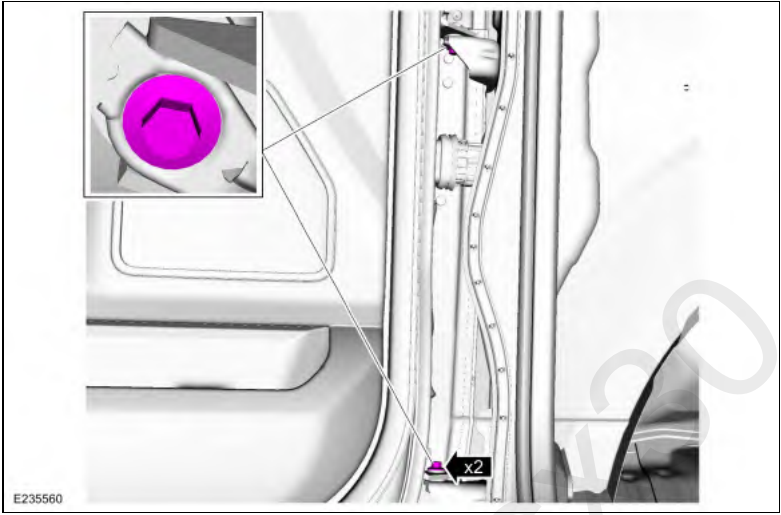

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |

5. Remove the door.

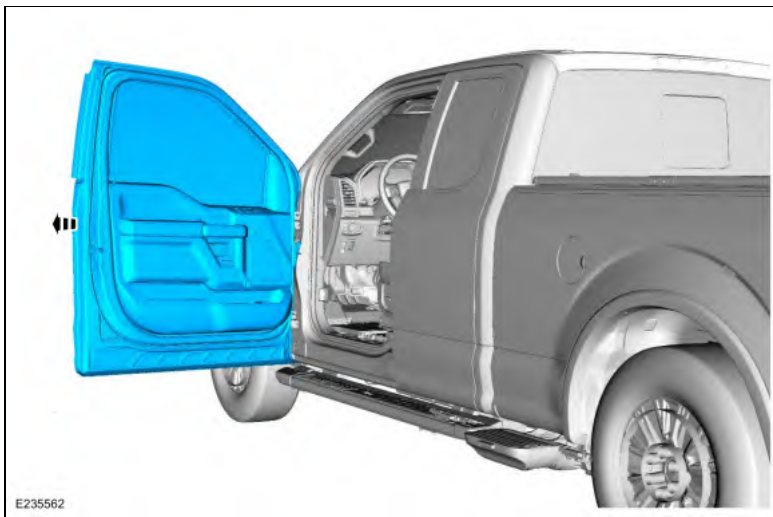

### Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary when installing a new component.*

Check the door-to-body alignment. Align the door as necessary.  
Refer to: Front Door Alignment - SuperCab (501-03 Body Closures, General Procedures).