

Front Door Check Arm


Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH shown, RH similar.

NOTE: Regular Cab shown, Crew Cab similar.


1. Open the door.

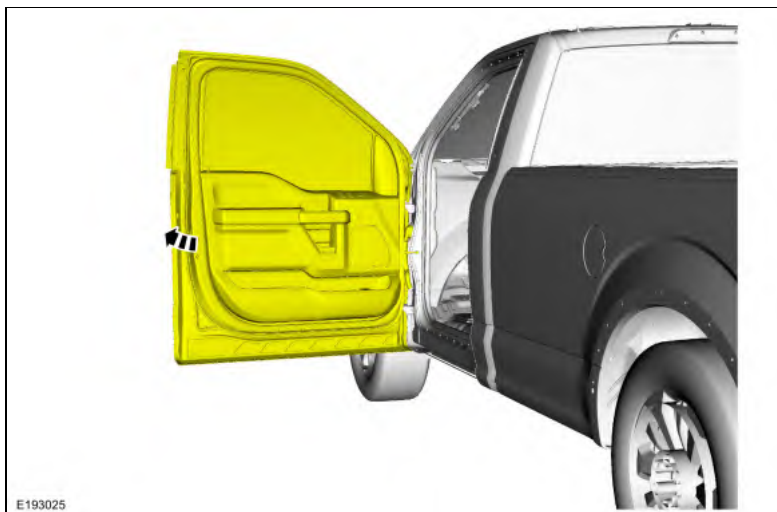

2. Remove the check arm bolt.
Torque: 17 lb.ft (22.5 Nm)

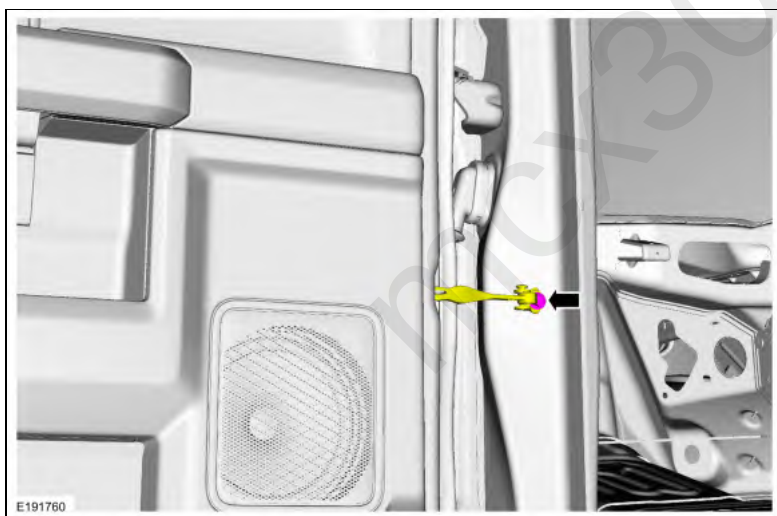


3. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
4. Remove the speaker.
 1. Disconnect the electrical connector.
 2. Remove the bolts and the speaker.

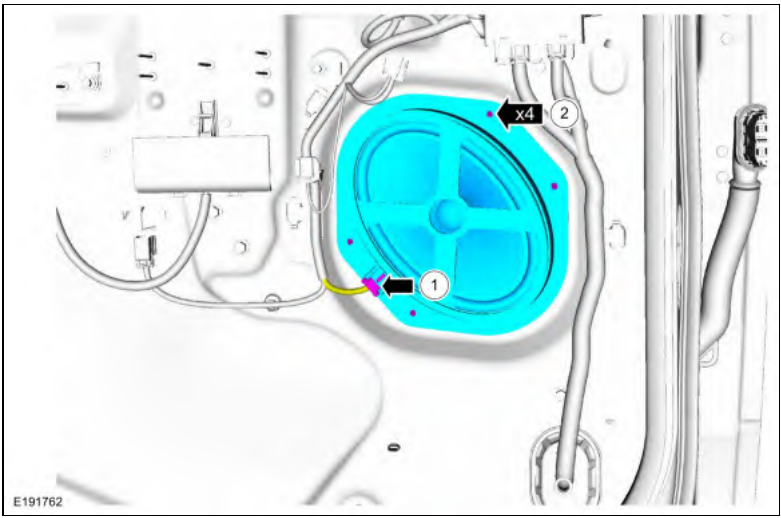

5. Remove the nuts.
Torque: 80 lb.in (9 Nm)



6. Remove the check arm assembly.

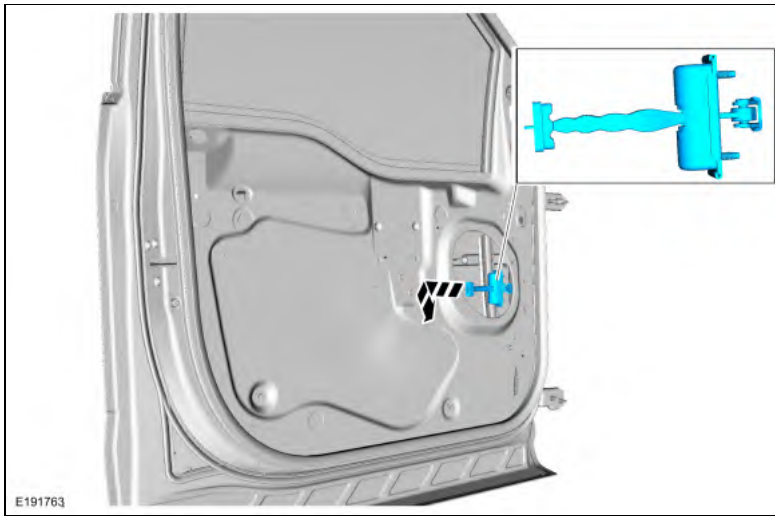

Installation

1. To install, reverse the removal procedure.