


Fuel Filler Door

Special Tool(s) / General Equipment


Flat Headed Screw Driver

Removal

1. Open the fuel filler door.

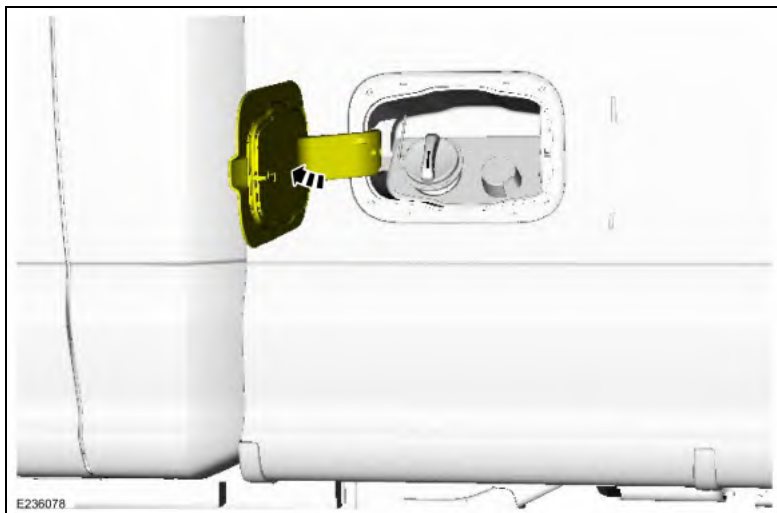

2. Pry the retaining tab back and slide the fuel filler door from the fuel filler door hinge.
Use the General Equipment: Flat Headed Screw Driver

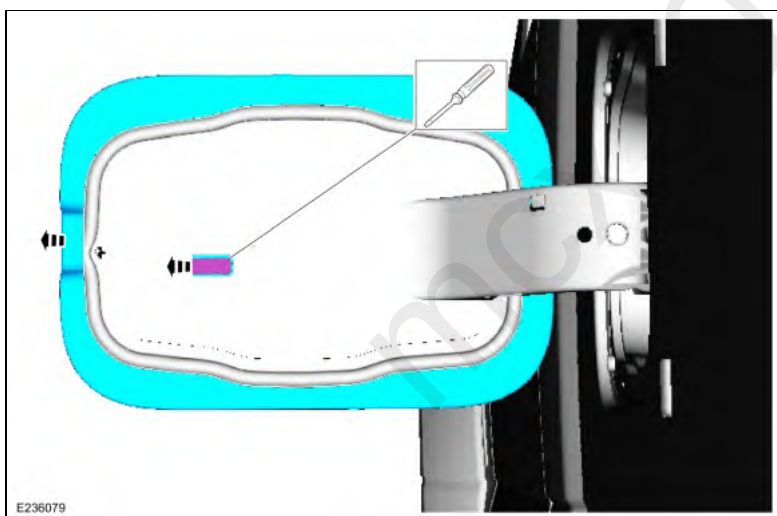

Installation

1. To install, reverse the removal procedure.

