

Fuel Filler Door Assembly

Special Tool(s) / General Equipment


|                         |
|-------------------------|
| Knife                   |
| Flat-Bladed Screwdriver |

Removal

**NOTE:** The fuel filler door assembly is damaged during the removal process and requires a new fuel filler door assembly to be installed.

**NOTE:** Vehicle with diesel fuel conditioner shown, vehicles without similar.


- 1. Remove the fuel filler door.  
Refer to: Fuel Filler Door (501-03 Body Closures, Removal and Installation).
- 2. Remove the caps.

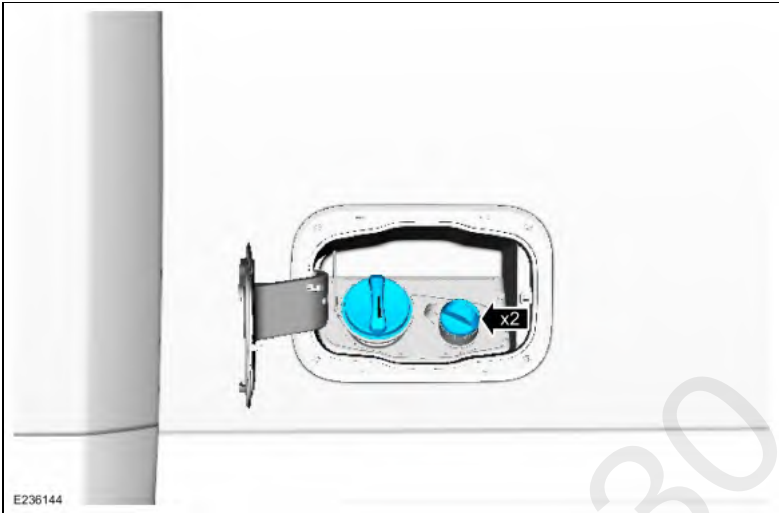


- 3. Remove the fuel filler door opening shield.




- 4. Slice the holes in the indicated areas.  
Use the General Equipment: Knife

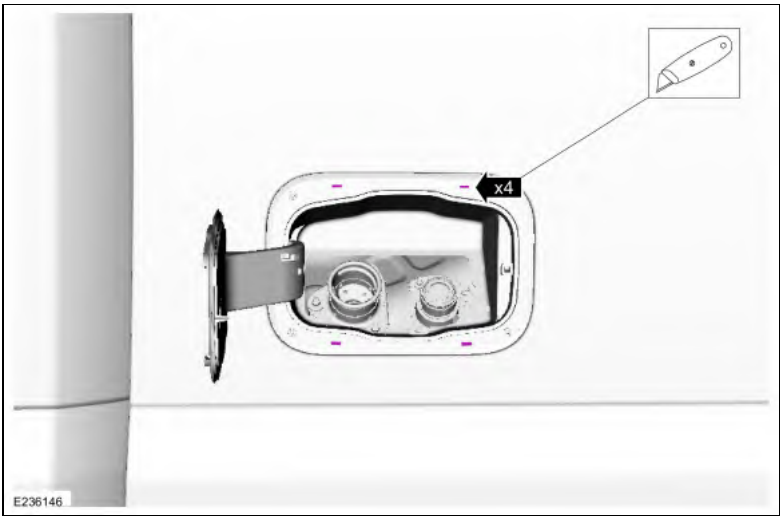

5. **NOTE:** Clearance is limited. When all four clips release, the housing can be rotated.  
Release the clips while pulling the fuel filler door housing away from the vehicle.  
Use the General Equipment: Flat-Bladed Screwdriver

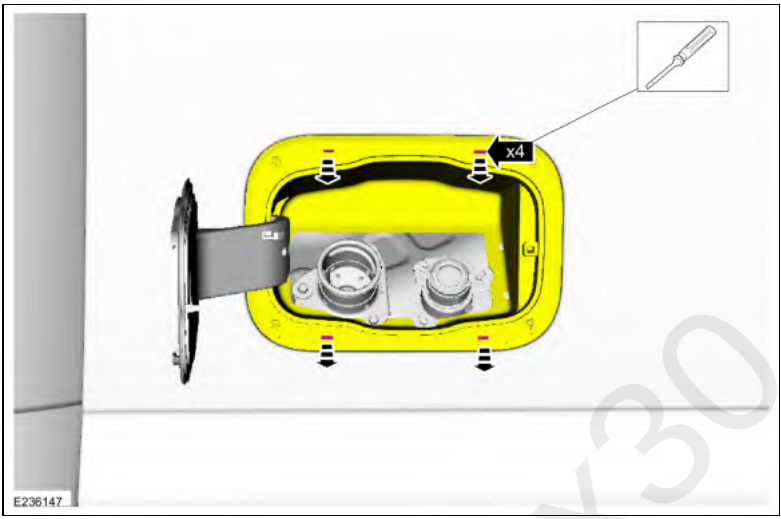

6. Pull the fuel filler door assembly away from the vehicle and remove.

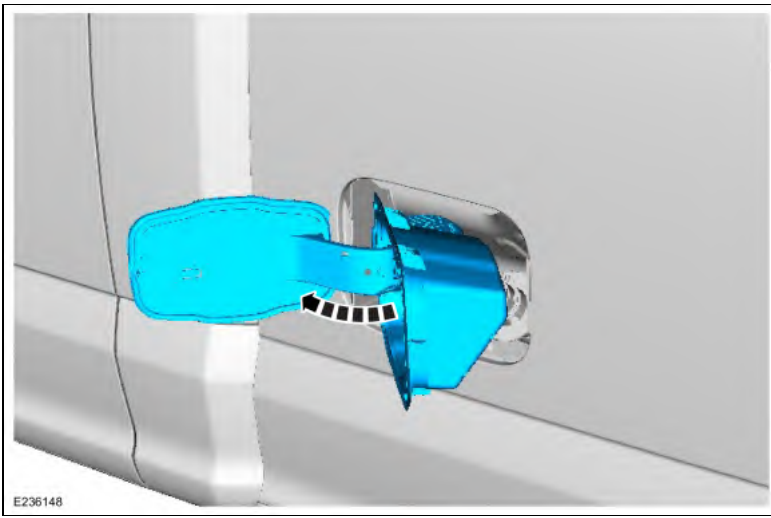

#### Installation

1. To install, reverse the removal procedure.
-